

Liebert® MC™

User Manual, 60Hz Air-Cooled Microchannel Condensers - Premium/EC Fan



TABLE OF CONTENTS

IMPORTANT SAFETY GUIDELINES	1
LIEBERT MC NOMENCLATURE	3
1.0 INTRODUCTION	4
1.1 Product Description and Features	4
1.2 Control, Fan Types and Features	4
1.2.1 Premium Efficiency Control/EC Fan	4
1.3 Liebert Lee-Temp™ Refrigerant Control	5
1.4 Surge Protective Device	5
2.0 SITE PREPARATION	6
2.1 Site Considerations	6
2.1.1 Condenser and Options Net Weights	7
3.0 INSPECTION AND INSTALLATION	16
3.1 Equipment Inspection	16
3.1.1 Packing Material	16
3.2 Handling Unit on the Skid	17
3.3 Unit Storage	17
3.4 Unpacking the Condenser—All Unit Sizes	18
3.5 Preparing a Condenser for Moving and Installation—Units with One or Two Fans	19
3.5.1 Attaching 18" (457mm) Legs, Removing the Skid and Attaching Slings—Units with One or Two Fans	19
3.5.2 Special Considerations for 36-60" (914-1524mm) Legs	21
3.6 Mounting the Condenser	23
3.6.1 Standard Mounting Requirements	23
3.6.2 Seismic-Certified Mounting Requirements	24
4.0 ELECTRICAL CONNECTIONS	25
4.1 Line Voltage Wiring	25
4.1.1 Wye- vs. Delta-Connected Power Supply	27
4.2 Low-Voltage Control Wiring—CANbus Communication and Interlock Connections	28
4.2.1 Electrical Field Connection Descriptions	35
5.0 PIPING	38
5.1 Piping Guidelines	38
5.2 Field Piping Guidelines	43
5.2.1 Field Piping Guidelines for a Liebert DX System and Liebert MC Condenser	44
5.2.2 Field Piping Guidelines for a Liebert DSE and Liebert Premium MC Condenser	48
5.3 Refrigerant Planning Values	53
5.4 Equipment Application Guidelines	54
5.5 Refrigerant Oil Addition Procedures	54
5.6 System Dehydration/Leak Test	54

5.7	System Charging with Liebert MC	54
5.7.1	Liebert MC Charging, Units with Liebert Lee-Temp™ Receivers	54
5.7.2	Liebert MC Condenser Charging with Liebert DSE™ Receivers.	54
5.7.3	Liebert MC Charging, Premium Efficiency Control, Units without Receivers.	55
6.0	CHECKLIST FOR COMPLETED INSTALLATION	58
6.1	Moving and Placing Equipment	58
6.2	Electrical	58
6.3	Piping	58
6.4	Other	58
7.0	INITIAL STARTUP CHECKS AND COMMISSIONING	59
7.1	Startup Checklist	59
7.2	Initial Startup.	59
8.0	CONTROL OPERATION	60
8.1	Premium Efficiency Control Board and Interface	60
8.1.1	Initial Screen Upon Power-On.	61
8.1.2	Main Menu Description	61
8.1.3	Analog Signals Menu Description	62
8.2	Premium Efficiency Condenser Alarm Codes	63
8.2.1	Active Alarms Menu Description.	63
8.2.2	History Alarms Menu Description.	64
9.0	LIEBERT MC SEISMIC APPLICATION—OPTIONAL UNIT CONFIGURATION.	67
9.1	Seismic Anchoring Considerations	67
9.2	Seismic piping considerations	72
9.3	Seismic wiring considerations	72
10.0	SYSTEM MAINTENANCE	73
10.1	General Procedures	73
10.2	Condenser Cleaning	73
10.2.1	When to Clean the Condenser Coil	74
10.2.2	What to Use to Clean the Condenser Coil.	74
10.2.3	How to Clean the Condenser Coil	74
10.3	Fan Replacement	75
10.4	Premium Efficiency Control Board Replacement.	82
10.4.1	Replacement Preparation.	82
10.4.2	Installation	83
10.4.3	Preventive Maintenance Inspection Checklist	84
11.0	TROUBLESHOOTING	87

FIGURES

Figure 1	Two-fan Liebert MC	4
Figure 2	Condenser planning dimensional data—MCS028 with and without receivers.	8
Figure 3	Condenser planning dimensions—MCS056 with and without receivers.	9
Figure 4	Condenser planning dimensions—MCM040, MCM080, MCM160 with and without receivers.	10
Figure 5	Condenser planning dimensions—MCL055, MCL110, MCL165 and MCL220 without receivers.	11
Figure 6	Cabinet and anchor dimensions—MCL055, MCL110, MCL165 and MCL220 with receivers ...	12
Figure 7	Typical footprint dimensions, all units	13
Figure 8	Liebert DSE receiver mounting—MCL165 and MCL220, single-circuit condenser, left side condenser outlet receiver	13
Figure 9	Liebert DSE receiver mounting—MCL165 and MCL220, single-circuit condenser, right side condenser outlet receiver	14
Figure 10	Liebert DSE receiver mounting—MCL110 and MCL220, dual-circuit condenser	14
Figure 11	Liebert DSE receiver mounting—MCM160 dual circuit condenser.	15
Figure 12	Equipment recommended for handling a Liebert condenser	17
Figure 13	Forklift position with one-fan or two-fan condensers	17
Figure 14	Removing protective material	18
Figure 15	Attaching legs to one-fan or two-fan condensers.	19
Figure 16	Securing slings to condensers for lifting off skid.	20
Figure 17	Remove skid, set condenser on floor	20
Figure 18	Lifting condensers with one, two, three or four fans	21
Figure 19	Recommended bolt locations	21
Figure 20	Remove bolts along the long edge of the unit	22
Figure 21	Lifting the unit for installation	23
Figure 22	Wye- vs. delta-connected power supply connection diagram	27
Figure 23	CANbus communications and interlock connections between a Liebert DSE, two Liebert MC condensers and a Liebert EconoPhase	29
Figure 24	CANbus communication and interlock connections between a Liebert DSE, one premium Liebert MC and a Liebert EconoPhase	30
Figure 25	CANbus communications and interlock connections between a Liebert DS, Liebert MC condenser.	31
Figure 26	CANbus communication and interlock connections between a Liebert CRV 600mm (24in.) and a Liebert MC premium condenser	32
Figure 27	CANbus communications and interlock connection between Liebert CRV 300 (12in.) and a Liebert MC premium condenser	33
Figure 28	CANbus communication and interlock connection between Liebert PDX™ and a Liebert MC premium condenser.	34
Figure 29	Typical connections, Premium Efficiency Control.	35
Figure 30	Piping schematic—DX systems	40
Figure 31	Piping schematic—Liebert DSE™, air-cooled DA080 and DA085 models.	41
Figure 32	Piping schematic—Liebert DSE™, air-cooled DA125, DA150 and DA165 models	42
Figure 33	Liebert MC Condenser piping—Single-circuit, 1-, 2-, 3- and 4-fan units	44
Figure 34	Condenser piping for single-circuit condensers (with Liebert Lee-Temp™)	45
Figure 35	Piping: dimensions—Dual circuit two-fan and four-fan units	46
Figure 36	Piping: Dimensions with Liebert Lee-Temp™—Dual circuit condensers	47
Figure 37	Condenser and Liebert EconoPhase™, typical unit arrangement diagram layout	48
Figure 38	Typical receiver Liebert DSE mounting, MCL165 and MCL220 single-circuit condenser, left side condenser outlet receiver	49
Figure 39	Typical receiver Liebert DSE mounting, MCL165 and MCL220 single-circuit condenser, right side condenser outlet receiver.	50

Figure 40	Typical receiver Liebert DSE mounting, MCL110 and MCL220 dual-circuit condenser, dual condenser outlet receivers	51
Figure 41	Typical receiver Liebert DSE mounting, MCM160 dual-circuit condenser, dual condenser outlet receivers	52
Figure 42	Premium efficiency fan control board	60
Figure 43	Premium Efficiency Control Interface - Human Machine Interface (HMI).	61
Figure 44	Initial controller display	61
Figure 45	Main Menu operation and structure	61
Figure 46	Analog Signals Menu	62
Figure 47	Active alarms menu	63
Figure 48	History alarms menu	64
Figure 49	Seismic anchorage data for one-fan models.	67
Figure 50	Seismic anchoring for a two-fan Liebert MC.	68
Figure 51	Seismic anchoring loads for a three-fan Liebert MC	69
Figure 52	Seismic anchorage loads for a four-fan Liebert MC	70
Figure 53	Seismic anchorage loads for 36-60" extended leg	71
Figure 54	Seismic piping and wiring considerations	72
Figure 55	EBM small and medium fan, Liebert MC series MCS/MCM	79
Figure 56	EBM large fan—Liebert MC series MCL	80
Figure 57	Ziehl-Abegg small, medium and large fan, Liebert MC series MCS, MCM and MCL	81
Figure 58	Jumper locations on Control Board	82

TABLES

Table 1	Condenser shipping weights, dimensions and volume, approximate	6
Table 2	Condenser and option net weights—Small condensers	7
Table 3	Condenser and option net weights—Medium condensers	7
Table 4	Condenser and option net weights—Large condensers	7
Table 5	Electrical data, three-phase, 60Hz condenser, premium models	26
Table 6	Electrical data, Liebert Lee-Temp [™] receiver, 60Hz	27
Table 7	Liebert MC Condenser piping sizes—Single-circuit units	44
Table 8	Condenser piping connection sizes—Single-circuit condensers with Liebert Lee-Temp	45
Table 9	Piping: dimensions—Dual-circuit, two-fan and four-fan units.	46
Table 10	Condenser piping connection sizes—Dual-circuit condensers with Liebert Lee-Temp	47
Table 11	Refrigerant required, R-407C, approximate	53
Table 12	Refrigerant required, R-410A, approximate	53
Table 13	Interconnecting piping refrigerant charge for self-contained DX units with remote condenser	54
Table 14	Target subcooling for ambient outdoor temperature	56
Table 15	Charge amounts per 100 ft. (30m) of pipe by line size	56
Table 16	Liquid pressures and temperatures.	57
Table 17	Analog signal definitions	62
Table 18	System alarm information	65
Table 19	EC Fan alarm information	66
Table 20	Seismic anchorage loads for one-fan models	67
Table 21	Seismic anchoring loads for a two-fan Liebert MC	68
Table 22	Seismic anchoring loads for a three-fan Liebert MC	69
Table 23	Seismic anchorage loads for a four-fan Liebert MC	70
Table 24	Seismic anchorage loads for 36-60" extended leg	71
Table 25	P-- menu items and definitions	77
Table 26	Troubleshooting.	87

IMPORTANT SAFETY GUIDELINES

SAVE THESE INSTRUCTIONS

This manual contains important safety instructions that should be followed during the installation and maintenance of the Liebert MC. Read this manual thoroughly before attempting to install or operate this unit.

Only qualified personnel should move, install or service this equipment.

Adhere to all warnings, cautions and installation, operating and safety instructions on the unit and in this manual. Follow all operating and user instructions.



WARNING

Risk of improper handling, installation and service. Can cause property damage, injury or death.

Only properly trained and qualified personnel should install or perform repairs or maintenance on this unit. Read all installation, operation and safety alerts and instructions and wear appropriate protective headgear, safety glasses, gloves and clothing before installing, operating or servicing this unit.



WARNING

Arc flash and electric shock hazard. Open all local and remote electric power disconnect switches, verify with a voltmeter that power is Off and wear personal protective equipment per NFPA 70E before working within the electric control enclosure. Failure to comply can cause serious injury or death.

Customer must provide earth ground to unit, per NEC, CEC and local codes, as applicable.

Before proceeding with installation, read all instructions, verify that all the parts are included and check the nameplate to be sure the voltage matches available utility power.

The Liebert iCOM[®] microprocessor does not isolate power from the unit, even in the “Unit Off” mode. Some internal components require and receive power even during the “Unit Off” mode of Liebert iCOM control.

The factory-supplied disconnect switch is inside the unit. The line side of this switch contains live high-voltage.

The only way to ensure that there is NO voltage inside the unit is to install and open a remote disconnect switch. Refer to unit electrical schematic.

Follow all local codes.



WARNING

Risk of contact with high-speed, rotating fan blades. Can cause serious personal injury or death.

Fan blades can automatically start rotating without warning at any time during a cooling cycle or after power is restored after a power failure. Open all local and remote electric power supply disconnect switches, wait 10 minutes and verify with a voltmeter that power is Off before working within the unit cabinet, removing the fan guards or servicing the fan speed control, fan blades or EC fan motors.



WARNING

Risk of electric shock. Can cause injury or death.

The fan speed control and the EC fan electrical enclosures may contain a stored electrical charge. Open all local and remote electric power disconnect switches, verify with a voltmeter that power is Off and wait 10 minutes before working within the fan speed control and the EC fan electrical enclosures.



WARNING

Risk of heavy condenser falling or tipping over. Can cause property damage, serious injury or death.

Confirm that all components of the lifting system are rated for the weight of the condenser by an OSHA Certified rating organization before attempting to lift and/or move the condenser. See **Tables 1** through **4** for the condenser weights.



CAUTION

Risk of contact with hot surfaces. Can cause injury.

Fan motors, transformers, piping and other components may become extremely hot during normal operation. Wear thermally insulated gloves and appropriate protective clothing and allow time for components to cool when working within the cabinet or electric control enclosure.



CAUTION

Risk of contact with sharp edges, splinters and exposed fasteners. Can cause personal injury.

Only properly trained and qualified personnel wearing appropriate safety headgear, gloves, shoes and glasses should attempt to move, lift, remove packaging from or prepare unit for installation.



CAUTION

Risk of explosive discharge of high-pressure gas. Can cause injury.

Relieve system pressure and verify that the indoor and outdoor units are Off before making piping connections/disconnections.

Do not exceed the design pressure rating that is marked on the nameplate.

Do not install a shutoff valve between the compressor and the field-installed pressure relief valve.

NOTICE

Risk of interference with building doorways, openings and passages. Can cause unit and/or building damage.

Refer to the installation plans and measure the unit and building opening before moving the unit to verify clearances.

NOTICE

Risk of improper storage. Can cause unit damage.

Keep unit upright and protected from contact damage.

LIEBERT MC NOMENCLATURE

Model Number – Part 1/2										Model Details											Part 2/2			
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25
M	C	M	0	4	0	E	1	A	D	0	A	0	V	U	0	0	0	0	0	0	*	*	*	*
1-2. Unit Family; MC = Microchannel Condenser										11. Coil Coating														
3. Platform Size										0 = None														
S = Small										E = E-Coat (Epoxy)														
M = Medium										12. Panel Material														
L = Large										A = Bright Aluminum														
4-6. Nominal Condenser Capacity, kW										13. Connection Pipe Unit of Measurement														
028, 056, 040, 055, 080, 110, 160, 165, 220 Example: 040 = 40kW @ 95°F(35°C) & 27°R (15°K) ITD										0 = Inches (Std. ACR Copper)														
7. Control/Fan Type										14. Legs Included														
E = Premium & EC Fan										V = 18" Tall Legs (Std.)														
8. Refrigerant Circuits/System Refrigerant type										X = 36" Tall Legs with Bracing														
1 = Single Refrigerant Circuit, R-410A										Y = 48" Tall Legs with Bracing														
2 = Dual Refrigerant Circuit, R-410A										Z = 60" Tall Legs with Bracing														
7 = Single Refrigerant Circuit, R-407C, R-22										15. Agency Certification														
8 = Dual Refrigerant Circuit, R-407C, R-22										U = CSA Listed, Marked with CSA c-us logo														
9. Power Supply										1 = IBC/OSHDP Seismic Certification														
A = 460V / 3ph/60Hz										16. Undefined - Reserved for Future Use														
Y = 208/230V/3ph/60Hz										17. Liebert Lee-Temp™ Configuration														
2 = 380/415V/3ph/60Hz										0 = No Receiver Leg/Software														
10. Packaging										1 = Liebert Lee-Temp Receiver Leg/Software														
D = Domestic, Non-Stackable (Horizontal Airflow Orientation)										2 = Liebert DSE Receiver Leg/Software														
E = Export Crating - Non-Stackable (Horizontal Airflow Orientation)										18-21. Undefined - Reserved For Future Use														
										22-25. Factory Configuration Number														

1.0 INTRODUCTION

1.1 Product Description and Features

The Liebert MC condenser is a low-profile, direct-drive propeller fan-type air-cooled unit suitable for mounting outdoors. It provides heat rejection for either one or two separate refrigeration circuits, matches the heat rejection capacity corresponding with the outdoor ambient temperature and with each corresponding compressor heat rejection requirements. Constructed with an aluminum cabinet, galvanized steel frame and microchannel coil, the unit is quiet and corrosion resistant. The condenser is quickly and easily installed, because all internal wiring is completed at the factory with only electrical connections to be made at the job site. All electrical connections and controls are enclosed in an integral weatherproof section of the condenser.

Figure 1 Two-fan Liebert MC



1.2 Control, Fan Types and Features

1.2.1 Premium Efficiency Control/EC Fan

Premium Efficiency Controls and EC fans are matched to provide superior system energy efficiency. The premium control board allows CANbus communication with the indoor unit's Liebert iCOM[®] control. This communication feature provides compressor run signals, condenser operating mode changes, condenser alarm monitoring, simplified system charging procedures and outdoor temperature monitoring. The fans are controlled by the premium control board using pressure transducer signals from the refrigerant circuit and factory programming to control the refrigerant head pressure.

The Premium Efficiency Control board on a Liebert MC with a dual refrigeration circuit adjusts the speed of fans on each circuit to match each circuit's head pressure conditions. On a Liebert MC with multiple fans and a single refrigeration circuit, the premium control adjusts the fans to the same speed to maintain head pressure. The control system provides refrigerant head pressure control for outdoor ambient temperatures as low as -30°F (-35°C), provided that the total design range (from minimum to maximum) is 125°F (70°C) or less. For traditional DX applications, Liebert Lee-Temp[™] kits are required only when the design temperature ranges exceed 125°F (70°C) for standard match-ups and 115°F (65°C) for Liebert Quiet-Line[™] match-ups.

Anti-Freezing Operation

The EC fans must be operated periodically in cold weather to reduce the possibility of lockup due to ice and snow accumulation. During periods of inactivity and outdoor temperatures below 35°F (1.6°C), the EC fans will spin for at least 30 seconds every 15 minutes at 60% of the maximum fan speed.

Fan Reversal for Cleaning

The Liebert iCOM® can be used to run the Premium EC fans in reverse to clear loose debris from the coil between scheduled coil cleanings. The fan reversal may be done manually or automatically based on a user-programmed schedule. Automatic fan reversal interval occurs when the indoor unit is Off (BMS Off, U2U network standby or Remote Shut Down [RSD]).

Low-Noise Feature

The low-noise feature allows setting the condenser fans to operate at a specified speed to reduce operating noise at certain times. Special match-ups of premium condensers are available for applications needing to meet stringent sound regulations. Lower sound levels are achieved by oversizing the condenser, which decreases the maximum airflow and sound level produced by the condenser. This feature requires special setup of the indoor unit. One or more Liebert Lee-Temp receivers are required. The premium control has gain schedules that will override the user-defined low-noise schedule to prevent a high-pressure condition from occurring.

1.3 Liebert Lee-Temp™ Refrigerant Control

The Liebert Lee-Temp head pressure control system utilizes head pressure control valve(s), extra refrigerant and insulated refrigerant receiver(s) with heater pads to assist system starting. The Liebert Lee-Temp control system also maintains proper operating head pressures in outdoor temperatures below the rating point of the Liebert MC control type. The system works by flooding the condenser coil with liquid refrigerant to a level that balances the system condensing requirements with the condenser coil surface available to reject the system heat. During the summer, the system requires the entire condenser coil surface for heat rejection and most of the refrigerant is stored in the receiver. In the winter, the same amount of heat can be rejected by only a fraction of the coil surface. As head pressure begins to fall, the control valve restricts the flow of liquid refrigerant from the condenser. This extra liquid refrigerant reduces the effective condenser surface area available for heat transfer. The head pressure control valve also bypasses hot gas into the receiver to warm the liquid and maintain liquid pressure for proper operation of the expansion valve. Liebert Lee-Temp kit is optional for condensers and is field-installed. Condenser control boards are factory-configured for Liebert Lee-Temp if they are ordered with Liebert Lee-Temp receivers. They can be field-configured if a Liebert Lee-Temp system is added later.

1.4 Surge Protective Device

An optional Surge Protective Device (SPD) can be field-wired to protect the condenser from power surges that threaten sensitive equipment. The condenser's electrical panel provides a terminal block to allow the SPD to be wired in parallel with the high-voltage power. An additional low-voltage terminal block is provided on condensers with Premium Control Boards to allow monitoring of the SPD alarm circuit.

Emerson network Power's 420™ Series surge protective device provides 50kA per mode of surge current protection. An illuminated green LED indicates the SPD is On and operating properly. An illuminated red LED indicates that the device may require replacement.

When both LED's are Off, there is no power to the condenser, either from a power failure or because the condenser disconnect is in the Off position.

2.0 SITE PREPARATION

2.1 Site Considerations

- Condensers should be installed in a location offering maximum security and access for maintenance.
- Avoid ground-level sites with public access and areas prone to heavy snow or ice accumulations.
- To ensure adequate air supply, Emerson® recommends that condensers be installed in an area with clean air, away from loose dirt and foreign matter that might clog the coil. In addition, condensers should be located no closer than 3 feet (1m) from a wall, obstruction or adjacent unit.
- For roof installation, mount the condenser on suitable curbs or other supports in accordance with local codes.
- Condensers must not be installed in a pit.
- Condensers must be installed on a level surface to ensure proper refrigerant flow.
- Use caution when installing condensers below the indoor unit. Condensers must not be installed more than 15ft. (4.6m) below the indoor unit. Condensers with Liebert Lee-Temp™ receivers must be installed at or above the level of the indoor units to maintain proper subcooling.
- Liebert Lee-Temp receiver tanks should be mounted on the condenser legs for proper operation. Contact Emerson Application Engineering Department for assistance with applications requiring remote mounting of receivers.
- Condensers must be installed in vertical airflow orientation to maintain the electrical box's NEMA 3R rating.

Dimensions and Weights

Table 1 Condenser shipping weights, dimensions and volume, approximate

Model #	Number of Fans	Domestic Packaging			Export Packaging		
		Weight lb (kg)	Dimensions L x W x H in. (cm)	Volume ft ³ (m ³)	Weight lb (kg)	Dimensions (L x W x H) in. (cm)	Volume ft ³ (m ³)
MCS028	1	359 (163)	76 x 36 x 63 (193 x 91 x 160)	100 (2.8)	476 (216)	77 x 37 x 64 (196 x 94 x 163)	106 (3.0)
MCS056	2	562 (255)	122 x 36 x 63 (310 x 91 x 160)	179 (5.0)	734 (333)	123 x 37 x 64 (312 x 94 x 163)	188 (5.3)
MCM040	1	439 (199)	76 x 36 x 63 (193 x 91 x 160)	100 (2.8)	556 (252)	77 x 37 x 64 (196 x 94 x 163)	106 (3.0)
MCM080	2	769 (349)	122 x 36 x 63 (310 x 91 x 160)	179 (5.0)	941 (427)	123 x 37 x 64 (312 x 94 x 163)	188 (5.3)
MCM160	4	1509 (684)	256 x 36 x 63 (650 x 91 x 160)	336 (9.5)	1834 (832)	257 x 37 x 64 (653 x 94 x 163)	352 (10)
MCL055	1	552 (250)	76 x 36 x 63 (193 x 91 x 160)	100 (2.8)	669 (303)	77 x 37 x 64 (196 x 94 x 163)	106 (3.0)
MCL110	2	962 (436)	136 x 36 x 63 (345 x 91 x 160)	179 (5.0)	1134 (514)	137 x 37 x 64 (348 x 94 x 163)	188 (5.3)
MCL165	3	1364 (619)	196 x 36 x 63 (498 x 91 x 160)	257 (7.3)	1619 (734)	197 x 37 x 64 (500 x 94 x 163)	270 (7.7)
MCL220	4	1835 (832)	256 x 36 x 63 (650 x 91 x 160)	336 (9.5)	2160 (980)	257 x 37 x 64 (653 x 94 x 163)	352 (10)

1. Packaged weights will increase with factory options, such as legs taller than 18" (457mm), coated coils and seismic options. See **Tables 2, 3 and 4** for option weights to add to the packaged weights above. Consult factory for additional information.
2. Receivers and 60" legs are shipped separately from the condenser.

2.1.1 Condenser and Options Net Weights

Total unit weight is the sum of the condenser weight with the selected legs plus the weight of any option.

Source: DPN003034, Rev. 0

Table 2 Condenser and option net weights—Small condensers

Condenser Model		MCS028	MCS056
Refrigeration Circuits		1	2
Condenser Dry Weight, lb (kg)	18" Leg	154 (70)	270 (122)
	36" Leg	286 (130)	419 (190)
	48" Leg	318 (144)	451 (205)
	60" Leg	349 (158)	482 (219)
Additional Weight for Options, lb (kg)			
Liebert Lee-Temp		55 (25)	110 (50)
Coated Coil		4 (2)	8 (4)


Table 3 Condenser and option net weights—Medium condensers

Condenser Model		MCM040	MCM080		MCM160
Refrigeration Circuits		1	1	2	2
Condenser Dry Weight, lb (kg)	18" Leg	231 (105)	441 (200)	441 (200)	860 (390)
	36" Leg	363 (165)	590 (268)	590 (268)	1066 (484)
	48" Leg	395 (179)	622 (282)	622 (282)	1114 (505)
	60" Leg	426 (193)	653 (296)	653 (296)	1160 (526)
Additional Weight for Options, lb (kg)					
Liebert Lee-Temp		55 (25)	100 (45)	110 (50)	220 (100)
Liebert DSE Receiver DA080/085		—	—	—	88 (40)
Liebert DSE Receiver DA125/150/165		—	—	—	184 (83)
Coated Coil		5 (2)	10 (5)	10 (5)	20 (9)

Table 4 Condenser and option net weights—Large condensers


Condenser Model		MCL055	MCL110		MCL165	MCL220	
Refrigeration Circuits		1	1	2	1	1	2
Condenser Dry Weight, lb (kg)	18" Leg	344 (156)	602 (273)	602 (273)	891 (404)	1186 (538)	1186 (538)
	36" Leg	486 (220)	766 (347)	766 (347)	1136 (515)	1453 (659)	1453 (659)
	48" Leg	518 (235)	798 (362)	798 (362)	1184 (537)	1501 (681)	1501 (681)
	60" Leg	549 (249)	829 (376)	829 (376)	1230 (558)	1547 (702)	1547 (702)
Additional Weight for Options, lb (kg)							
Liebert Lee-Temp		60 (27)	115 (52)	120 (54)	175 (79)	215 (98)	240 (109)
Liebert DSE Receiver DA080/085		—	45 (20)	90 (41)	—	45 (20)	90 (41)
Liebert DSE Receiver DA125/150/165		—	94 (43)	188 (85)	94 (43)	94 (43)	188 (85)
Coated Coil		8 (4)	16 (7)	16 (7)	24 (11)	32 (15)	32 (15)

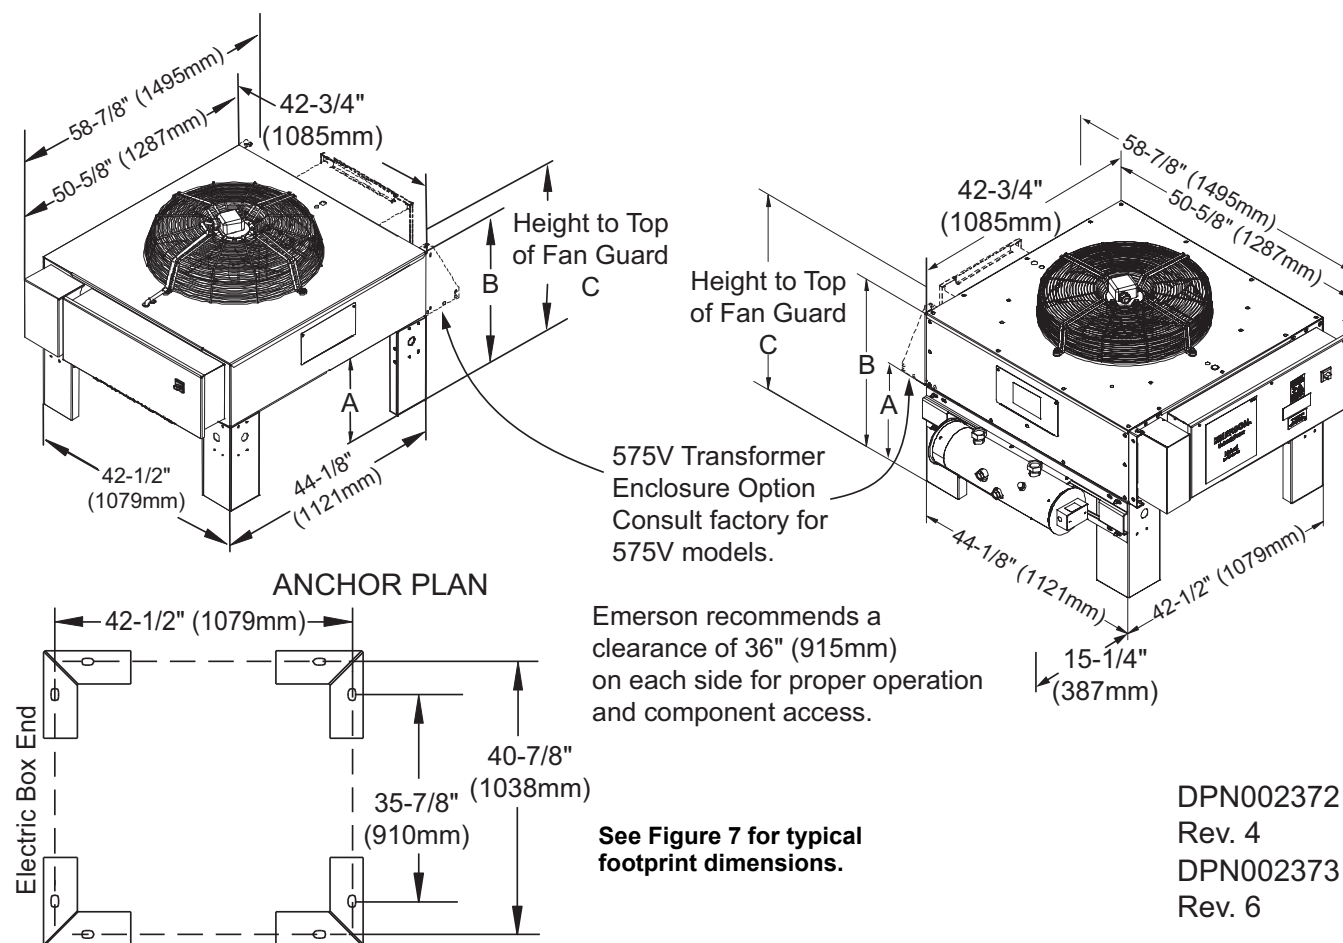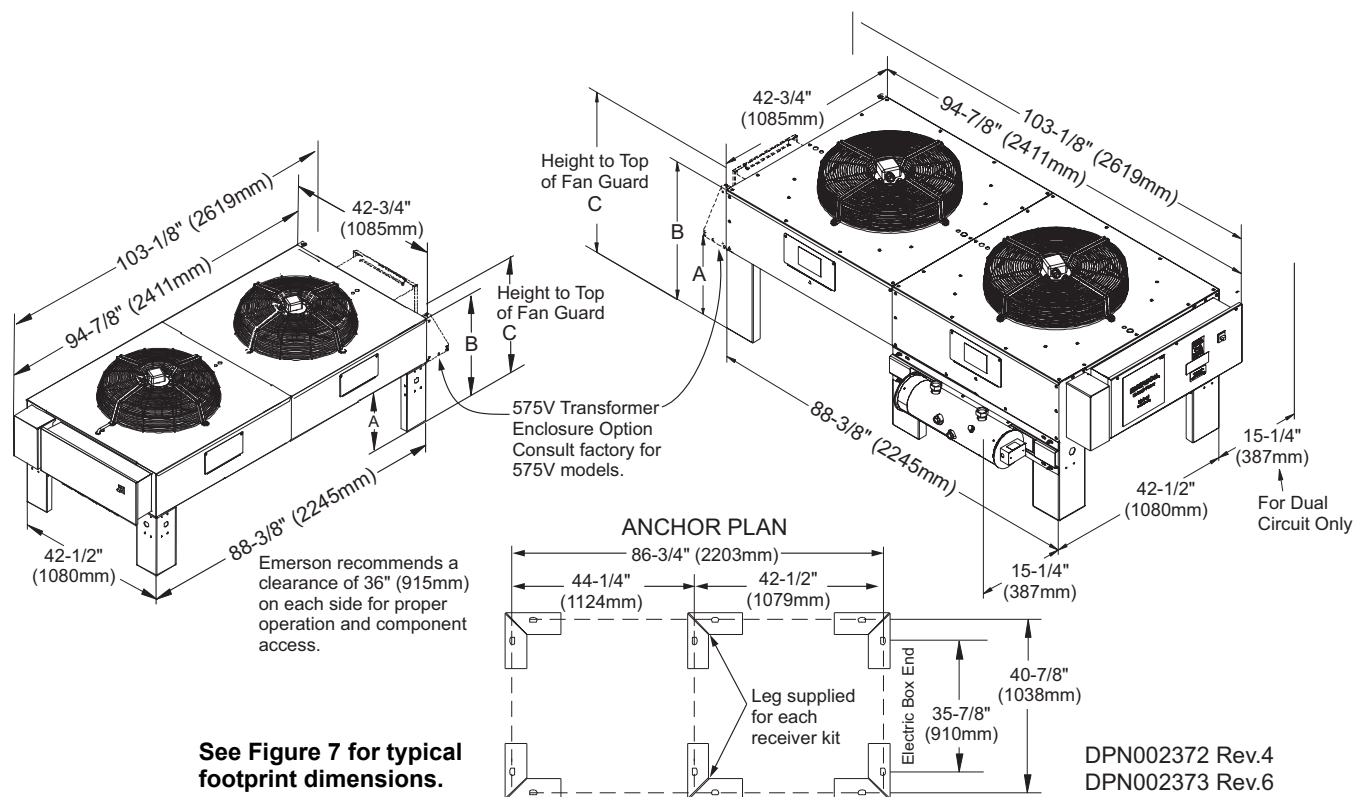Figure 2 Condenser planning dimensional data—MCS028 with and without receivers



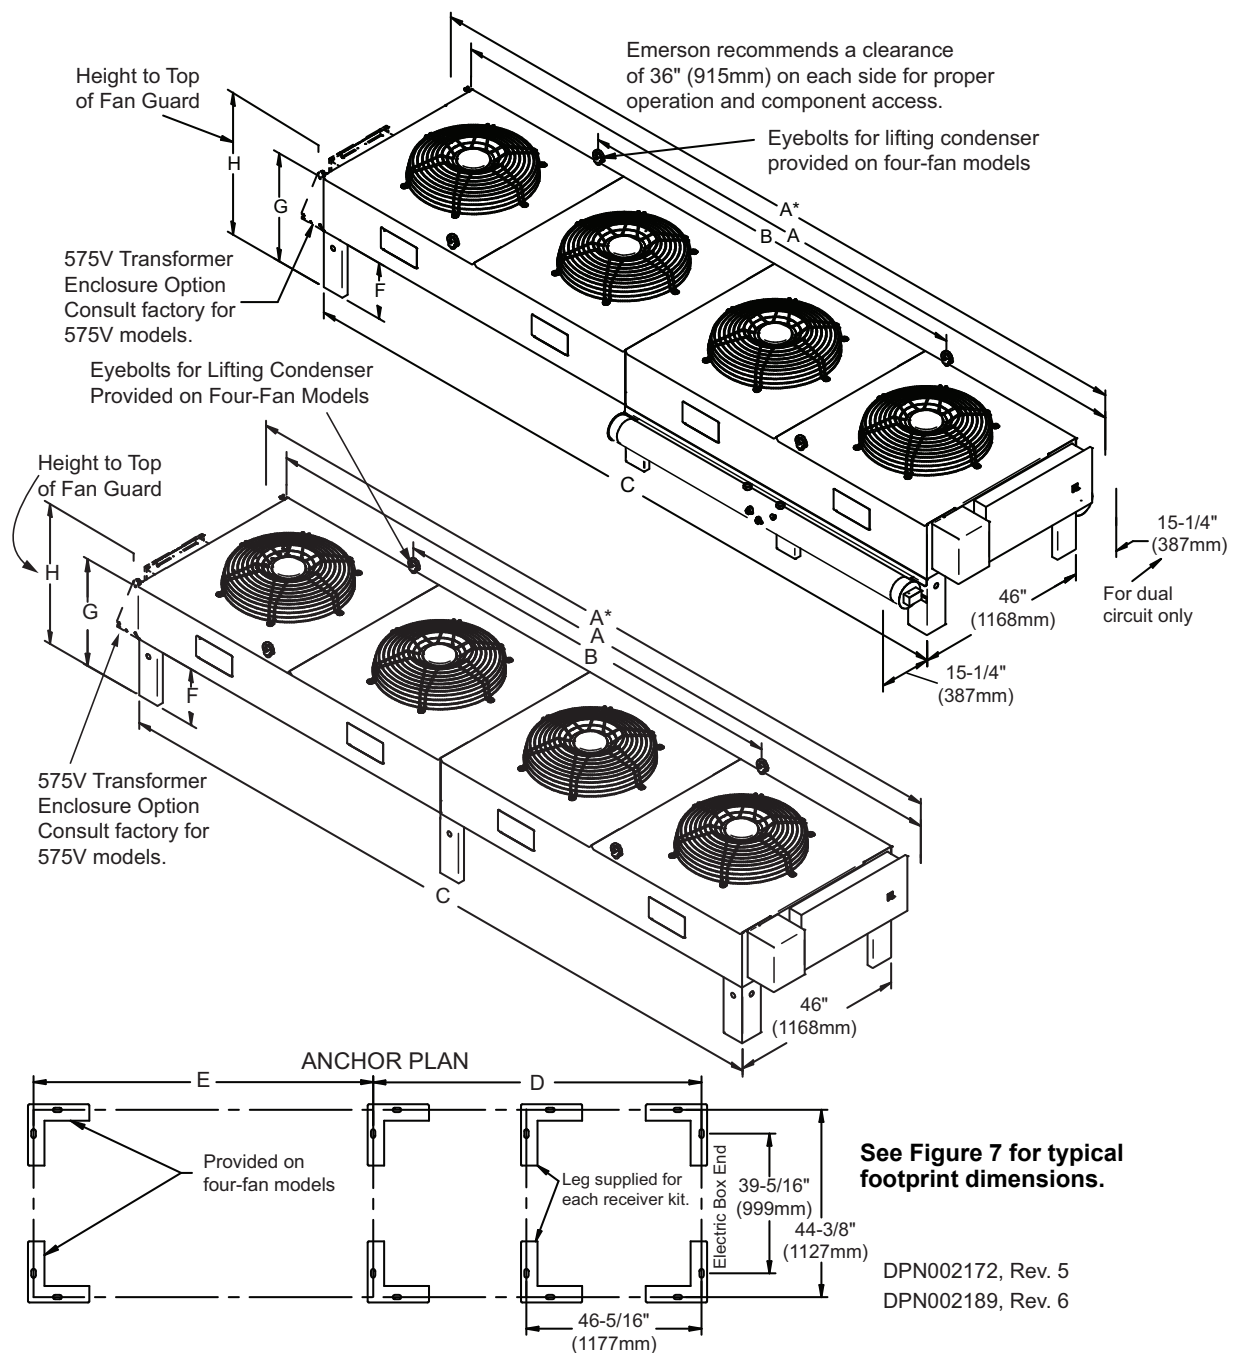
1. 18" (457mm) legs standard for all models. Cross-bracing is required for legs longer than 18" (457mm). Quantity varies according to model and options.
2. See **Tables 1** through **4** for weights, including added weight for legs of various lengths.
3. Source: DPN002372, Rev. 4; DPN002373, Rev. 6

Figure 3 Condenser planning dimensions—MCS056 with and without receivers



Leg Height ¹ A, In. (mm)	B In. (mm)	C In. (mm)
18 (457)	31-5/8 (803)	39-5/8 (1006)
36 (914)	49-5/8 (1260)	57-5/8 (1464)
48 (1219)	61-5/8 (1565)	69-5/8 (1768)
60 (1524)	73-5/8 (1870)	81-5/8 (2073)

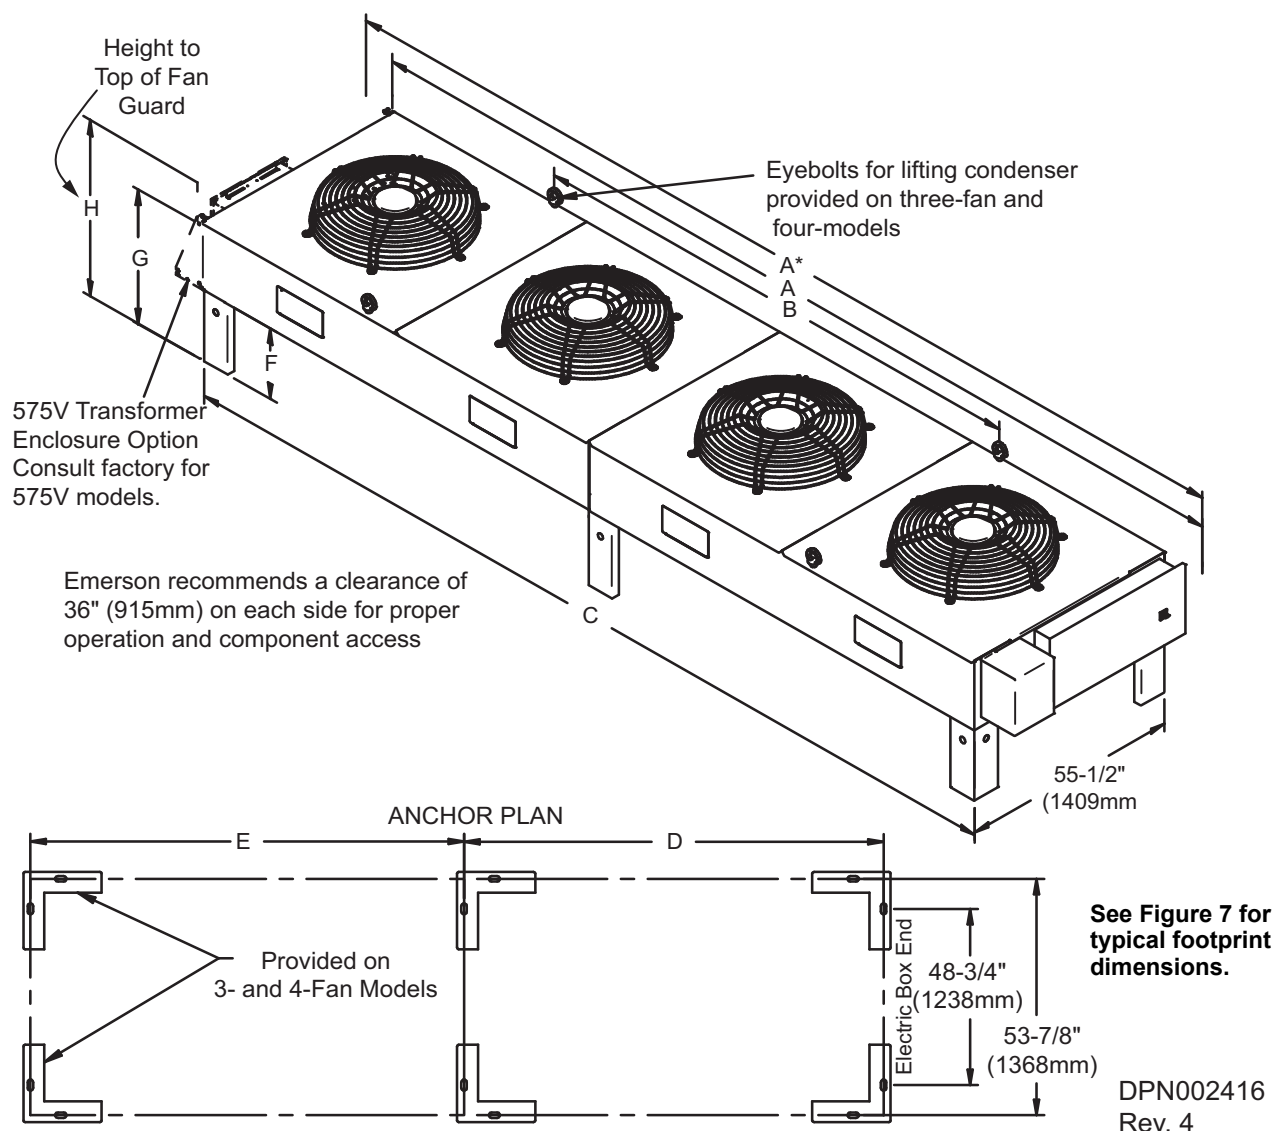
1. 18" (457mm) legs standard for all models. Cross-bracing is required for legs longer than 18" (457mm). Quantity varies according to model and options.
2. See **Tables 1** through **4** for weights, including added weight for legs of various lengths.
3. Source: DPN002372, Rev. 4; DPN002373, Rev. 6

Figure 4 Condenser planning dimensions—MCM040, MCM080, MCM160 with and without receivers

Liebert Model #	No. Fans	A In. (mm)	A* (575V In. (mm)	B In. (mm)	C In. (mm)	D In. (mm)	E In. (mm)
MCM040	1	57-3/16 (1453)	65-3/8 (1661)	—	48 (1219)	46-5/16 (1177)	—
MCM080	2	105-1/4 (2674)	113-7/16 (2882)	—	96-1/16 (2440)	94-7/16 (2398)	—
MCM160	4	202-7/16 (5142)	210-5/8 (5350)	113-1/2 (2883)	192-1/4 (4883)	94-7/16 (2398)	96-3/16 (2444)

- 18" (457mm) legs standard for all models. Cross-bracing required for legs longer than 18" (457mm). Quantity varies according to model and options.
- See **Tables 1** through **4** for weights, including added weight for legs of various lengths.
- Source: DPN002172, Rev. 5; DPN002189, Rev. 6

F ¹ Leg Height In (mm)	G In. (mm)	H In. (mm)
18 (457)	31-5/8 (803)	39-5/8 (1006)
36 (914)	49-5/8 (1260)	57-5/8 (1464)
48 (1219)	61-5/8 (1565)	69-5/8 (1768)
60 (1524)	73-5/8 (1870)	81-5/8 (2073)


Figure 5 Condenser planning dimensions—MCL055, MCL110, MCL165 and MCL220 without receivers

Model #	# of Fans	A in. (mm)	A* (575V) in. (mm)	B in. (mm)	C in. (mm)	D in. (mm)	E in. (mm)
MCL055	1	68 (1727)	76-1/8 (1935)	—	56 (1423)	54-3/8 (1381)	—
MCL110	2	124-1/8 (3152)	132-1/4 (3360)	—	112-1/8 (2848)	110-1/2 (2806)	—
MCL165	3	180-1/4 (4578)	188-3/8 (4786)	73-7/16 (1866)	168-1/4 (4274)	110-1/2 (2806)	56-1/8 (1425)
MCL220	4	236-5/16 (6003)	244-1/4 (6211)	129-9/16 (3291)	224-3/8 (5699)	110-1/2 (2806)	112-1/4 (2851)

Leg Height F ¹ In. (mm)	G In. (mm)	H In. (mm)
18 (457)	35-7/8 (911)	43-5/8 (1108)
36 (914)	53-7/8 (1368)	61-5/8 (1565)
48 (1219)	65-7/8 (1673)	73-5/8 (1870)
60 (1524)	77-7/8 (1978)	85-5/8 (2175)

1. 18" legs standard for all models. Cross-bracing required for legs longer than 18" (457mm). Quantity varies according to model and options.
2. See **Tables 1** through **4** for weights, including added weight for legs of various lengths.
3. Source: DPN002416, Rev. 2

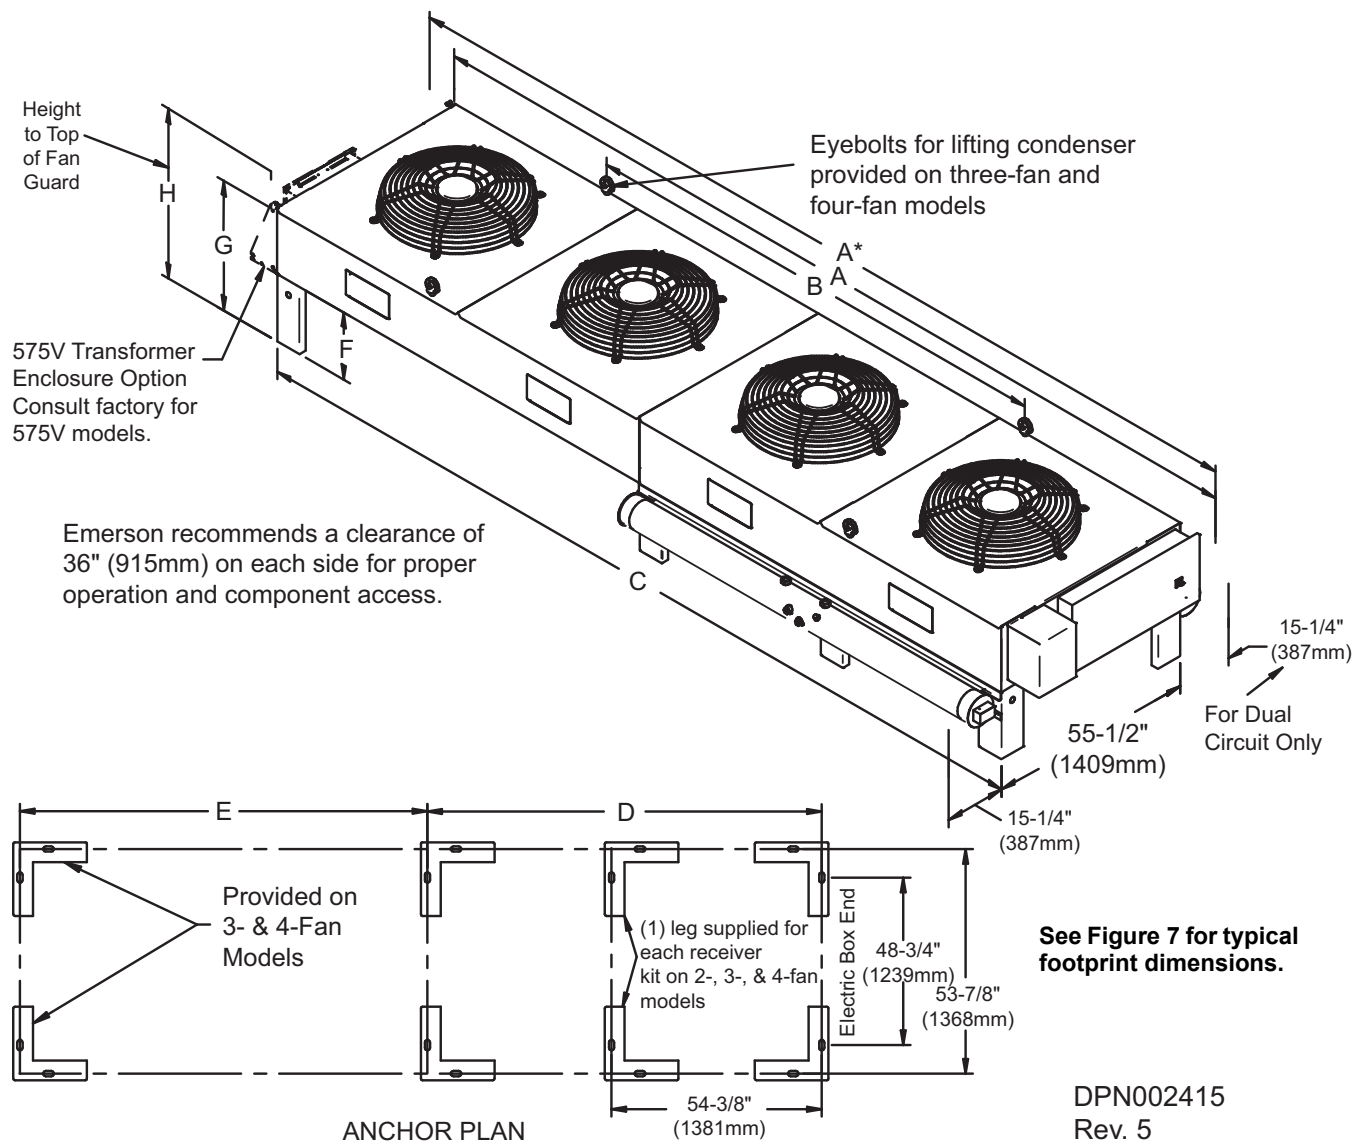Figure 6 Cabinet and anchor dimensions—MCL055, MCL110, MCL165 and MCL220 with receivers



Liebert Model #	# of Fans	A in. (mm)	A* (575V) in. (mm)	B in. (mm)	C in. (mm)	D in. (mm)	E in. (mm)
MCL055	1	68 (1727)	76-1/8 (1935)	—	56 (1423)	54-3/8 (1381)	—
MCL110	2	124-1/8 (3152)	132-1/4 (3360)	—	112-1/8 (2848)	110-1/2 (2806)	—
MCL165	3	180-1/4 (4578)	188-3/8 (4786)	73-7/16 (1866)	168-1/4 (4274)	110-1/2 (2806)	56-1/8 (1425)
MCL220	4	236-5/16 (6003)	244-1/4 (3291)	129-9/16 (3291)	224-3/8 (5699)	110-1/2 (2806)	112-1/4 (2851)

Leg Height, F ¹ in. (mm)	G in. (mm)	H in. (mm)
18 (457)	35-7/8 (911)	43-5/8 (1108)
36 (914)	53-7/8 (1368)	61-5/8 (1565)
48 (1219)	65-7/8 (1673)	73-5/8 (1870)
60 (1524)	77-7/8 (1978)	85-5/8 (2175)

1. 18" legs standard for all models. Cross-bracing required for legs longer than 18" (457mm). Quantity varies according to model and options.
2. See **Tables 1** through **4** for weights, including added weight for legs of various lengths.
3. Source: DPN002415, Rev. 5

Figure 7 Typical footprint dimensions, all units

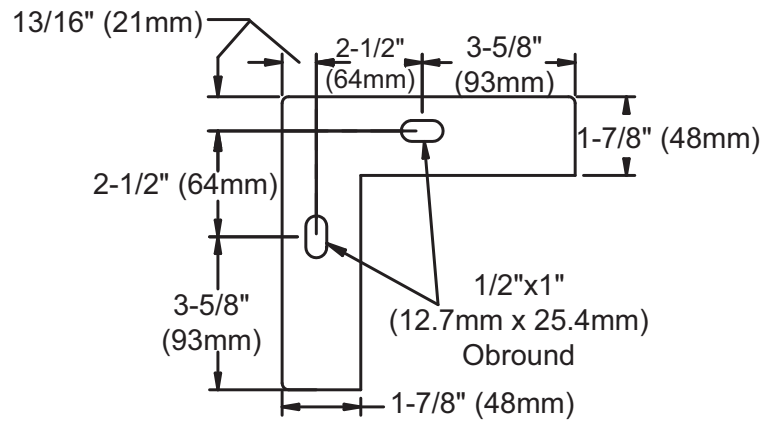


Figure 8 Liebert DSE receiver mounting—MCL165 and MCL220, single-circuit condenser, left side condenser outlet receiver

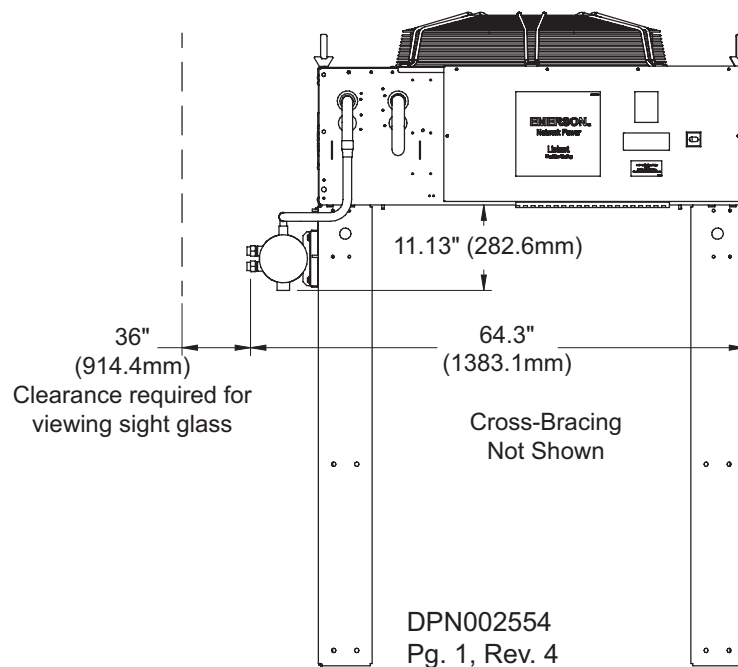


Figure 9 Liebert DSE receiver mounting—MCL165 and MCL220, single-circuit condenser, right side condenser outlet receiver

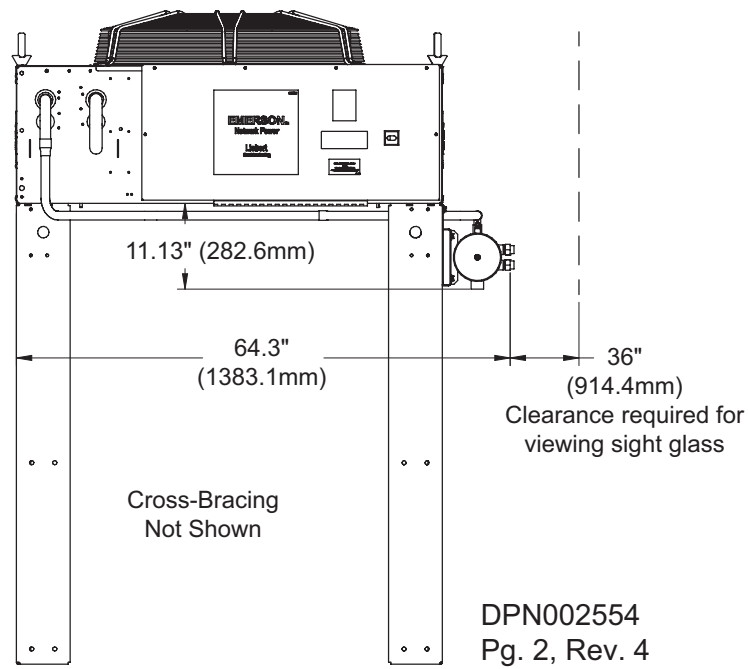


Figure 10 Liebert DSE receiver mounting—MCL110 and MCL220, dual-circuit condenser


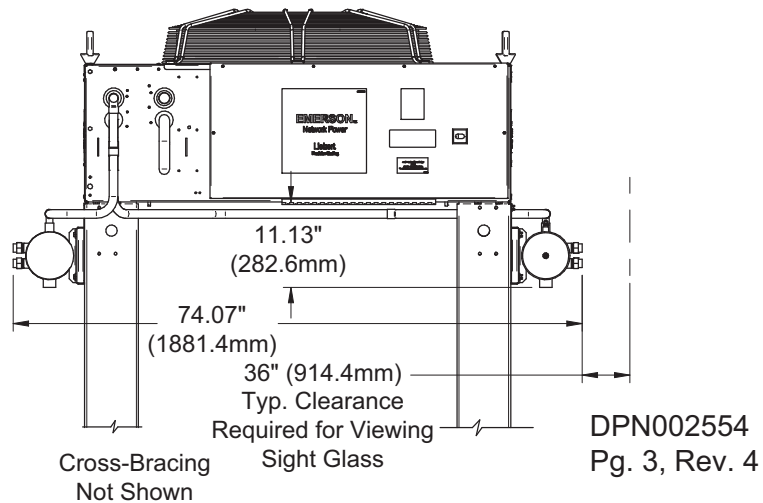


Figure 11 Liebert DSE receiver mounting—MCM160 dual circuit condenser

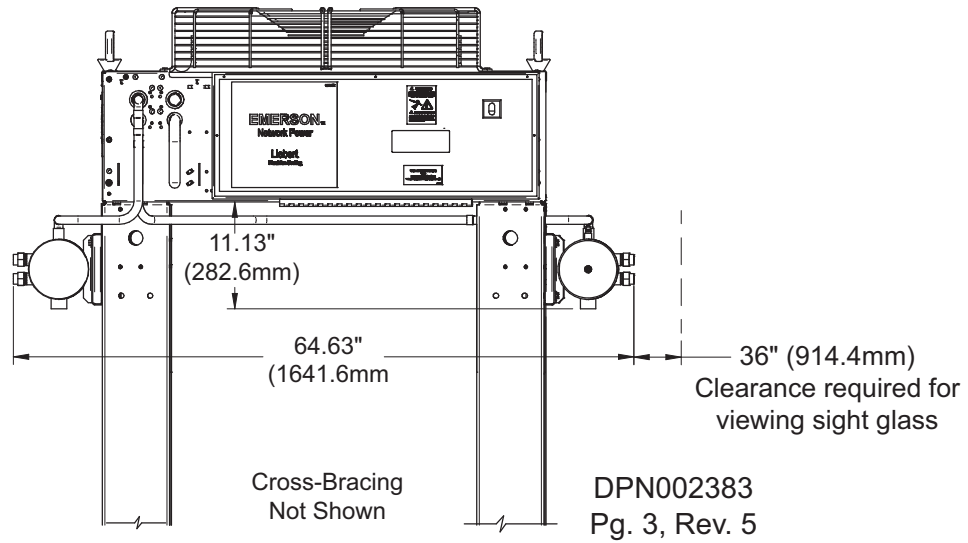

3.0 INSPECTION AND INSTALLATION

3.1 Equipment Inspection

Upon arrival of the unit and before unpacking, verify that the labeled equipment matches the Bill of Lading. Carefully inspect all items for either visible or concealed damage. Damage should be immediately reported to the carrier and a damage claim filed with a copy sent to Liebert Corporation or to your sales representative.

If you have the seismic mounting kit, refer to **Liebert MC Seismic Application—Optional Unit Configuration**

3.1.1 Packing Material

All material used to package this unit is recyclable. Save it for future use or dispose of the material appropriately.

SAFETY INFORMATION



WARNING

Risk of improper handling. Can cause equipment damage, injury or death.

Read all of the following instructions before attempting to move, lift, remove packaging from or preparing unit for installation.



WARNING

Risk of heavy condenser falling or tipping over. Can cause property damage, serious injury or death.

Confirm that all components of the lifting system are rated for the weight of the condenser by an OSHA Certified rating organization before attempting to lift and/or move the condenser.

See **Tables 1** through **4** for the condenser weights.



CAUTION

Risk of contact with sharp edges, splinters and exposed fasteners. Can cause personal injury.

Only properly trained and qualified personnel wearing appropriate safety headgear, gloves, shoes and glasses should attempt to move, lift, remove packaging from or prepare unit for installation.

NOTICE

Risk of interference with building doorways, openings and passages. Can cause unit and/or building damage.

Refer to the installation plans and measure the unit and building opening before moving the unit to verify clearances.

NOTICE

Risk of improper forklift handling. Can cause unit damage.


Keep the forklift tines level and at a height that will fit under the skid.

NOTICE

Risk of improper storage. Can cause unit damage.

Keep unit upright and protected from contact damage.

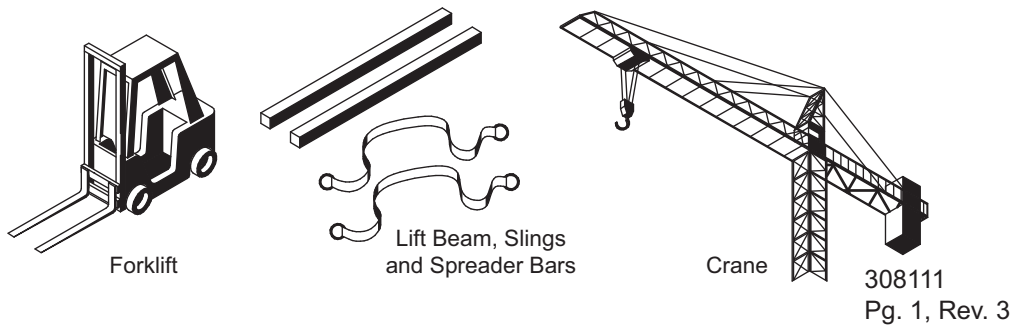Figure 12 Equipment recommended for handling a Liebert condenser




3.2 Handling Unit on the Skid

Transport unit using a fork lift or a crane with sling and spreader bars.

- If using a fork lift, make sure the forks (if adjustable) are spread to the widest allowable distance to still fit under the skid.
- Type of fork lift used will be dependant on the terrain the unit is be moved across during handling.
- Minimum fork lift fork length for use on one-fan and two-an unit must be 48" (1219mm).
- Minimum fork lift fork length for use on three-fan and four-fan unit must be 72" (1829mm).
- When moving the packaged unit, do not lift it any higher than 6" (152mm). If the unit must be lifted higher than 6" (152mm), great care must be exercised and no one may be closer than 20' (6m) to the lift point.

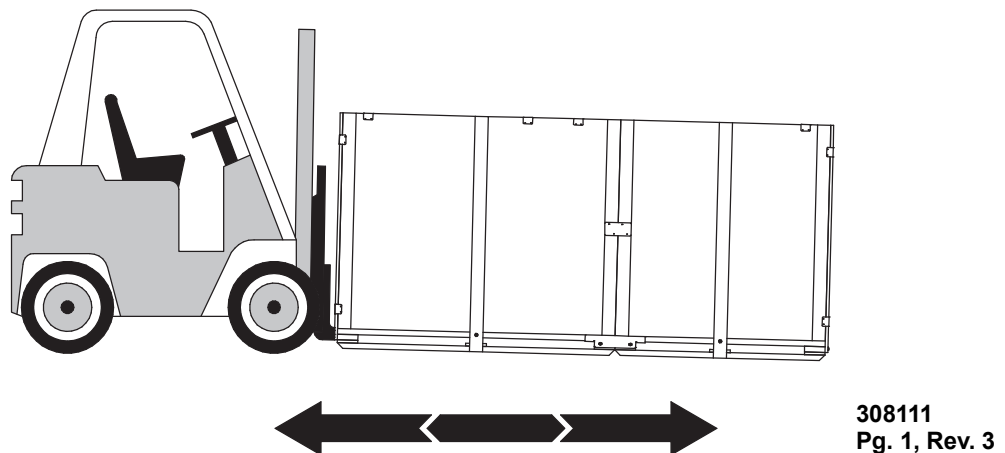Figure 13 Forklift position with one-fan or two-fan condensers



- When the Liebert MC is being moved with a forklift, Emerson recommends lifting one end off the ground no more than 6" (152mm) and using the forklift to push or pull the unit.
- When the Liebert MC is lifted with a crane, Emerson recommends using slings rated for the unit weight.
- Spreader bars must be used for sling stability and to keep the slings from pressing against the unit. Make sure spreader bars are wider than the unit.
- Place the slings near the ends of the unit, under the top deck boards of the skid.

3.3 Unit Storage


Store the condenser in the original packaging in an area protected from excessive dirt, debris and contact damage until final installation

3.4 Unpacking the Condenser—All Unit Sizes

To unpack a condenser:

1. Remove the fence for domestic packaging (for export packaging, remove the crate).
2. Remove the exterior foam from around the unit and the electric box.
3. Remove the steel straps securing the unit to the skid.
4. Set the legs aside, but keep accessible if legs are shipped together with the unit.
5. Depending on the number of fans, more or less steel strap may be removed at this step.
6. Remove corrugated panels covering the Liebert MC's coil(s).
7. Remove the bolts securing unit to the skid.
8. Remove the bolts securing the brackets to the unit and recycle the brackets.

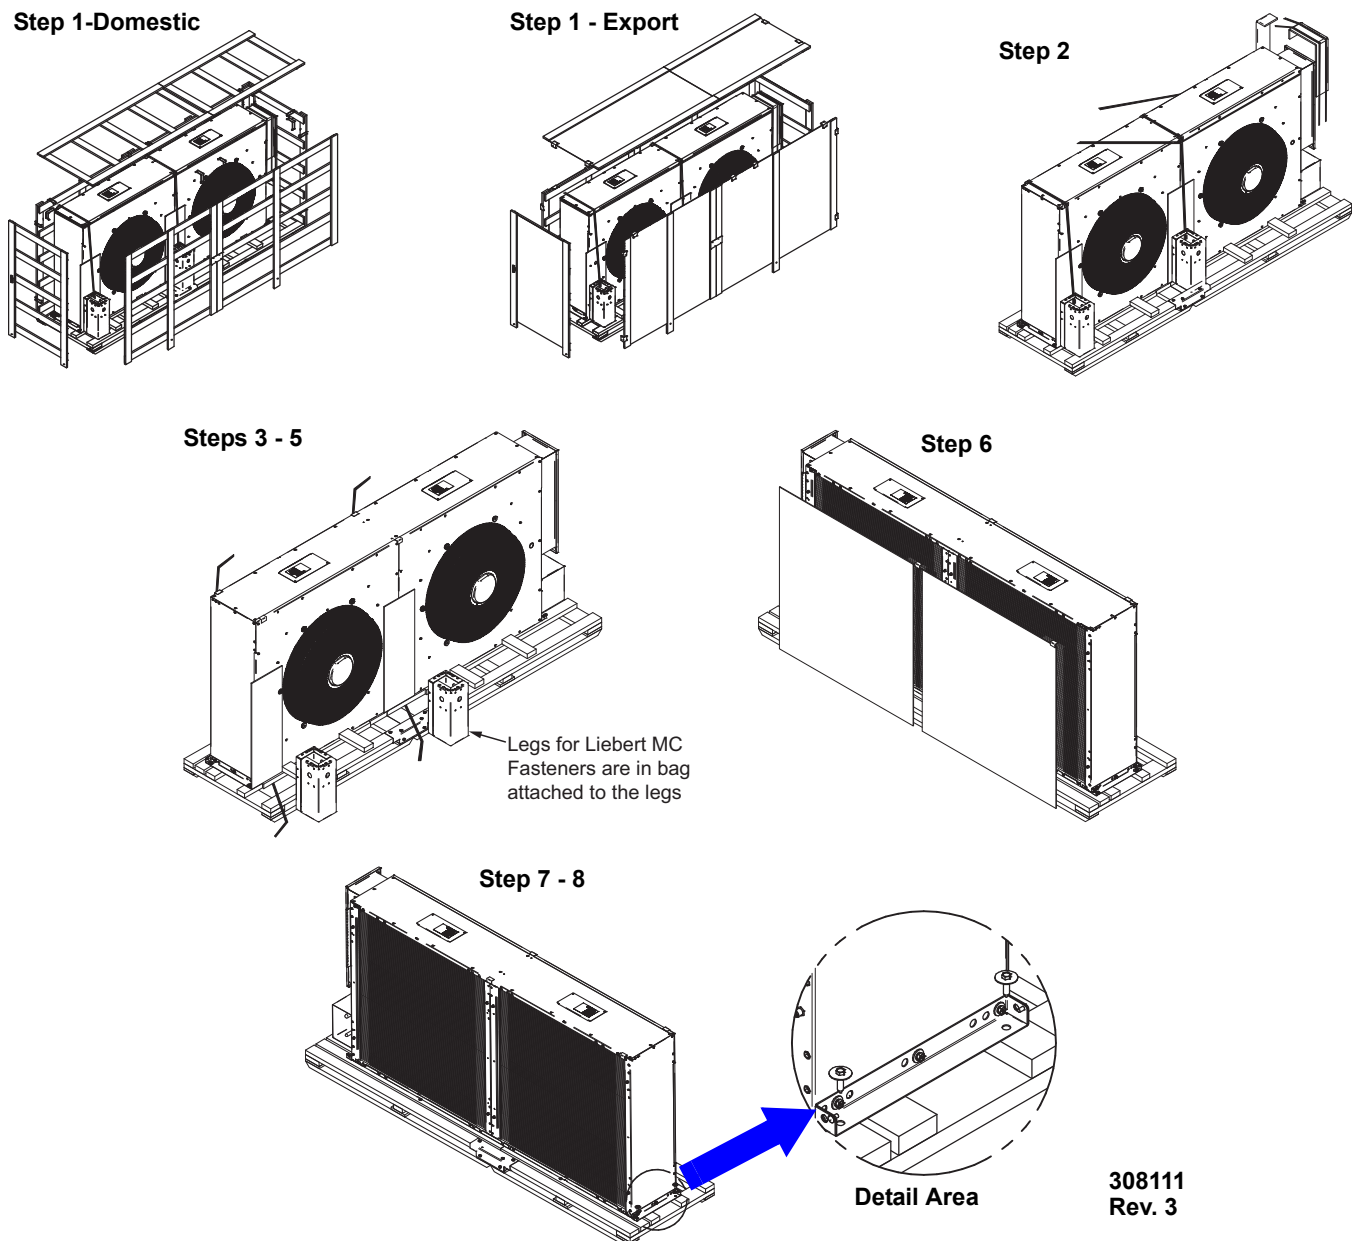Figure 14 Removing protective material



3.5 Preparing a Condenser for Moving and Installation—Units with One or Two Fans

The following procedure is one method for removing a Liebert condenser from its shipping skid. Other methods may be used, provided that they are safe for personnel, the condenser and other equipment.

3.5.1 Attaching 18" (457mm) Legs, Removing the Skid and Attaching Slings—Units with One or Two Fans


1. Attach legs to the unit at indicated locations, using the fasteners provided with the legs.

Recommended tools for attachment is a 1/2" (13mm) socket and ratchet.

More legs may be available for installation than are shown. This will depend on the unit type and number of fans.

Units supplied with 36-60" (914-1524mm) legs go to **3.5.2 - Special Considerations for 36-60" (914-1524mm) Legs**

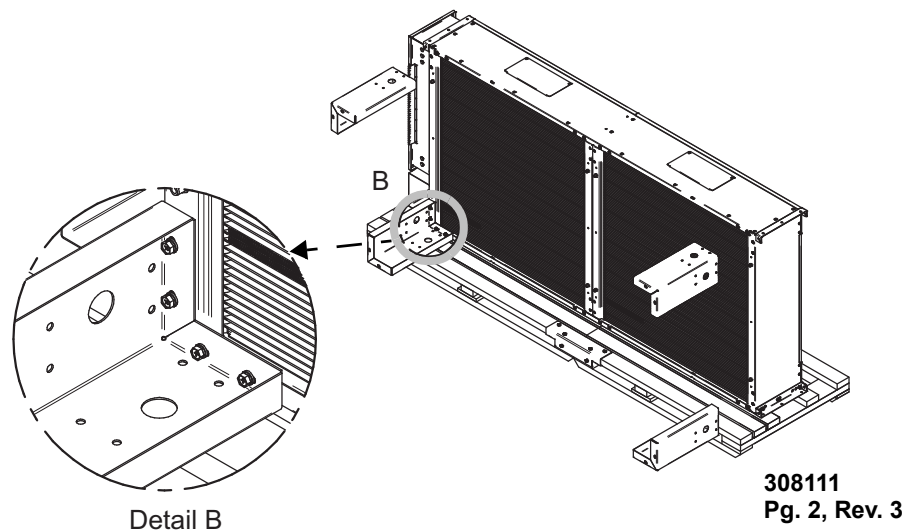Figure 15 Attaching legs to one-fan or two-fan condensers




2. Place slings around the unit between the unit and the top deck boards of the skid:
 - **One-fan and two-fan units:** against the inside of the attached legs.
 - **Three-fan and four-fan units:** against the outside of the attached eye bolts.
3. Use spreader bars, a lift beam and a crane to lift the unit off the skid. Make sure spreader bars are wider than the unit.

NOTICE

Risk of improper lifting. Can cause equipment damage.


Make sure that the spreader bars wider are than the unit. If the spreader bars are too short, the slings may crush the unit.

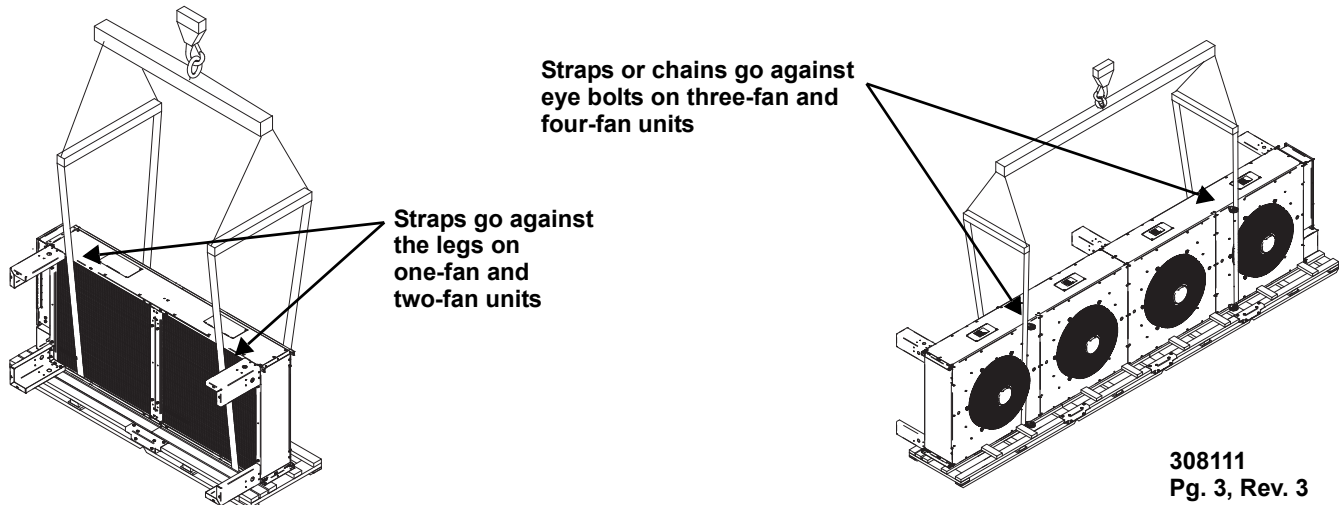Figure 16 Securing slings to condensers for lifting off skid



4. Lift the unit 24" (610mm) off the top deck of the skid.
5. Remove the skid from under the unit.
6. A mechanized method is recommended, but if one is not available, use a minimum of four properly protected individuals to rotate the elevated unit 90 degrees.
Unit legs are to be pointing toward the ground.

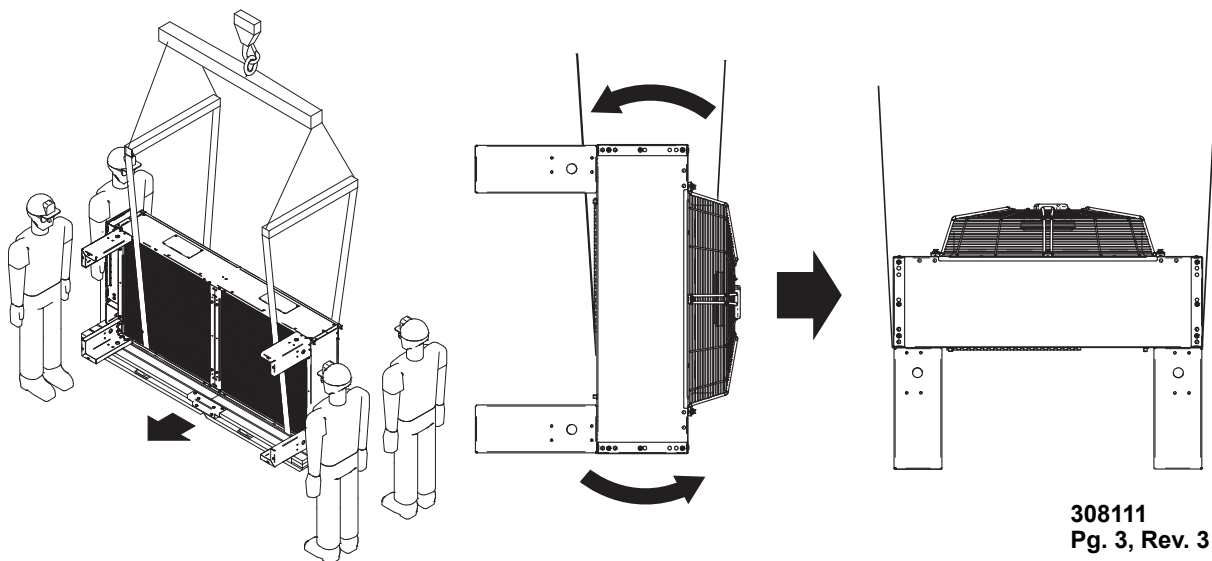Figure 17 Remove skid, set condenser on floor



7. Set the upright unit on the ground so the legs support unit weight.
8. Remove the straps from around unit.
9. **One-fan and two-fan units:** Route the straps through the large holes in the side of the legs. Spreader bars are still required. Make sure that the spreader bars are wider than the unit.
On three-fan and four-fan units: Secure straps or chains to the eye bolts on top of the unit. Spreader bars are still required. Make sure that the spreader bars are wider than the unit.


NOTICE

Risk of improper lifting. Can cause equipment damage.

Make sure that the spreader bars wider are than the unit. If the spreader bars are too short, the slings may crush the unit.


The unit is ready to be lifted and moved to its installation location.

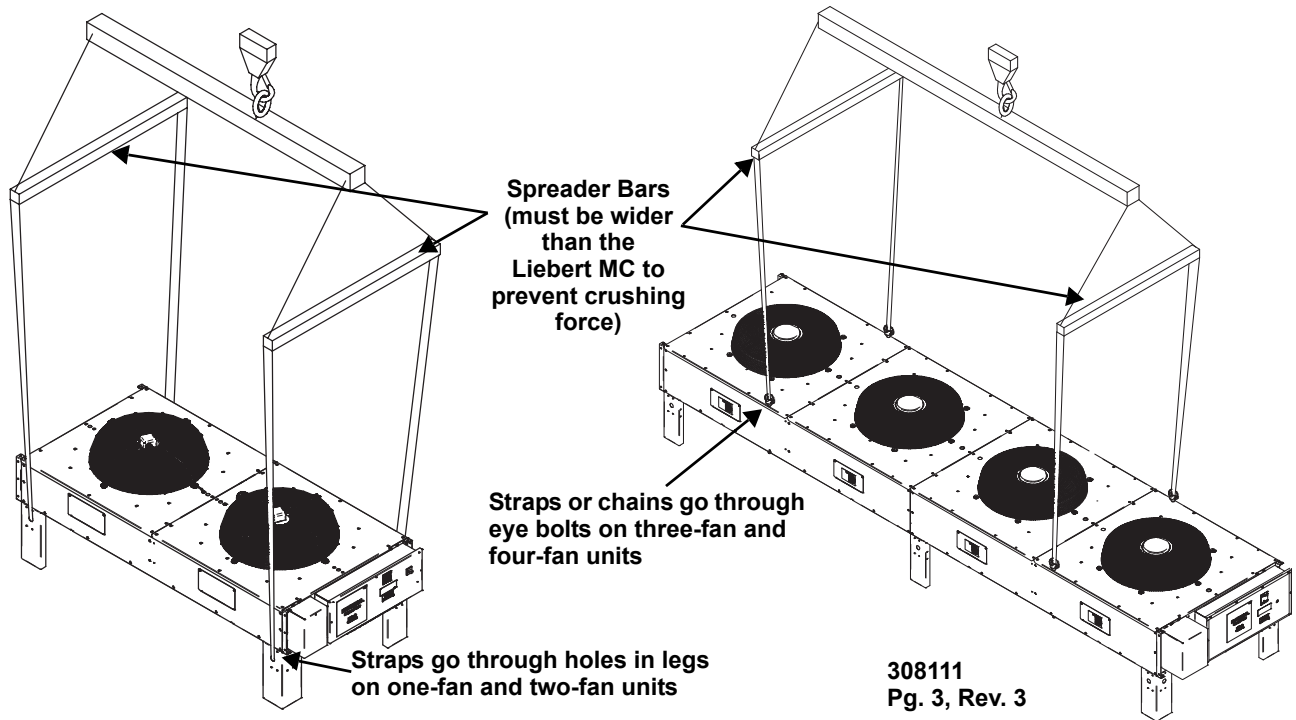Figure 18 Lifting condensers with one, two, three or four fans



3.5.2 Special Considerations for 36-60" (914-1524mm) Legs

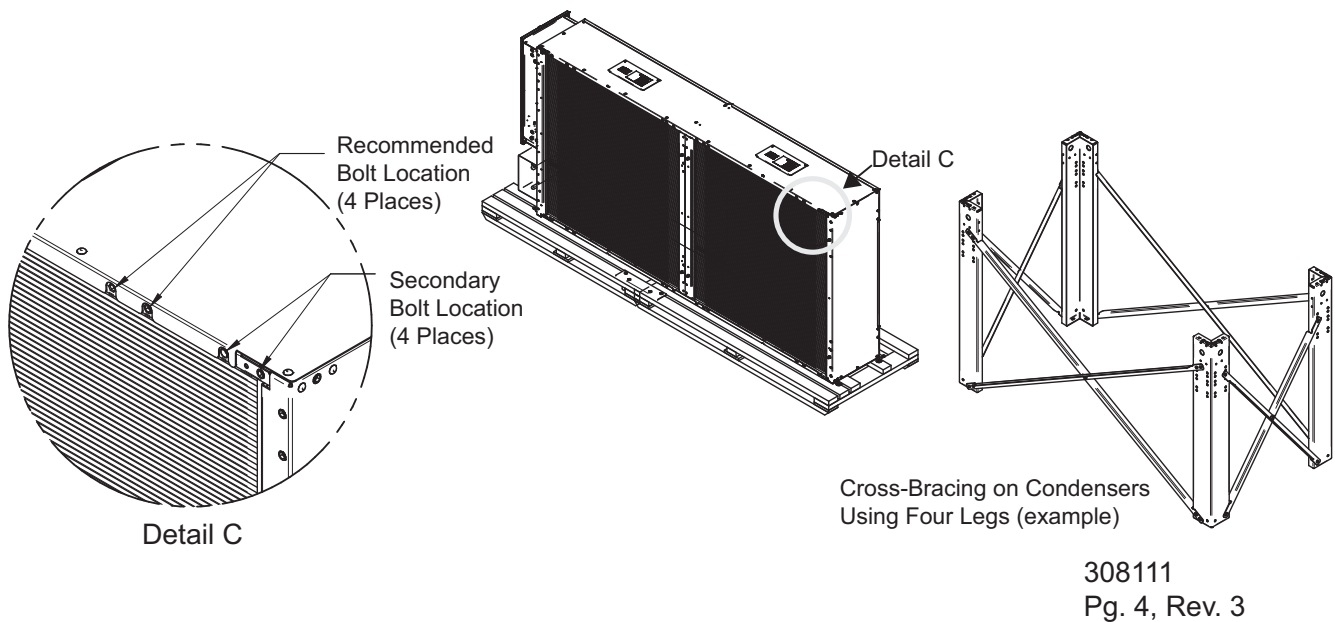Figure 19 Recommended bolt locations



1. Insert four leg bolts into the threaded holes near the corners along the long edges of the unit, leaving approximately 1/4" (6mm) of the fastener threads exposed (see **Figure 19**). These will serve as sling containment guides during condenser lifting and rotation. This will also permit leg attachment at the secondary bolt locations while using the slings to lift and support the condenser weight.
2. Assemble the leg structure according to the instructions supplied with the legs.




NOTE

*When assembling the leg structure, **DO NOT** tighten the cross-brace hardware until the condenser cabinet is fastened to the legs.*


3. Place slings around the first and second fan units against the inside of the inserted leg bolts.
4. Place slings around the third and fourth fan units against the outside of the attached eye bolts.
5. Slings are to be placed between the unit and the top deck boards of the skid.
6. Use spreader bars, lift beam and crane to lift the unit off the skid. Make sure spreader bars are wider than the unit.

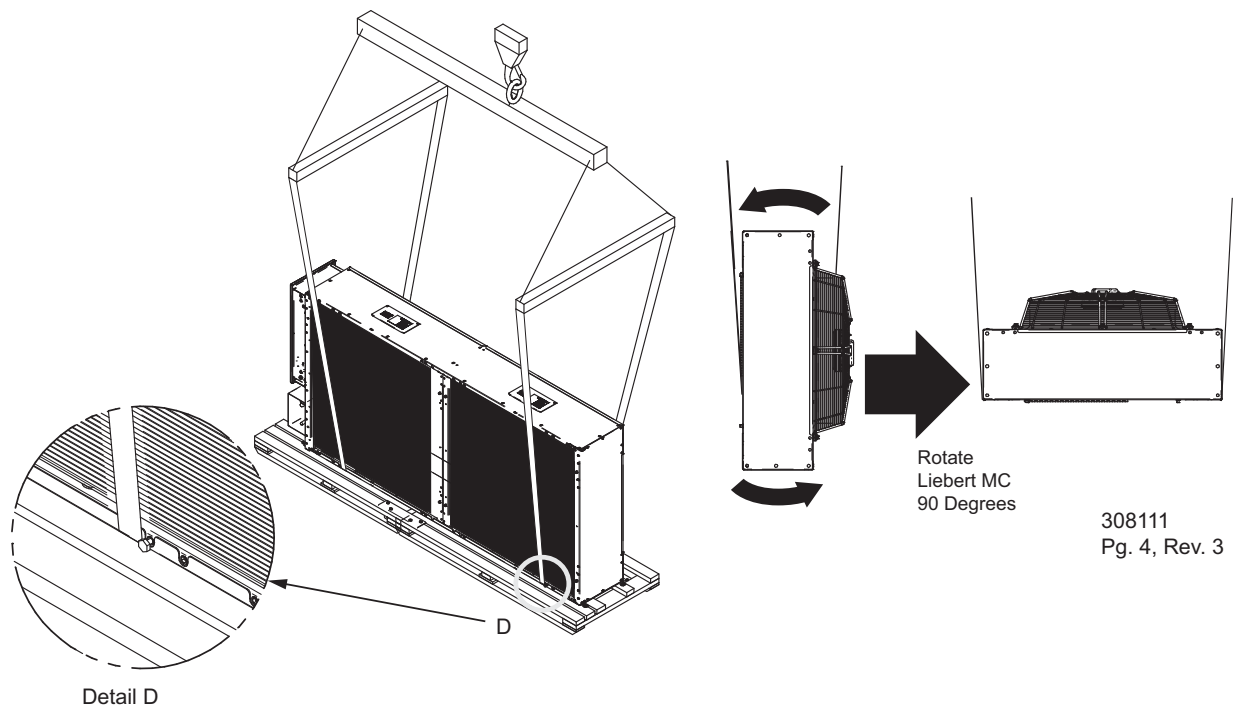Figure 20 Remove bolts along the long edge of the unit



7. Lift the unit 24" (610mm) off the skid. Remove the skid from under the unit.
8. A mechanized method is recommended, but if one is not available, use a minimum of four properly protected people to rotate the elevated unit 90 degrees. The fans will be facing up.
9. Place the unit on the leg structure, resting the unit on its legs (see **Figure 20**).
10. Remove the bolts inserted in the long edges. If the secondary locations are used, the bolts must be removed just before setting the unit on its legs.
11. Align, insert and tighten all hardware securing the Liebert MC to the leg structure.
12. Square up the leg structure and tighten all cross-brace angle hardware.

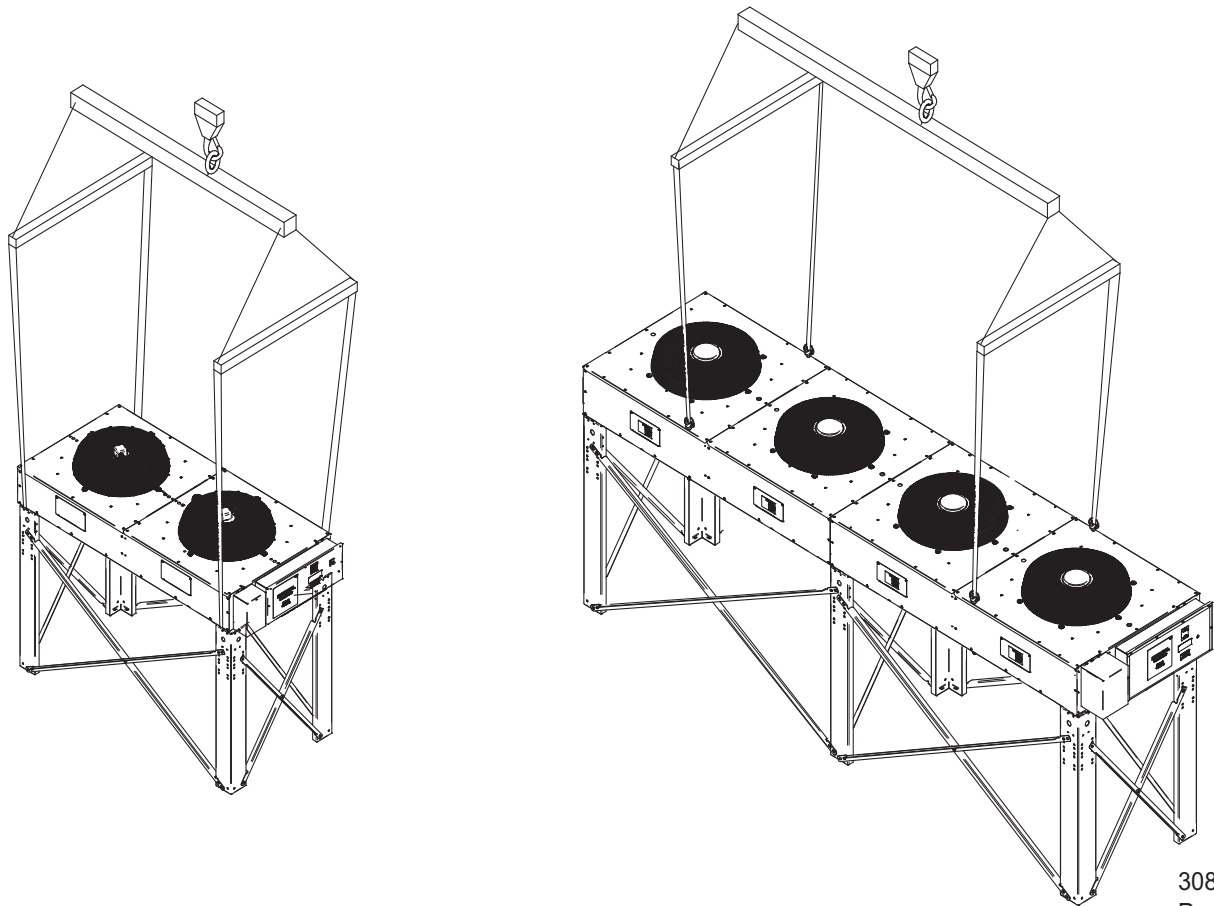Figure 21 Lifting the unit for installation



308111
Pg. 4, Rev. 3

13. Lower the unit so the leg structure supports the weight of the unit.
14. Remove the straps from around the unit.
15. On one- and two-fan units, route the straps through the large holes on the side of the legs. Spreader bars are still required; they must be wider than the unit.
16. On three- and four-fan units, use the eye bolts on top of the unit to secure straps or chains. Spreader bars are still required. Make sure spreader bars are wider than the unit.

The unit is now ready to be lifted into position for installation.

3.6 Mounting the Condenser

The condenser must be installed so that it is level within 1/2" (13mm) to ensure proper refrigerant flow. For roof installation, mount the condenser on suitable curbs or other supports. Follow all local and national codes.

3.6.1 Standard Mounting Requirements

Secure the legs to the mounting surface using field-supplied 3/8" (9.5mm) diameter Grade 5 bolts with a flat washer in each of the two 1/2" x 1" (12.7 x 25.4mm) obround holes in each leg. See **Figures 7** through **6** for anchor dimensions.

3.6.2 Seismic-Certified Mounting Requirements

Mounting requirement details such as anchor brand, type, embedment depth, edge spacing, anchor-to-anchor spacing, concrete strength, special inspection and attachment to non-building structures must be outlined and approved by the engineer of record for the project or building.

Structural floors and housekeeping pads must also be designed and approved by the project or building structural engineer of record to withstand the seismic anchor loads as defined on the installation drawings. The installing contractor is responsible for the proper installation of all anchors and mounting hardware, observing the mounting requirements detailed in the seismic installation drawings and additionally outlined by the engineer of record.

At a minimum, 3/8" Grade 5 anchors with American National Standard Series W, Type A, plain washers (ANSI B18.22.1-1965, R1975) selected to match the nominal anchor diameter must be installed at each anchor location between the anchor head and equipment for tension load distribution. See **9.0 - Liebert MC Seismic Application—Optional Unit Configuration** for additional information.

4.0 ELECTRICAL CONNECTIONS

Line voltage electrical service is required for all models. Refer to the equipment's nameplate regarding wire size and circuit protection requirements. Electrical service must conform to national and local electrical codes. Refer to **Figure 29** for electrical service entrances into unit. Refer to electrical schematic when making connections.

A manual electrical disconnect switch should be installed in accordance with local codes. Consult local codes for external disconnect requirements.

All internal wiring is completed at the factory.



WARNING

Risk of electrical shock. Can cause injury or death.

The fan speed control and the EC fan electrical enclosures may contain a stored electrical charge. Open all local and remote electric power disconnect switches, wait 10 minutes and verify with a voltmeter that power is Off before working within the fan speed control and the EC fan electrical enclosures.

The Liebert MC contains lethal voltage in some circuits. The line side of the disconnect remains energized when the condenser unit disconnect is switched to the Off position.

Use a voltmeter to verify that the line-side electrical power is Off before making any electrical connections or performing any electrical and/or mechanical service and/or maintenance operations.



WARNING

Risk of contact with high-speed, rotating fan blades. Can cause serious injury or death.

Fan blades can automatically start rotating without warning at any time during a cooling cycle or after power is restored after a power failure. Open all local and remote electric power supply disconnect switches and verify with a voltmeter that the power is Off and that the fan blades have stopped rotating before working within the cabinet or servicing fan motors.

Each unit is shipped from the factory with all internal wiring completed. Refer to the electrical schematic supplied with the condenser when making line voltage supply, low-voltage indoor unit interlock and any low-voltage alarm connections. All wiring must be done in accordance with all applicable local, state and national electrical codes.



NOTE

Installation and service of this equipment should be done only by properly trained and qualified personnel who have been specially trained in the installation of air conditioning equipment.



NOTE

Use copper wiring only. Make sure that all connections are tightened to the proper torque mentioned on the component.

4.1 Line Voltage Wiring



WARNING

Risk of electrical fire and short circuit. Can cause property damage, injury or death.

Select and install the line side electrical supply wire and overcurrent protection device(s) according to the specifications on the unit nameplate(s), per the instructions in this manual and according to the applicable national, state and local code requirements. Use copper conductors only.

Verify that all electrical connections are tight. Unit-specific wiring diagrams are provided on each unit.

**NOTE**

The Liebert MC Condenser is designed to operate with wye-connected power with a solidly grounded neutral. It will not operate properly with wye-connected power with high-resistance (or impedance) ground or with delta-connected power. Refer to 4.1.1 - Wye- vs. Delta-Connected Power Supply.

Condenser-rated voltage should be verified with available power supply before installation. Refer to the unit's electrical schematic and serial tag for specific electrical requirements.

Liebert MC condenser power connections are provided for three-phase wires and 1 earth ground wire. Line voltage electrical service is required for all condensers at the location of the condenser. The voltage supply to the condenser may not be the same voltage supply as required by the indoor unit. Consider using a UPS on both data center cooling units and Liebert MC condensers to maintain uninterrupted cooling capability. Refer to the unit's serial tag for specific condenser electrical requirements. A unit disconnect is standard. However, a site disconnect may be required by local code to isolate the unit for maintenance. Route the supply power to the site disconnect switch and then to the unit. Route the conduit to the knockout provided in the bottom right end of the electrical control enclosure. Connect the earth ground wire lead to the marked earth ground connection terminal provided near the factory-installed disconnect switch (see **Figure 29**).

**NOTE**

*Liebert Lee-Temp™ kits require a separate line voltage electrical supply for the heated receivers. See **Table 6** for power requirements.*

Table 5 Electrical data, three-phase, 60Hz condenser, premium models

Model	Voltage	FLA	WSA	OPD
Small Platform				
MCS028	208/230V	3.0	3.8	15
	460V	1.4	1.8	15
MCS056	208/230V	6.0	6.8	15
	460V	2.8	3.3	15
Medium Platform				
MCM040	208/230V	2.3	3.2	15
	460V	1.4	1.9	15
MCM080	208/230V	4.6	5.5	15
	460V	2.8	3.3	15
MCM160	208/230V	9.2	9.8	15
	460V	5.6	6.0	15
Large Platform				
MCL055	208/230V	5.7	7.1	15
	460V	2.8	3.5	15
MCL110	208/230V	11.4	12.8	15
	460V	5.6	6.3	15
MCL165	208/230V	17.1	18.5	20
	460V	8.4	9.1	15
MCL220	208/230V	22.8	24.2	25
	460V	11.2	11.9	15

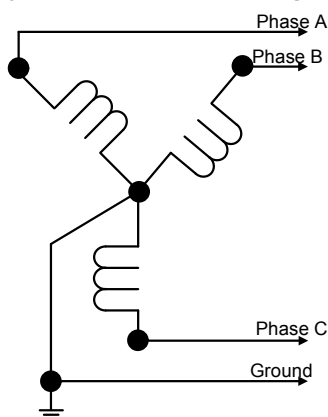
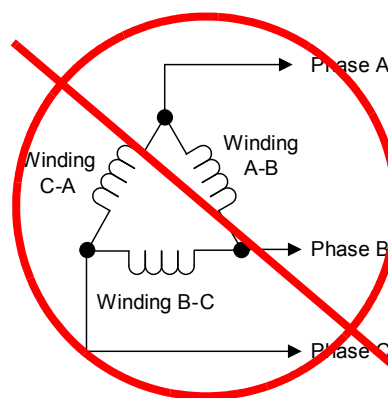
1. FLA = Full Load Amps; WSA = Wire Size Amps; OPD = Maximum Overcurrent Protection Device.
2. 208V–575V premium models must be connected to wye three-phase systems.
3. Wye 3-phase systems with solidly grounded neutral. Refer to 4.1.1 - Wye- vs. Delta-Connected Power Supply.

Table 6 Electrical data, Liebert Lee-Temp™ receiver, 60Hz

Rated Voltage - Single-Phase	120		208/230	
Watts/Receiver	150	300	150	300
Amps	1.4	2.8	0.7	1.4
Wire Size Amps	1.8	3.5	0.9	1.8
Maximum Overcurrent Protection Device, Amps	15	15	15	15

The Liebert Lee-Temp receiver requires a separate power feed for heaters. The condenser is not designed to supply power to the receiver heater pads.

4.1.1 Wye- vs. Delta-Connected Power Supply

Figure 22 Wye- vs. delta-connected power supply connection diagram**Wye-Connected Power Diagram****Delta-Connected Power Diagram**

NOTICE

Risk of improper input power. Can cause equipment damage.

The Liebert MC Condenser is designed to operate with wye-connected power with a solidly grounded neutral. It will not operate properly with wye-connected power with high-resistance (or impedance) ground or with delta-connected power. Refer to **4.1.1 - Wye- vs. Delta-Connected Power Supply**



NOTE

A separate neutral wire does not need to be run to the Liebert MC.

Acceptable Power Supplies—208V to 480V Nominal Units

- 208V wye with solidly grounded neutral and 120V line-to-ground
- 380V wye with solidly grounded neutral and 220V line-to-ground
- 480V wye with solidly grounded neutral and 277V line-to-ground

Unacceptable Power Supplies—208V to 480V Nominal Units

- Wye with high-resistance (or impedance) ground
- Delta without ground or with floating ground
- Delta with corner ground
- Delta with grounded center tap

4.2 Low-Voltage Control Wiring—CANbus Communication and Interlock Connections

NOTICE

Risk of control malfunction. Can cause improper unit operation.

Verify that all low-voltage electrical wiring has been performed per the schematic diagram provided and that all low-voltage wiring connections are tight.

CANbus communication and interlock wiring are required between the indoor and the outdoor units. CANbus cables are supplied by others to connect the indoor unit to the outdoor condenser. No special considerations are required when the total external cable connection between the indoor unit and outdoor unit is less than 450 ft. (137m). A CANbus isolator is required for total external cable connections longer than 450 ft. (137m) but less than 800 ft. (243m).

CANbus Cable Requirements

- conductors 22-18AWG stranded tinned copper
- twisted pair (minimum four twists per foot)
- braided shield or foil shield with drain wire
- shield must always be wired to ground at the indoor unit
- low capacitance (15pF/ft or less)
- UL-approved temperature rated to 75°C
- UL-approved voltage rated to 300V
- UV-resistant and moisture-resistant if not run in conduit
- plenum-rated NEC Type CMP, if required by national or local codes

Examples include: Belden 89207 (plenum-rated), or Alpha Wire 6454 Category 5, 5e or higher

Interlock wiring is field-supplied wiring between Terminals 70 and 71 for single-circuit models and Terminal 230 also for dual-circuit models.

Field-Supplied Wire

- 18AWG or greater
- rated 600V

Figure 23 CANbus communications and interlock connections between a Liebert DSE, two Liebert MC condensers and a Liebert EconoPhase

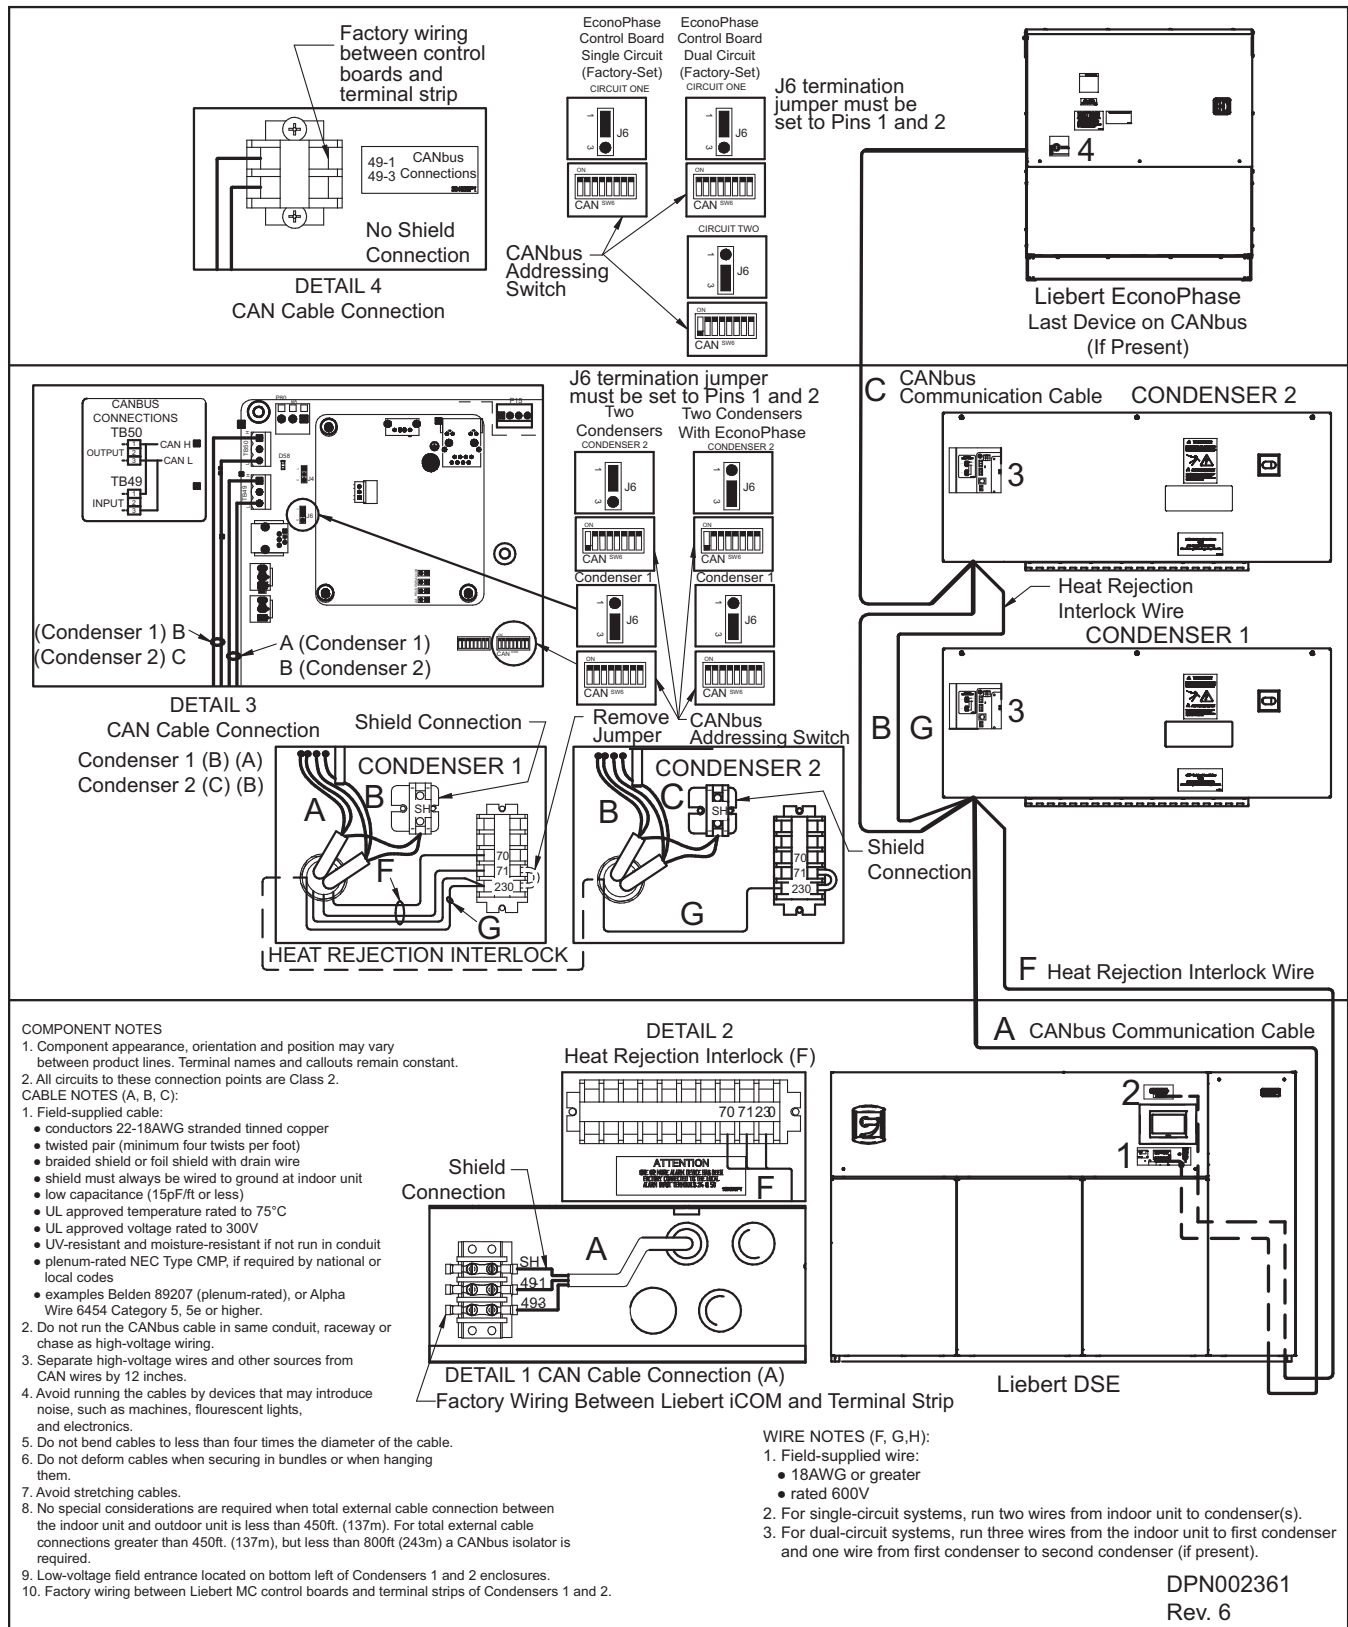


Figure 24 CANbus communication and interlock connections between a Liebert DSE, one premium Liebert MC and a Liebert EconoPhase

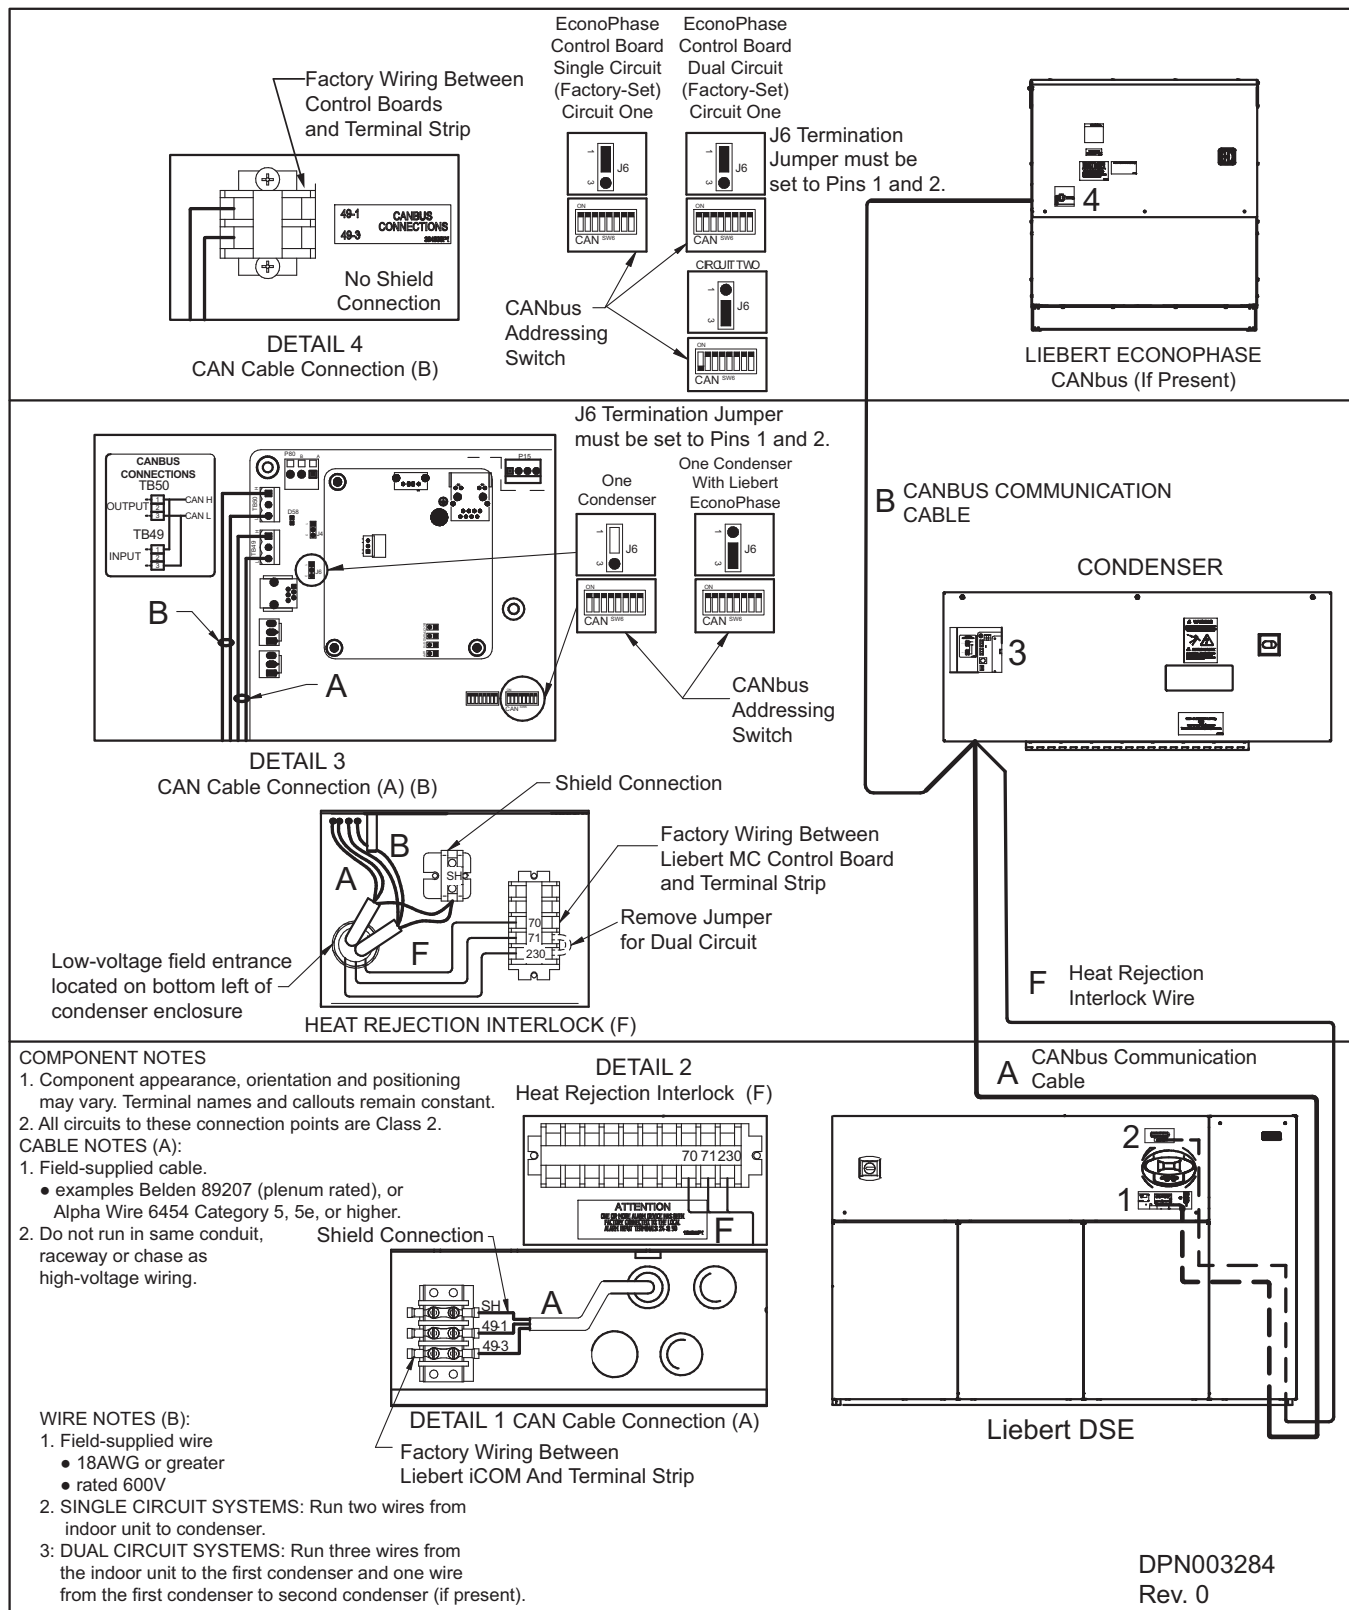


Figure 25 CANbus communications and interlock connections between a Liebert DS, Liebert MC condenser

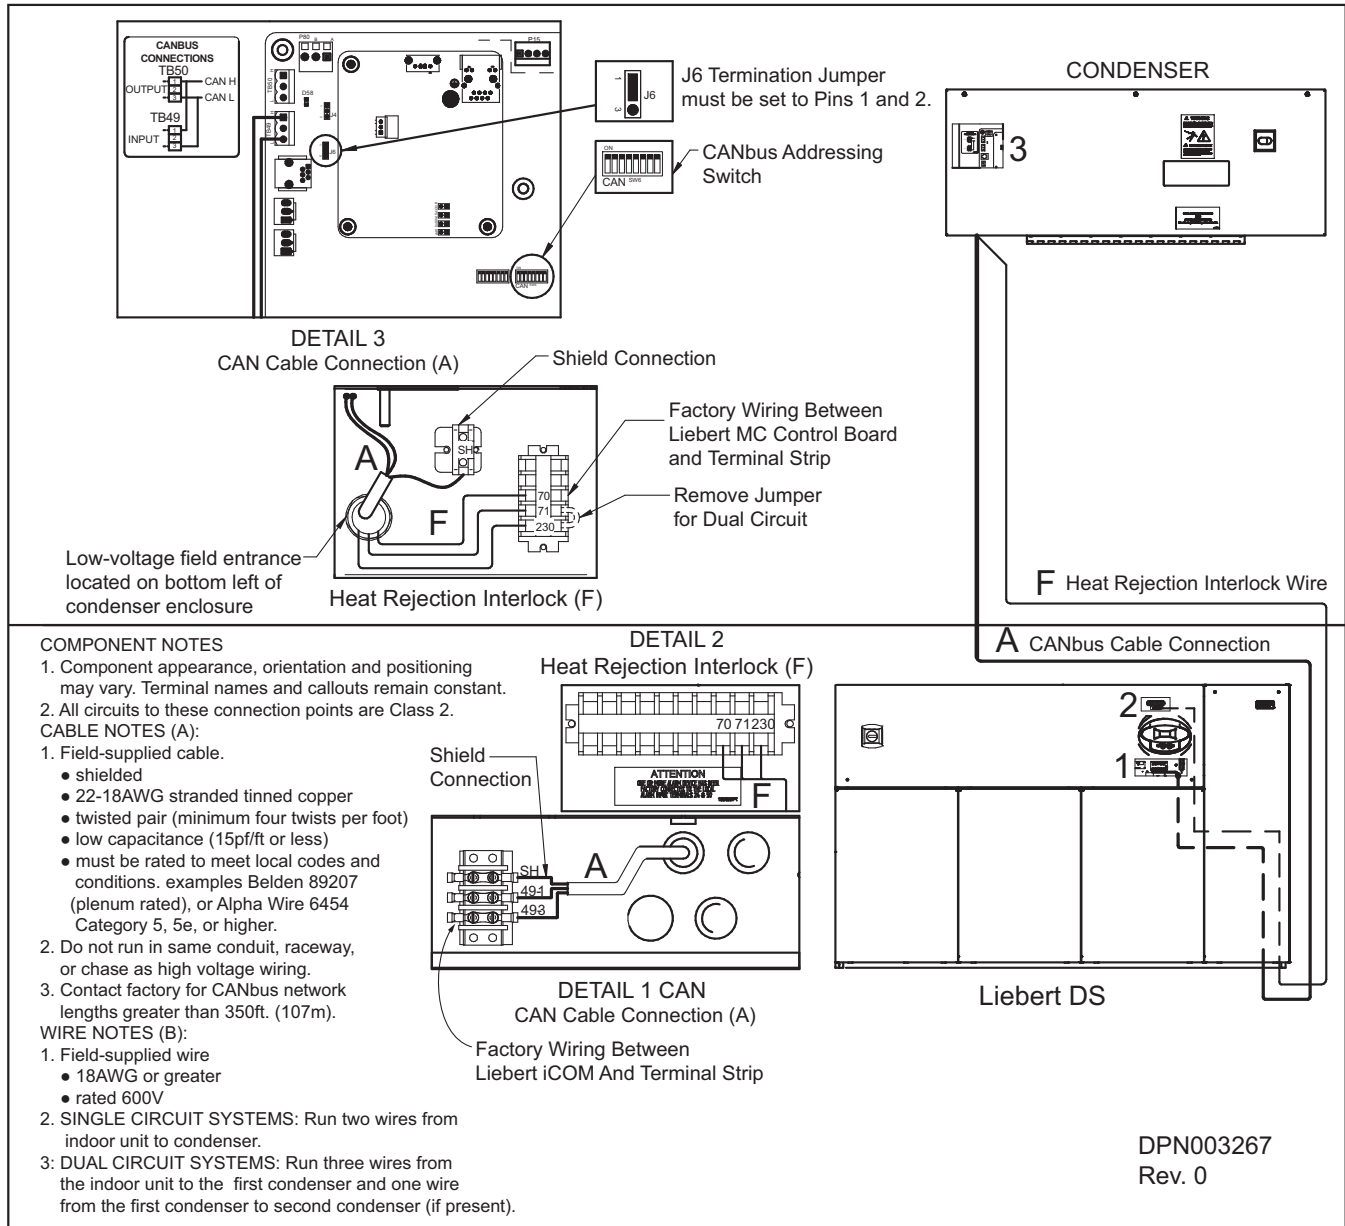


Figure 26 CANbus communication and interlock connections between a Liebert CRV 600mm (24in.) and a Liebert MC premium condenser

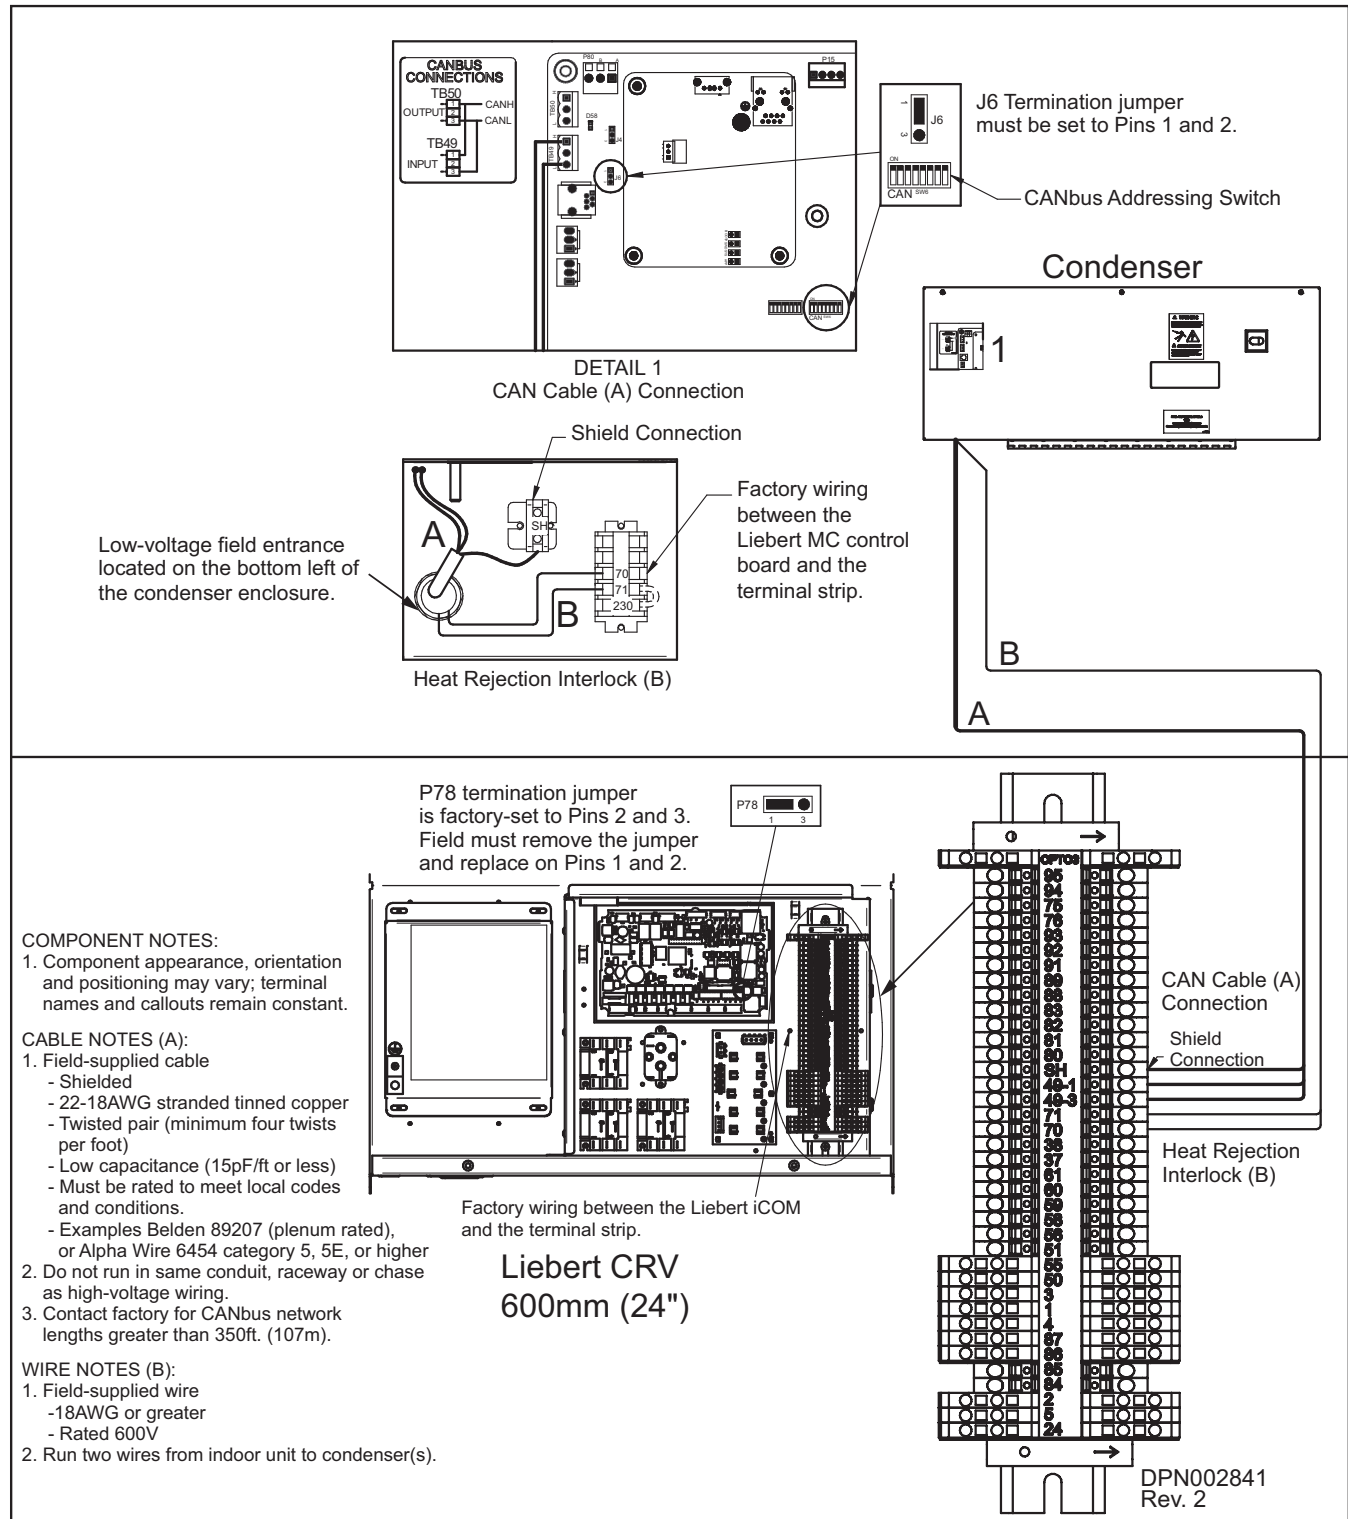


Figure 27 CANbus communications and interlock connection between Liebert CRV 300 (12in) and a Liebert MC premium condenser


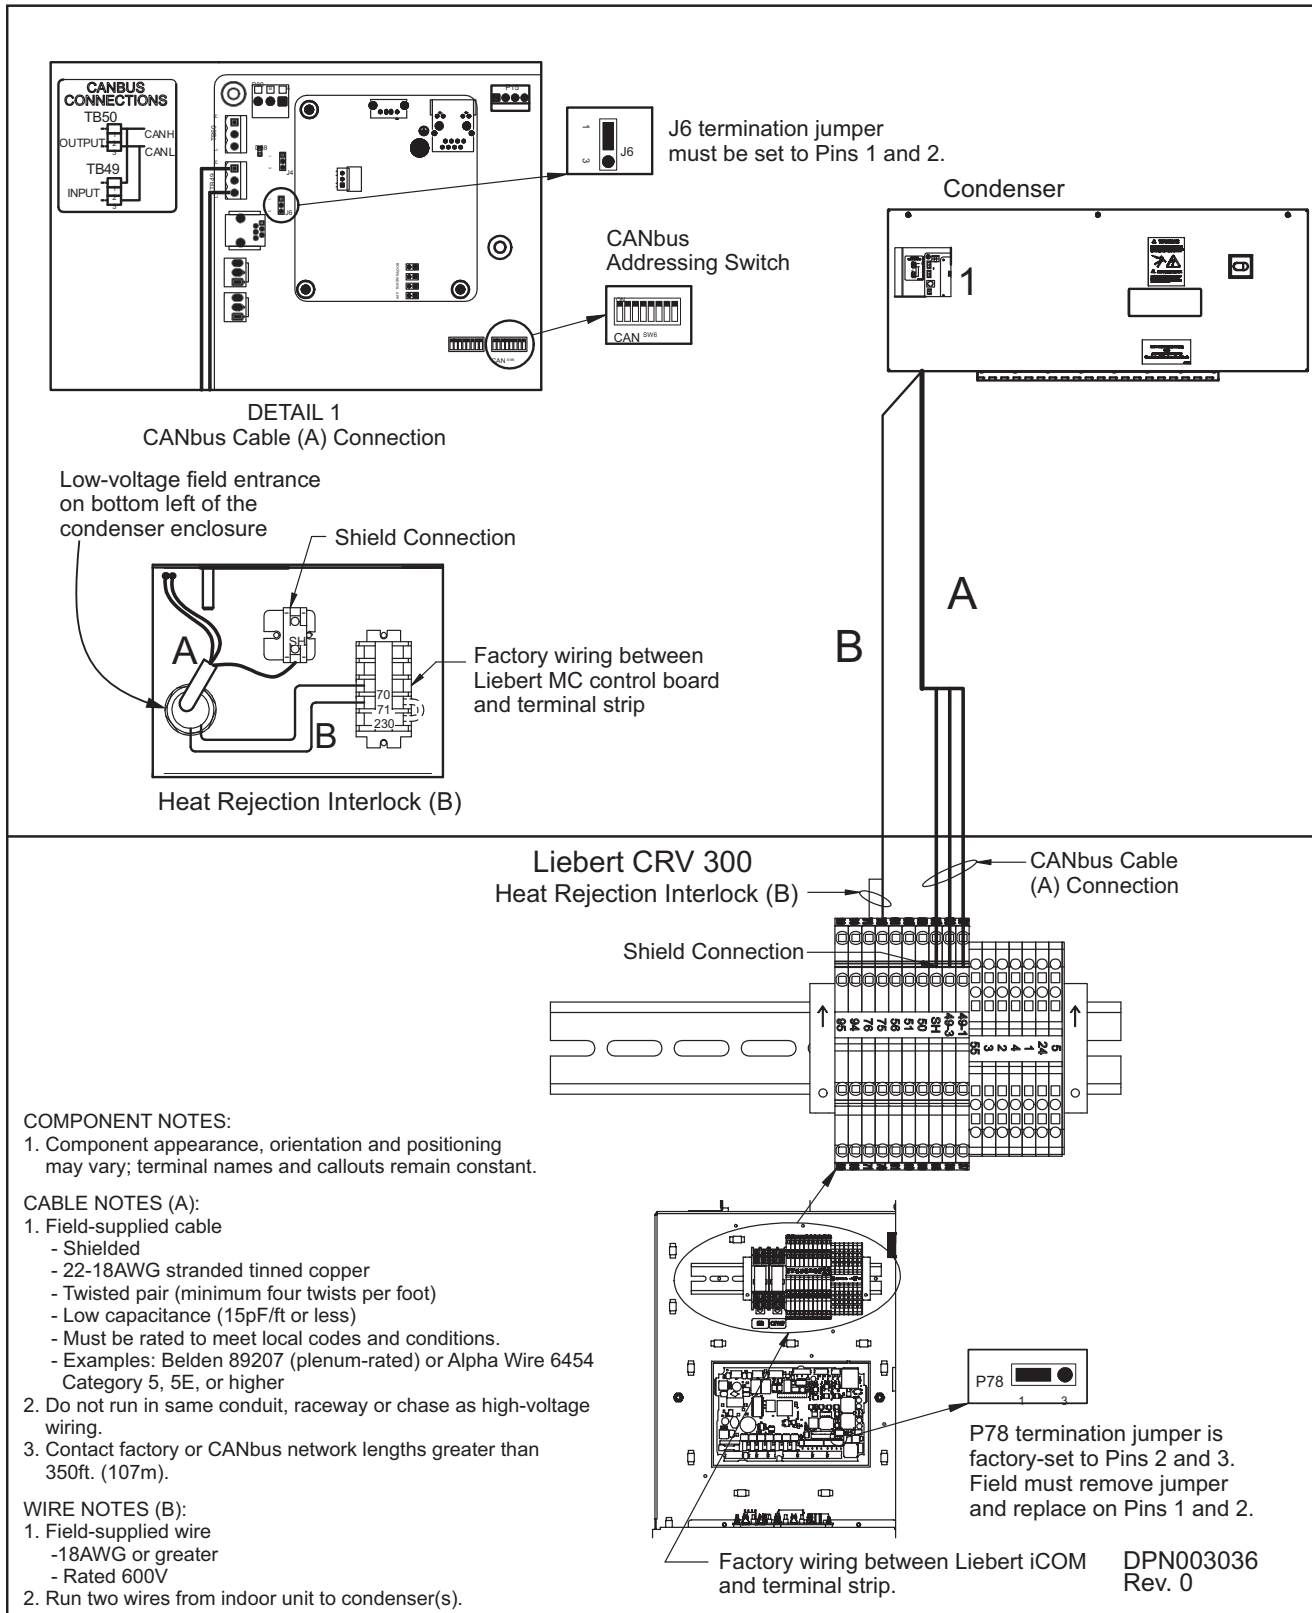



Figure 28 CANbus communication and interlock connection between Liebert PDX™ and a Liebert MC premium condenser

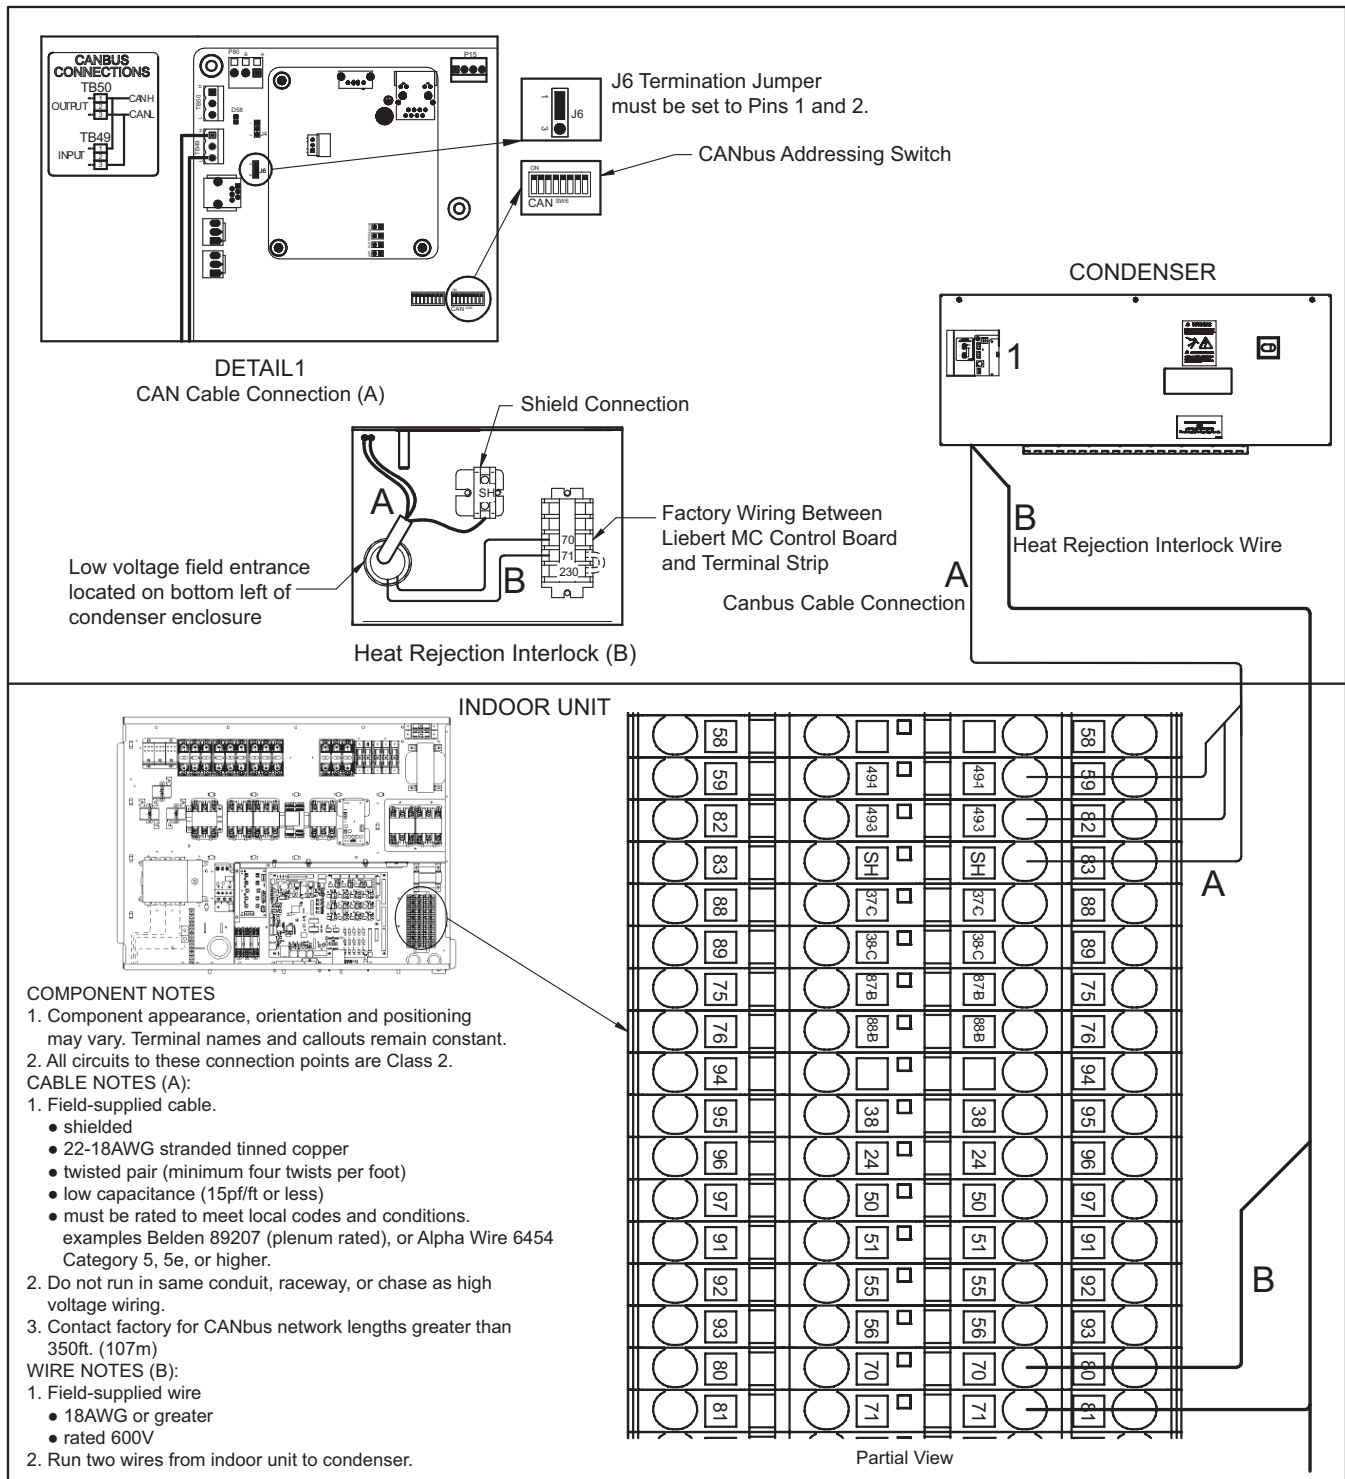

DPN003266
Rev. 0

4.2.1 Electrical Field Connection Descriptions

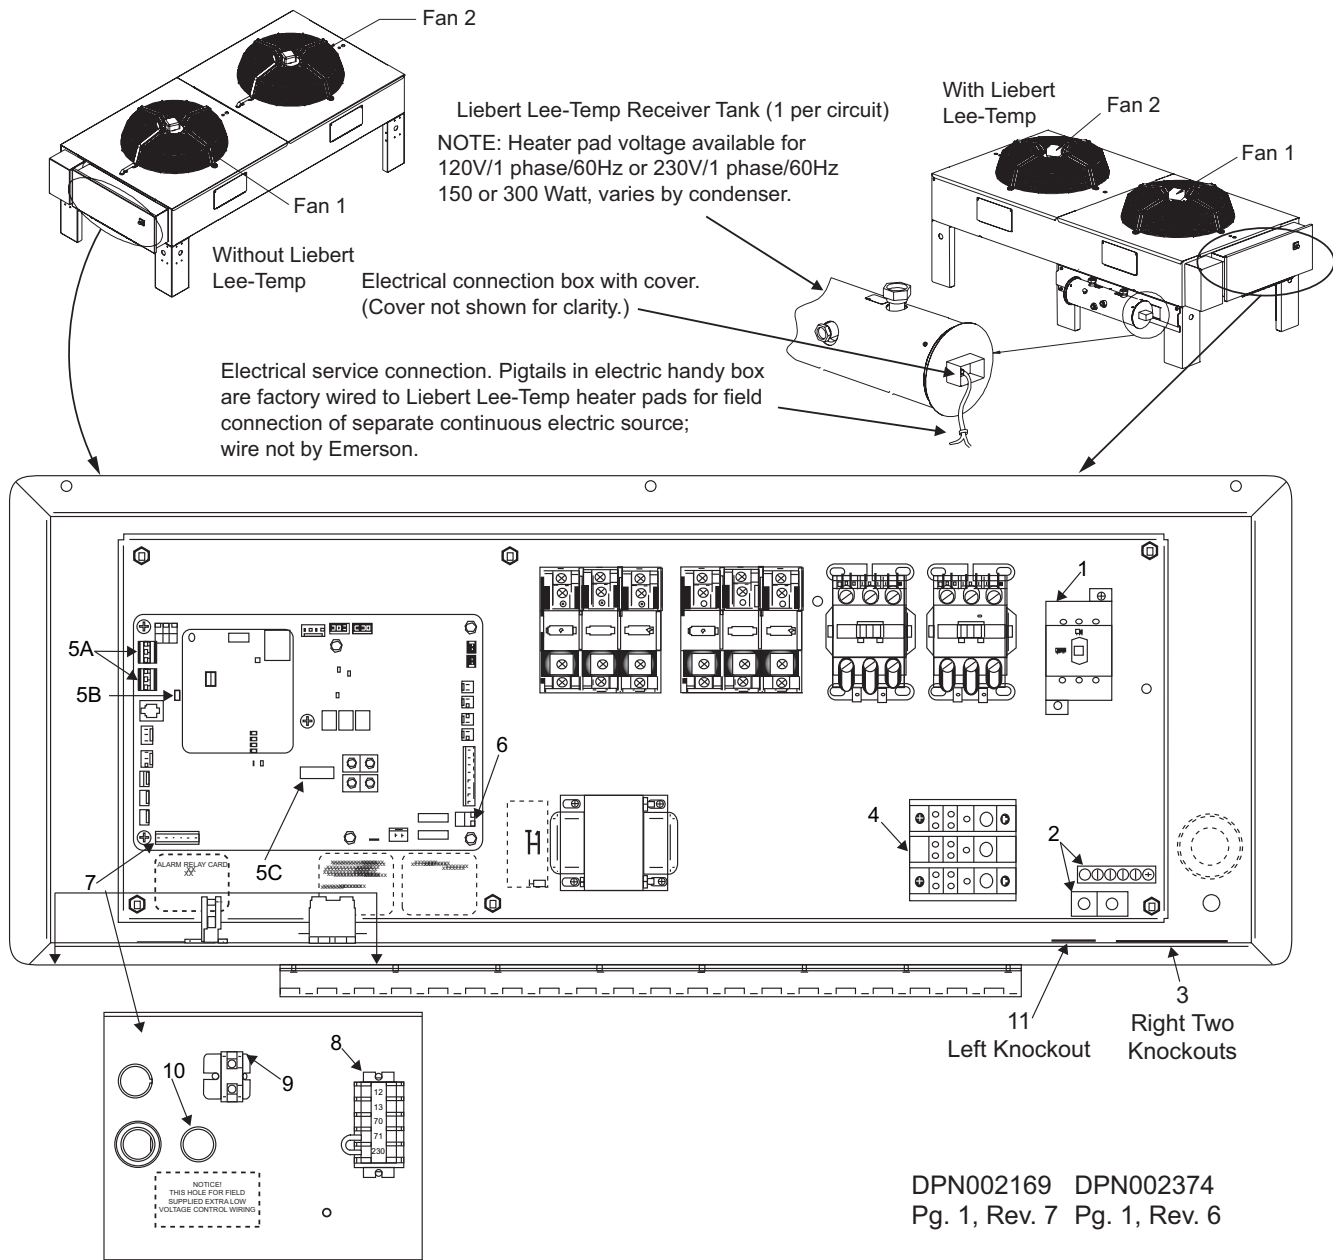Figure 29 Typical connections, Premium Efficiency Control



Key Electrical Details—Typical Connections, Premium Efficiency Control

Source: DPN002169, Rev. 7 and DPN002374, Rev. 6

- Three-Phase Electrical Service**—Terminals are on the top of the disconnect switch for one-fan and two-fan units. Terminals are on the bottom of the disconnect switch for three-fan and four-fan units. Three-phase service not by Emerson. See **NOTICE on page 37**.
- Earth Ground**—Field lug terminal for earth ground connection. Ground terminal strip for fan motor ground connection.
- Primary High-Voltage Entrance**—Two knockouts, each 7/8" (22.2mm) diameter, located at the bottom of the enclosure.
- SPD Field Connection Terminals**—High-voltage surge protective device (SPD) terminals. SPD is an optional device.

5. **CANbus Terminal Connections**—Field terminals for CANbus cable connection.
 - 5A is the CANbus connectors
 - TB49-1 is the input terminal for CANbus high.
 - TB49-3 is the input terminal for CANbus low.
 - TB50-1 is the output terminal for CANbus high.
 - TB50-3 is the output terminal for CANbus low.
 - Each CANbus cable shield is connected to terminal “SH;” see 9 below.
 - 5B is the “END OF LINE” jumper.
 - 5C is the CANbus “DEVICE ADDRESS DIP SWITCH.” CANbus cable not by Emerson. See requirements in Item 2 in **Notes on Electrical Connections**.
6. **Remote Unit Shutdown**—Replace exiting jumper between Terminals TB38-1 and TB38-2 with field-supplied, normally closed switch having a minimum 75VA, 24VAC rating. Use field-supplied Class 1 wiring. (This is an optional feature.)
7. **Alarm Terminal Connections**
 - a. Common Alarm Relay indicates when any type of alarm occurs. TB74-1 is common; TB74-2 is normally open; and TB74-3 is normally closed. 1A 24VAC is the maximum load. Use field-supplied Class 1 wiring.
 - b. Shutdown Alarm Relay indicates when condenser loses power or when a critical alarm has occurred that shuts down the condenser unit. TB74-4 is common; TB74-5 is normally open; and TB74-6 is normally closed. 1 Amp 24VAC is the maximum load. Use field-supplied Class 1 wiring.
8. **Indoor Unit Interlock and SPD Alarm Terminals**
 - a. On any call for compressor operation, normally open contact is closed across Terminals 70 and 71 for Circuit 1 and normally open contact is closed across Terminals 70 and 230 for Circuit 2 from indoor unit.
 - b. During SPD alarm, normally open contact is closed across Terminals 12 and 13. (SPD is an optional device.)
9. **CANbus Shield Terminal**—Terminal for field shield connection of the CANbus field-supplied cables. The shield of CANbus field-supplied cables must not be connected to ground at the condenser.
10. **Primary Low-Voltage Entrance**—One knockout, 7/8" (22.2mm) diameter, that is free for customer low-voltage wiring.
11. **SPD entrance**—One knockout, 7/8" (22.2mm) diameter at the bottom of the enclosure. (High-voltage surge protective device is optional.)

Notes on Electrical Connections

1. Refer to specification sheet for unit voltage ratings, full load amp and wire size amp ratings.
2. The CANbus wiring is field supplied and must be:
 - Conductors 22-18AWG stranded tinned copper
 - Twisted pair (minimum four twists per foot)
 - Braided shield or foil shield with drain wire
 - Shield must be wired to ground at indoor unit
 - Low capacitance (15pF/ft or less)
 - UL-approved temperature rated to 167°F (75°C)
 - UL-approved voltage rated to 300V
 - UV-resistant and moisture-resistant if not run in conduit

Examples: Belden Part # 89207 (plenum rated) or Alpha Wire Part # 6454 (UV-resistant outdoor rated) Category 5, 5e or higher.
3. Do not run the CANbus cable in the same conduit, raceway or chase as high voltage wiring.
4. No special considerations are required when the total external cable connection between the indoor unit and outdoor unit(s) is less than 450 ft. (137m). A CANbus isolator is required for total external cable connections greater than 450 ft. (137m) but less than 800 ft. (243m).
5. All wiring must be sized and selected for insulation case per NEC and other applicable codes.
6. Do not bend cables to less than four times the diameter of the cable.
7. Do not deform cables when securing in bundles or when hanging them.
8. Avoid running the cables by devices that may introduce noise, such as machines, fluorescent lights, and electronics.
9. Avoid stretching cables.
10. Keep CANbus cables at least 12 inches (305mm) from high-voltage sources, including wiring.

NOTICE

Risk of improper input power. Can cause equipment damage.

The Liebert MC Condenser must only be supplied with wye-connected electric power with a solidly grounded neutral. It will not operate properly with wye-connected power with high-resistance (or impedance) ground or with delta-connected power. Refer to **4.1.1 - Wye- vs.**

Delta-Connected Power Supply

Acceptable Power Supplies—208V to 480V Nominal Units

- 208V wye with solidly grounded neutral and 120V line-to-ground
- 380V wye with solidly grounded neutral and 220V line-to-ground
- 480V wye with solidly grounded neutral and 277V line-to-ground

Unacceptable Power Supplies—208V to 480V Nominal Units

- Wye with high-resistance (or impedance) ground
- Delta without ground or with floating ground
- Delta with corner ground
- Delta with grounded center tap

5.0 PIPING



WARNING

Risk of explosive discharge from high-pressure refrigerant. Can cause equipment damage, injury or death.

Relieve pressure before working with or cutting into piping.



WARNING

Risk of refrigerant system rupture or explosion from overpressurization. Can cause equipment damage, injury or death.

Local building and plumbing codes may require that a fusible plug or other type of pressure relief device be installed in the system. Do not install a shutoff valve between the compressor and the field-installed relief device.

Consult local building and plumbing codes for installation requirements of additional pressure relief devices when isolation valves are installed as shown in **Figure 30**. Do not isolate any refrigerant circuits from overpressurization protection.



NOTE

POE (polyol ester) oil, required with R-407C/R-410A and used with some R-22 systems, is much more hygroscopic than mineral oils. This means that POE oil absorbs water at a much faster rate when exposed to air than previously used mineral oils. Because water is the enemy of a reliable refrigeration system, extreme care must be used when opening systems during installation or service. If water is absorbed into the POE oil, it will not be easily removed and will not be removed through the normal evacuation process. If the oil is too wet, it may require an oil change. POE oils also have a property that makes them act as a solvent in a refrigeration system. Maintaining system cleanliness is extremely important because the oil will tend to bring any foreign matter back to the compressor or plug the microchannel coil. Always use a flow of dry nitrogen when brazing.

5.1 Piping Guidelines

Indoor units and condensers both ship with holding charges of inert gas. Do not vent the condenser until all refrigerant piping is in place, ready for connection to indoor unit and condenser.

- Use copper piping with a brazing alloy with a minimum temperature of 1350°F (732°C), such as Sil-Fos. Avoid soft solders such as 50/50 or 95/5.
- Use a flow of dry nitrogen through the piping during brazing to prevent formation of copper oxide scale inside the piping. When copper is heated in the presence of air, copper oxide forms. POE oil will dissolve these oxides from inside the copper pipes and deposit them throughout the system, clogging filter driers and affecting other system components.
- A pure dry nitrogen flow of 1-3 ft³/min (0.5-1.5 l/s) inside the pipe during brazing is sufficient to displace the air. Control the flow using a suitable metering device.
- Ensure that the tubing surfaces to be brazed are clean and that the ends of the tubes have been carefully reamed to remove any burrs.
- Ensure that all loose material has been cleaned from inside the tubing before brazing.
- Protect all refrigerant line components within 18" (460mm) of the brazing site by wrapping them with wet cloth or suitable heat sink compound.
- Isolate piping from building using vibration isolating supports.
- Refer to the indoor unit's user manual for appropriate piping sizes.
- Install traps on the hot gas (discharge) lines at the bottom of any rise over 5 feet high. If the rise exceeds 25 feet (7.5m), then install a trap in 20 foot (6m) increments or evenly divided.
- Pitch horizontal hot gas piping down at a minimum rate of 1/2" per 10 ft. (42mm per 10m) so that gravity will aid in moving oil in the direction of refrigerant/oil flow.
- Consult factory if Liebert Lee-Temp™ condenser is below the evaporator or if a condenser not equipped with Liebert Lee-Temp is more than 15 ft (4.6m) below the evaporator.
- Consult factory if piping run exceeds 150 feet (46m) equivalent length on traditional R-407C DX units.


- Consult factory if piping run exceeds 300 feet (91m) equivalent length on traditional R-410A DX units.
- Consult factory if piping run exceeds 300 feet (91m) actual length or 450 feet (137m) equivalent length on units installed with Liebert EconoPhase units.
- Keep piping clean and dry, especially on units with POE oil (R-407C, R-410A or R-22 refrigerant).
- Avoid piping runs through noise-sensitive areas.
- Do not run piping directly in front of indoor unit discharge airstream.
- Refrigerant oil – do not mix oil types or viscosities. Consult indoor unit for refrigerant type and oil requirements.

**NOTE**

Failure to use compressor oils recommended by compressor manufacturer will void compressor warranty. Consult Emerson or the compressor manufacturer for further recommendations or if you have questions about compressor oils.

Refer to ASHRAE Refrigeration Handbook for general good practices for refrigeration piping. The Liebert indoor cooling unit has a factory-installed high-pressure safety switch in the high side refrigerant circuit. A pressure relief valve is provided with Liebert Lee-Temp™ receivers. A fusible plug is factory installed in the Liebert DSE™ receivers. Consult local building codes to determine if condensers without receivers will require field-provided pressure relief devices. A fusible plug kit is available for field installation.

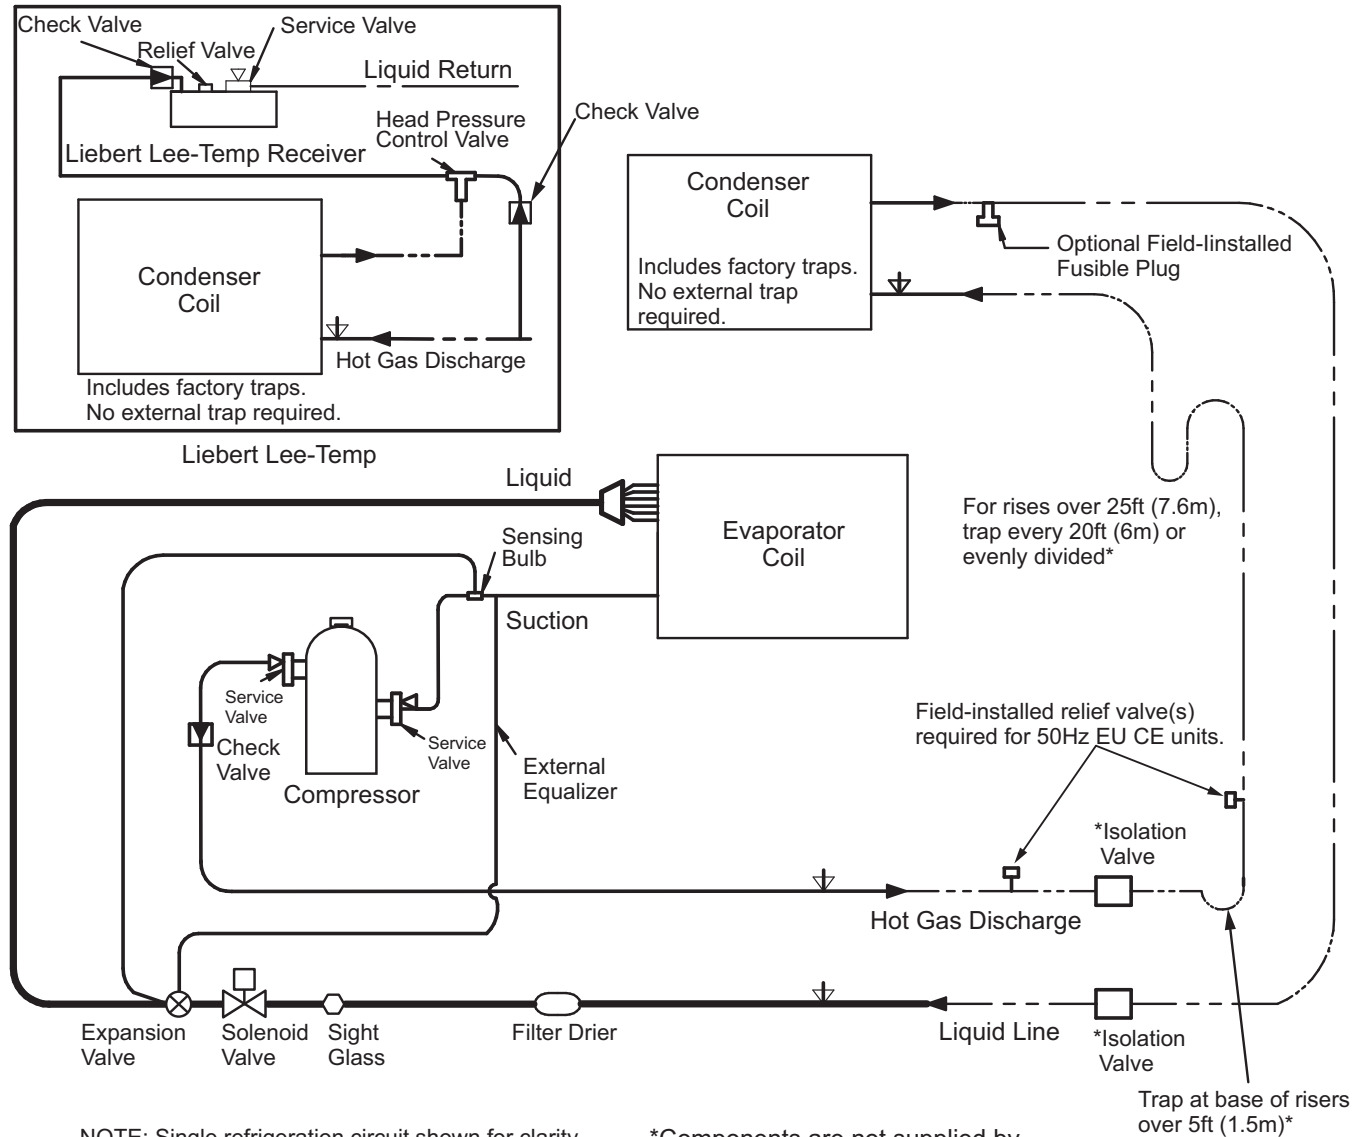Figure 30 Piping schematic—DX systems



NOTE: Single refrigeration circuit shown for clarity.

— Refrigerant Piping

- - - Field Piping


▽ Service/Schrader (access) connection no valve core

▽ Service/Schrader (access) connection with valve core


NOTE: Schematic representation shown. Do not use for specific connection locations.

DPN002188

Rev. 3

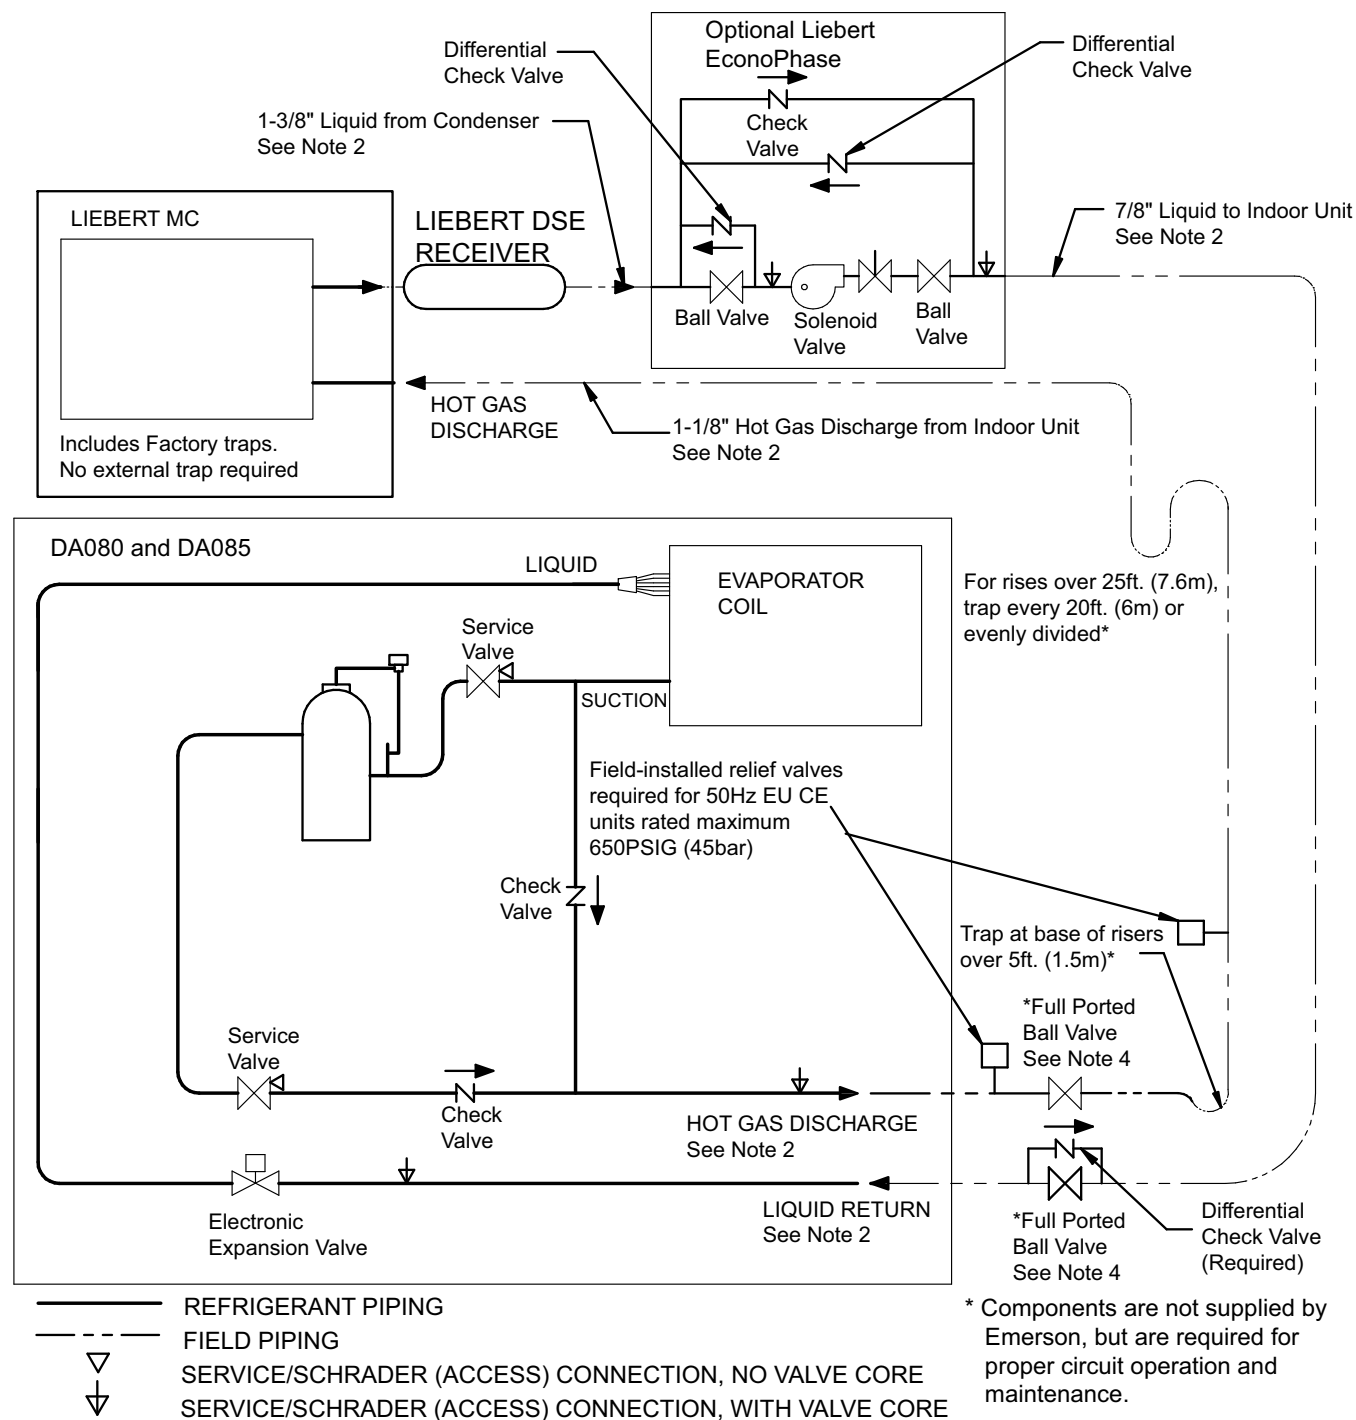Figure 31 Piping schematic—Liebert DSE™, air-cooled DA080 and DA085 models

DPN002615
Rev. 4

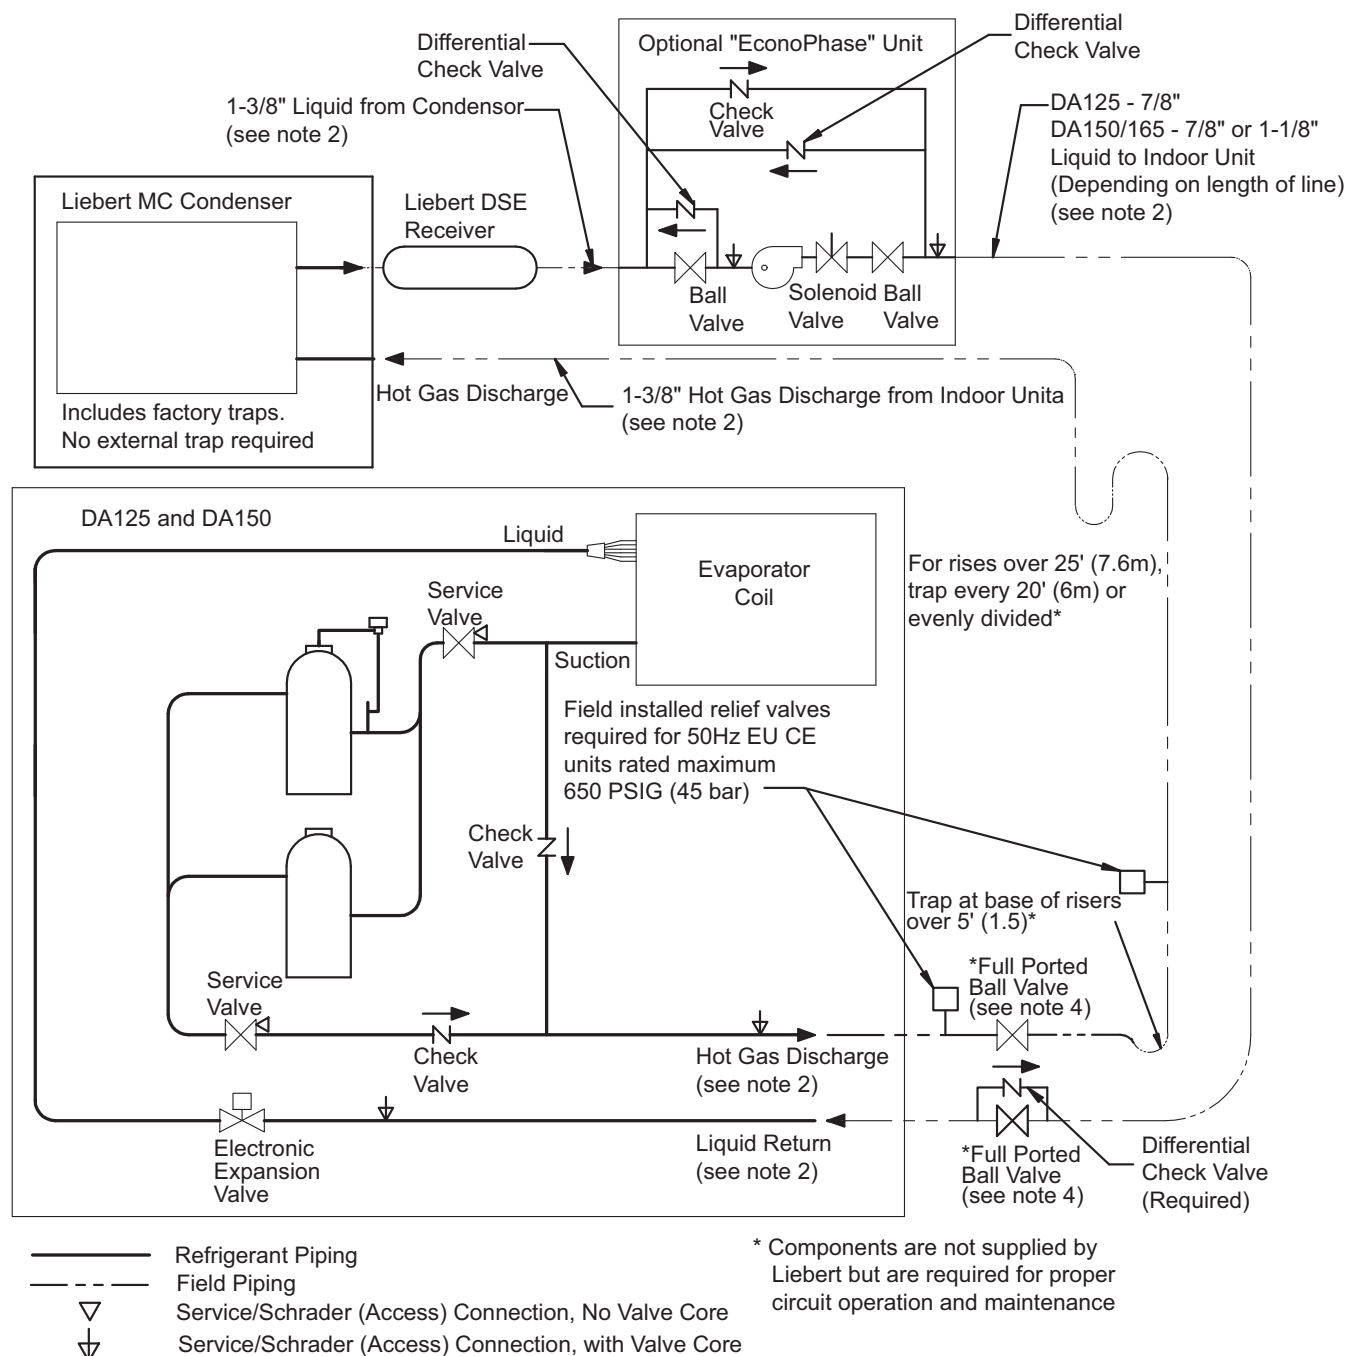Figure 32 Piping schematic—Liebert DSE™, air-cooled DA125, DA150 and DA165 models

DPN002340
Rev. 7

5.2 Field Piping Guidelines

One discharge line and one liquid line must be field-installed for each circuit of the indoor unit and the outdoor condenser(s). Dual circuit condensers are available for most dual circuit indoor unit applications. Refer to **Figures 30** through **34** for additional field-installed piping needed at the condenser. This piping is needed for proper system performance and for installation/interconnecting receivers and head pressure control valves for Liebert Lee-Temp™ systems.



NOTE

Keep the evaporator unit and condenser closed with their factory charge of inert gas while all field piping is installed. Keep the field piping clean and dry during installation, and do not allow it to stand open to the atmosphere.

When all the field interconnecting piping is in place, vent the condenser's inert gas charge and connect to the field piping. Finally, vent the evaporator unit's charge of inert gas and make its piping connection last.

Follow all proper brazing practices, including a dry nitrogen purge to maintain system cleanliness.

The condenser connection pipes must be wrapped with a wet cloth to keep the pressure and temperature sensors cool during any brazing.

5.2.1 Field Piping Guidelines for a Liebert DX System and Liebert MC Condenser

Figure 33 Liebert MC Condenser piping—Single-circuit, 1-, 2-, 3- and 4-fan units

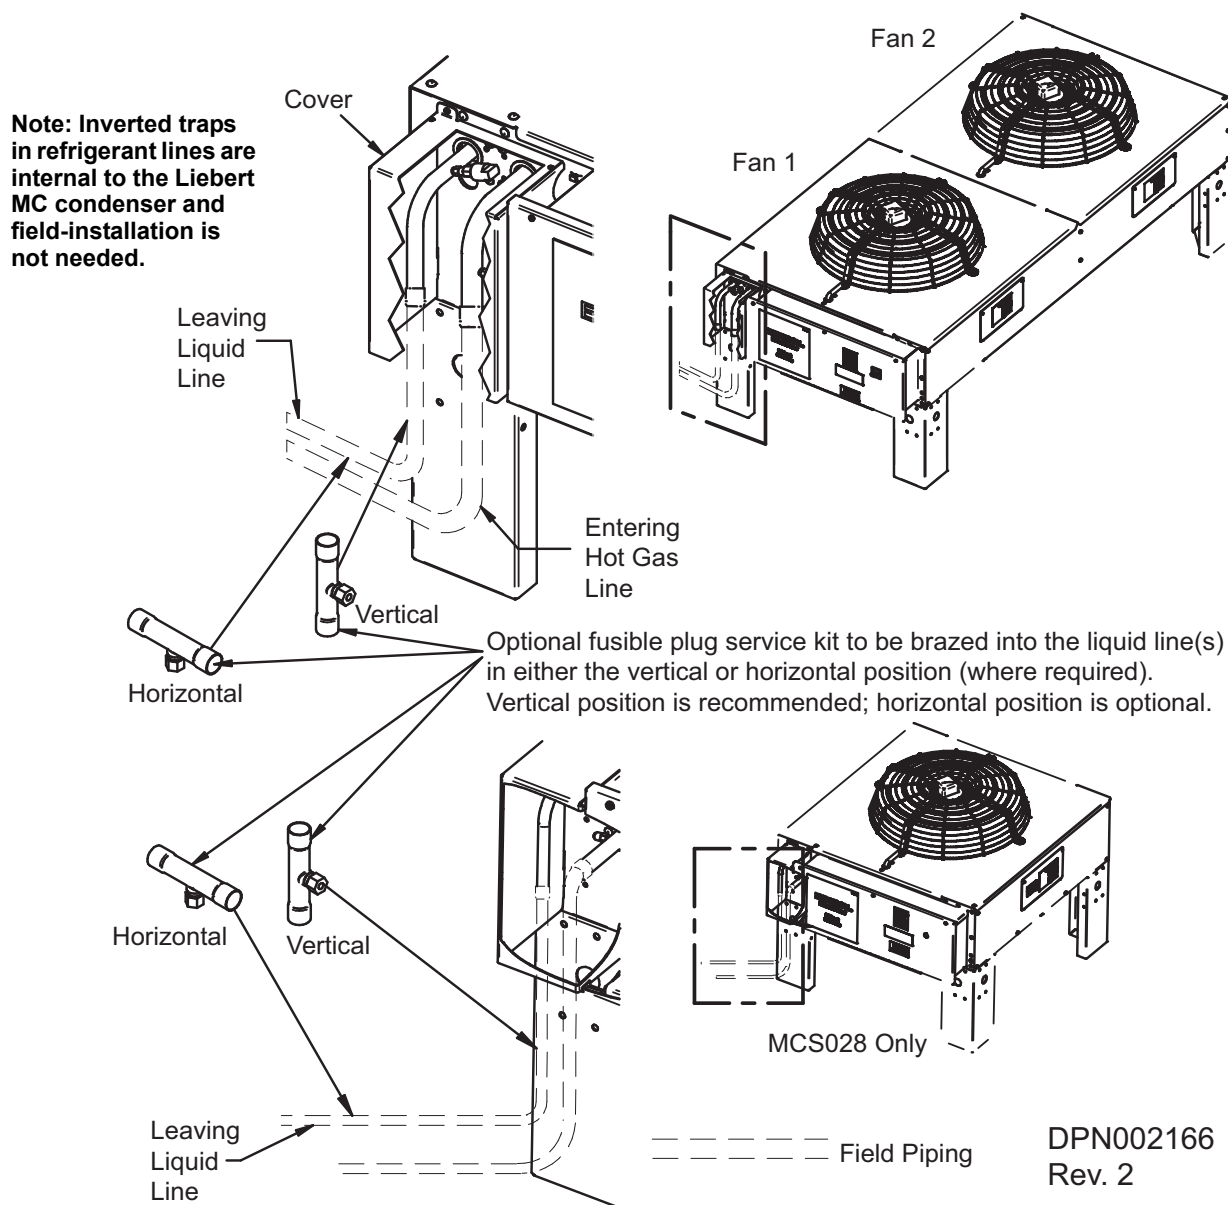



Table 7 Liebert MC Condenser piping sizes—Single-circuit units

Model No.	Number of Fans	Condenser Circuits	Connection Sizes, OD, in (mm)	
			Hot Gas Line	Liquid Line
MCS028	1	1	7/8	5/8
MCM040	1	1	7/8	5/8
MCM080	2	1	1-1/8	7/8
MCL055	1	1	1-1/8	7/8
MCL 110	2	1	1-3/8	1-1/8
MCL 165	3	1	1-3/8	1-1/8
MCL 220	4	1	1-5/8	1-3/8

Source: DPN002166, Rev. 2

Figure 34 Condenser piping for single-circuit condensers (with Liebert Lee-Temp™)

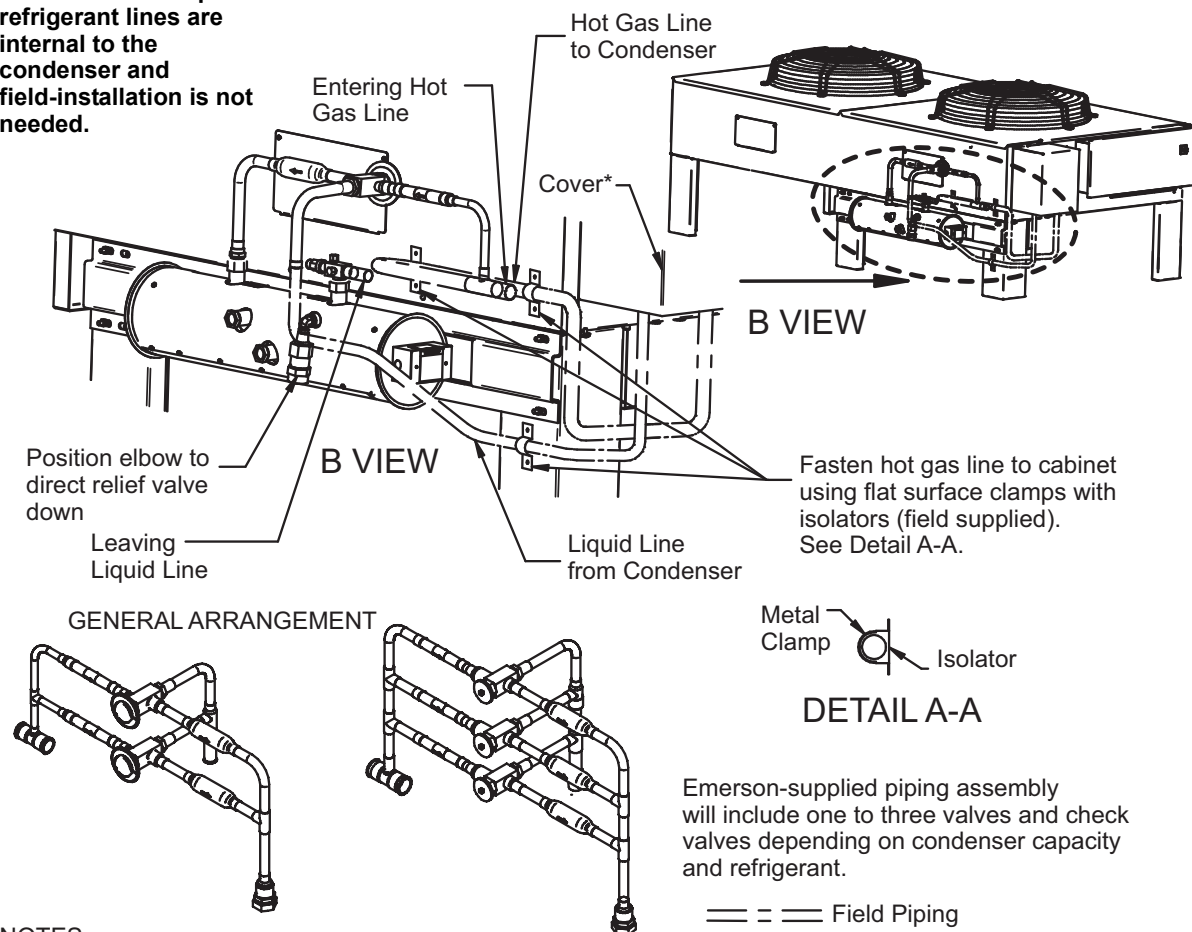Note: Inverted traps in refrigerant lines are internal to the condenser and field-installation is not needed.

**NOTES:**

1. The following materials are supplied by Emerson, and are shipped loose for each circuit and for field installation: insulated Liebert Lee-Temp receiver tank with electric heater pads and sight glasses, piping assembly with head pressure control valve and check valve, and rotalock valve and pressure relief valve. All other piping and electrical wiring to be supplied and installed by others. Additional condenser leg per circuit when required, ships with the condenser.
2. Consult the factory for proper line sizing for runs longer than 150ft. (45.7m) equivalent length using R-407C and 300ft. (91m) equivalent length using R-410A.


*Shipping cover is not necessary for proper condenser operation and may be recycled if field piping interferes with proper reattachment.

DPN002167
Rev 5

Table 8 Condenser piping connection sizes—Single-circuit condensers with Liebert Lee-Temp

Model #	Condenser Connections, OD, In		Liebert Lee-Temp Connections		
	Hot Gas	Liquid	Hot Gas Tee IDS, In.	Liquid Line to Liebert Lee-Temp Valve, ODS, In.	Receiver Out Rotalock, IDS, In.
MCS028	7/8	5/8	7/8	5/8	5/8
MCM040	7/8	5/8	7/8	5/8	5/8
MCM080	1-1/8	7/8	1-1/8	7/8	1-1/8
MCL055	1-1/8	7/8	1-1/8	7/8	7/8
MCL110	1-3/8	1-1/8	1-3/8	1-1/8	1-1/8
MCL165	1-3/8	1-1/8	1-3/8	1-1/8	1-1/8
MCL220	1-5/8	1-3/8	1-5/8	1-3/8	1-3/8

Source: DPN002167, Rev. 5

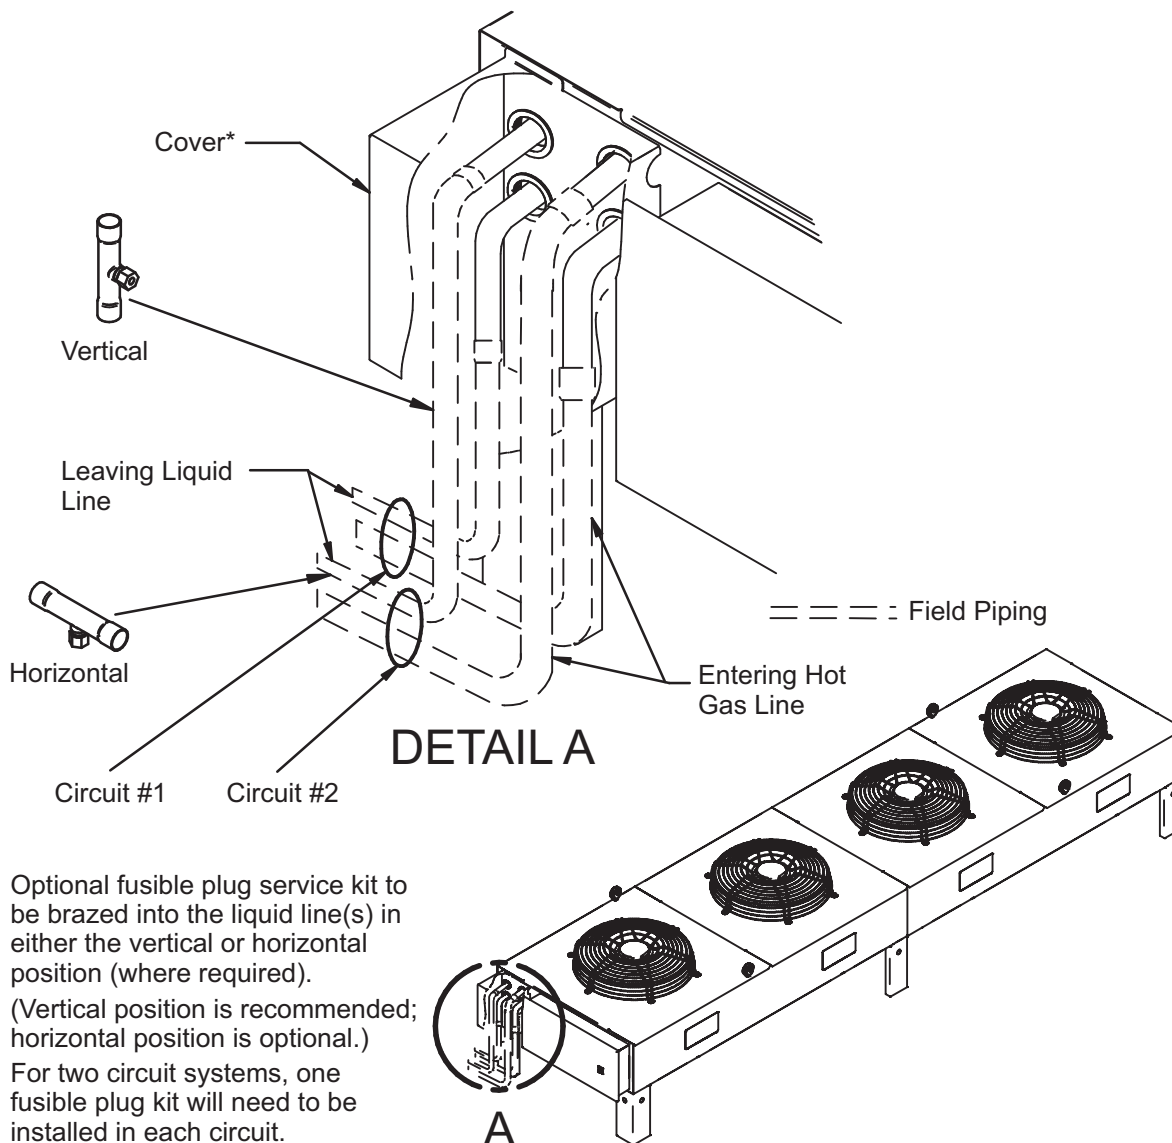Figure 35 Piping: dimensions—Dual circuit two-fan and four-fan units


*Shipping cover is not necessary for proper condenser operation and may be recycled if field piping interferes with proper reattachment.

DPN002425
Rev. 4

Table 9 Piping: dimensions—Dual-circuit, two-fan and four-fan units

Model #	# of Fans	Condenser Circuits	Connection Sizes, OD, in	
			Hot Gas Line	Liquid Line
MCS056	2	2	7/8	5/8
MCM080	2	2	7/8	5/8
MCL110	2	2	1-1/8	7/8
MCM160	4	2	1-1/8	7/8
MCL220	4	2	1-3/8	1-1/8

Source: DPN002425, Rev. 4

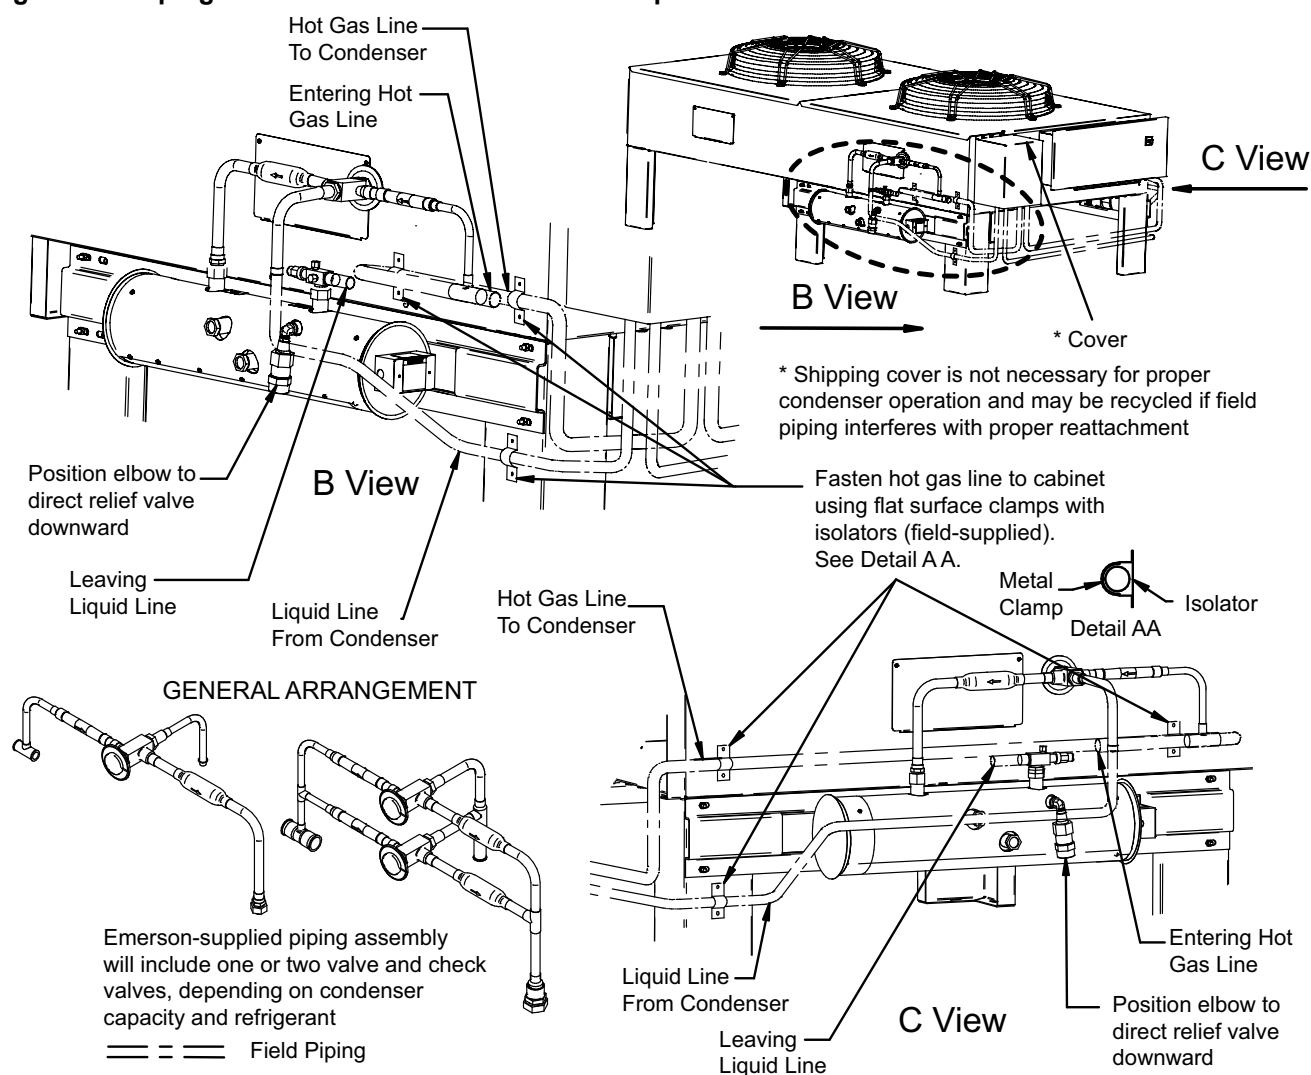Figure 36 Piping: Dimensions with Liebert Lee-Temp™—Dual circuit condensers

Note:

1. The following materials are supplied by Emerson for each circuit (shipped loose with condenser) for field installation: insulated Liebert Lee-Temp receiver tank with sight glasses, piping assembly with head pressure control valve, check valve, rotalock valve and pressure relief valve. All other piping and electrical wiring to be supplied and installed by others. An additional condenser leg per circuit to be shipped with the condenser.
2. Consult factory for proper line sizing for runs longer than 150ft. (45.7m) equivalent length using R-407C and 300ft. (91m) equivalent length using R-410A.

DPN002426

Rev. 6

Table 10 Condenser piping connection sizes—Dual-circuit condensers with Liebert Lee-Temp

Model #	Condenser Connections, OD.In			Liebert Lee-Temp Connections		
	Condenser Circuits	Hot Gas	Liquid	Hot Gas Tee IDS In.	Liquid Line to Lee-Temp Valve ODS, In.	Receiver Out Rotalock IDS In.
MCS056	2	7/8	5/8	7/8	5/8	5/8
MCM080	2	7/8	5/8	7/8	5/8	5/8
MCL110	2	1-1/8	7/8	1-1/8	7/8	7/8
MCL160	2	1-1/8	7/8	1-1/8	7/8	1-1/8
MCL220	2	1-3/8	1-1/8	1-3/8	1-1/8	1-1/8

Source: DPN002426, Rev. 6

5.2.2 Field Piping Guidelines for a Liebert DSE and Liebert Premium MC Condenser

Figure 37 Condenser and Liebert EconoPhase™, typical unit arrangement diagram layout



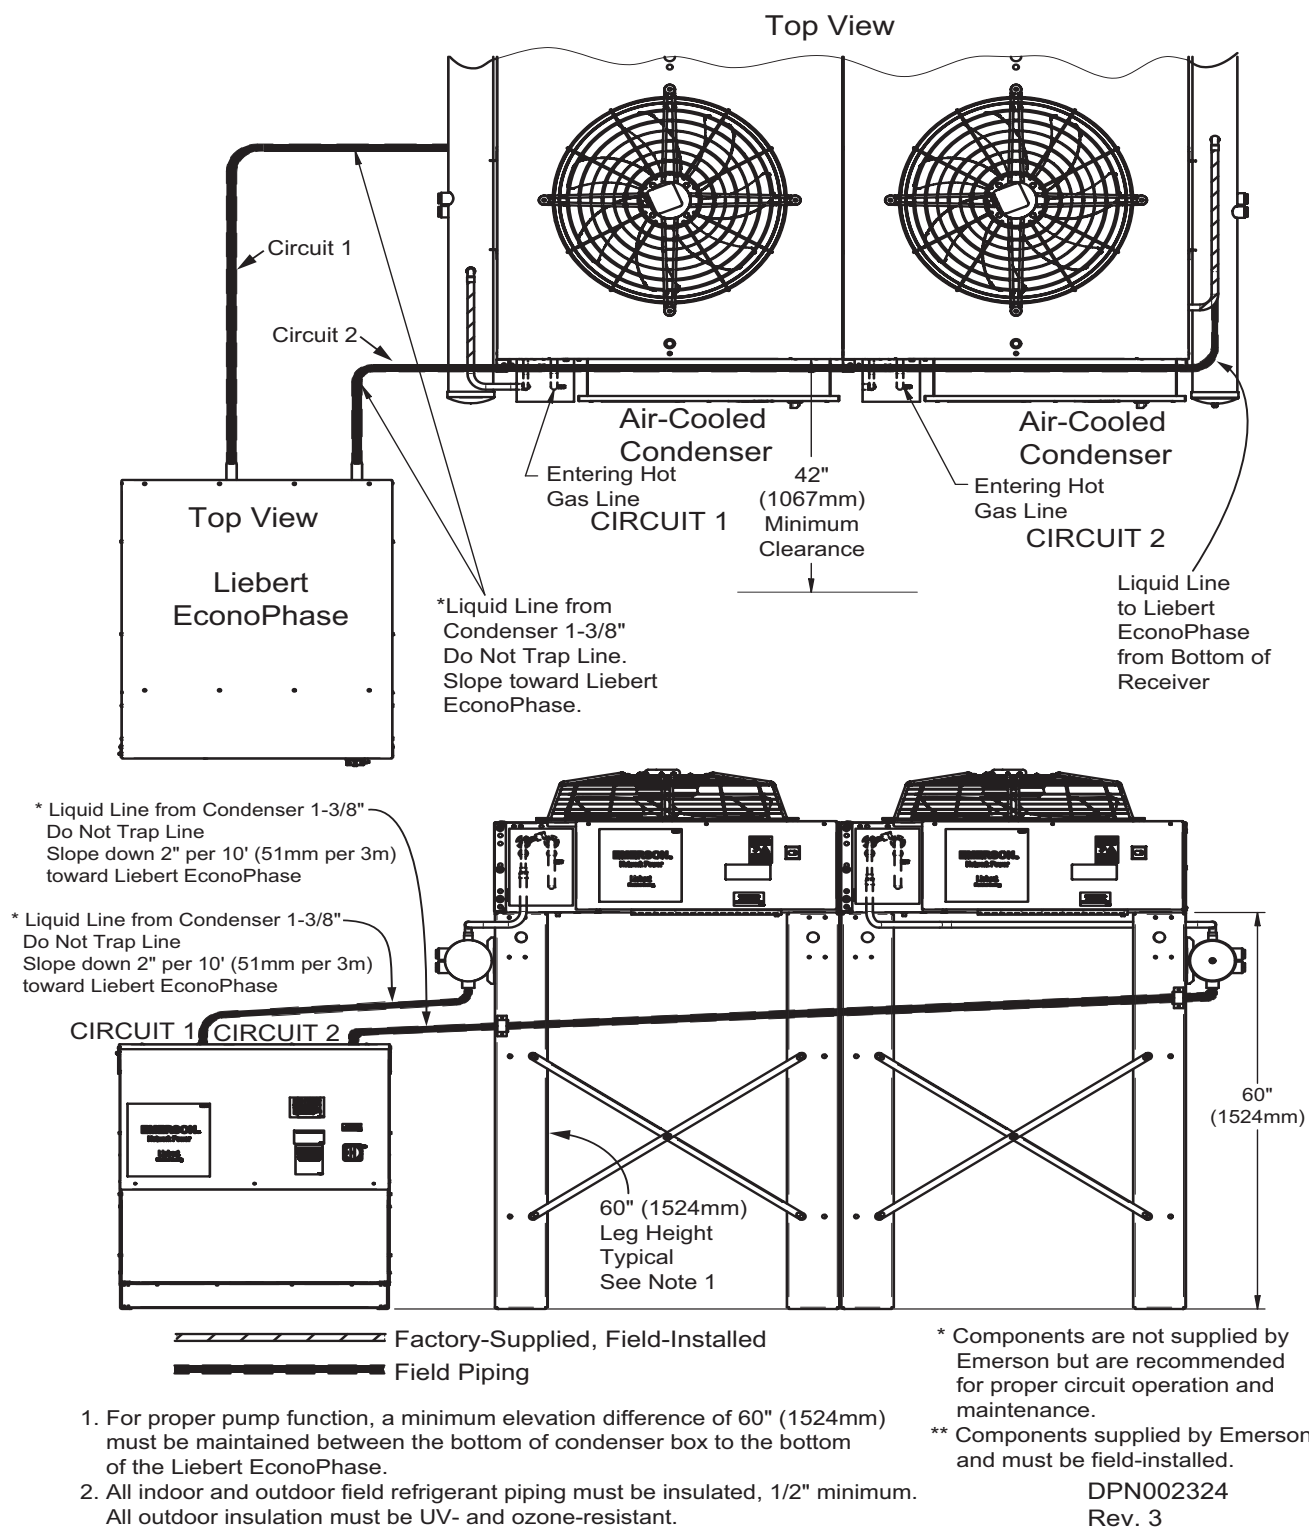


Figure 38 Typical receiver Liebert DSE mounting, MCL165 and MCL220 single-circuit condenser, left side condenser outlet receiver

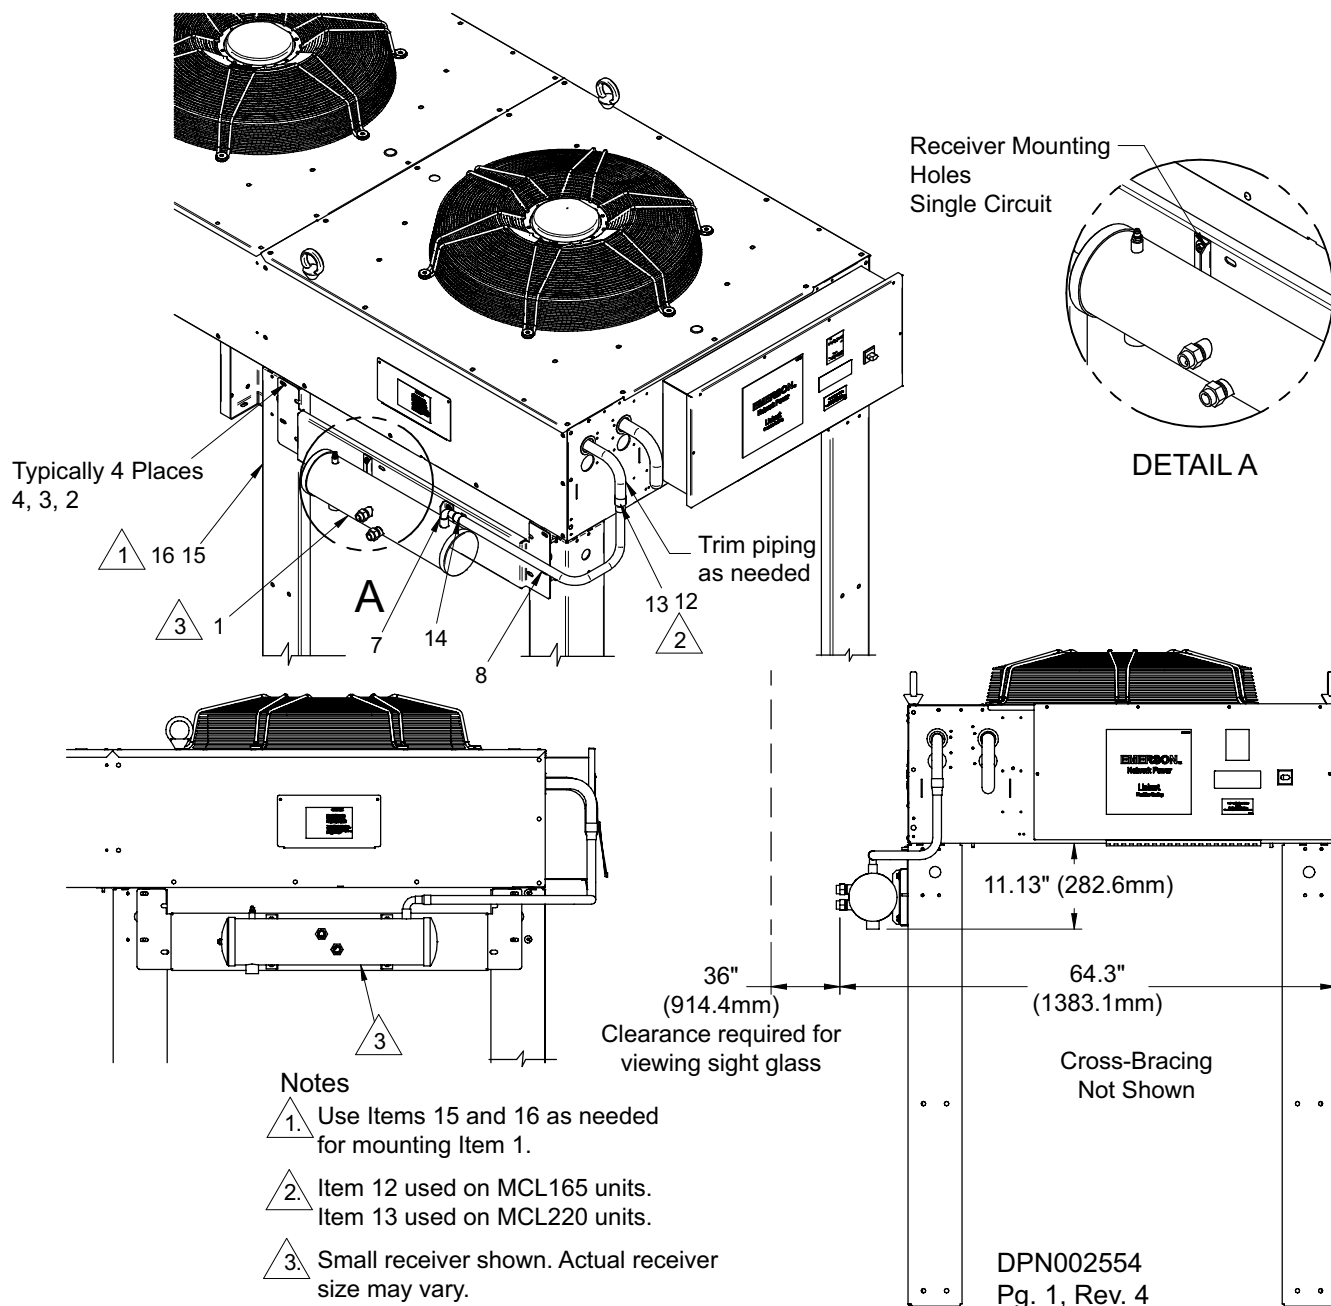

Item No.	Description	Qty
1	Receiver and Bracket Assembly	1
2	Cap Screw HXDIN933M8-1.25X25A2	8
3	Fender Washer DIN9021 M8X24 A2	12
4	Lock Nut Hex NYL INSR M8	8
7	90° Elbow FTGXFTG 7/8" Copper	1
8	Copper Formed Tube 1-1/8"	1
12	Coupling Copper 1-1/8"	1
13	Reducer Copper CXC 1-3/8"x1-1/8"	1
14	Reducer Copper CXC 1-1/8"x7/8"	1
15	Support Leg	1
16	Fastener Assembly: Cap Screw, Lock Washer, Fender Washer	4

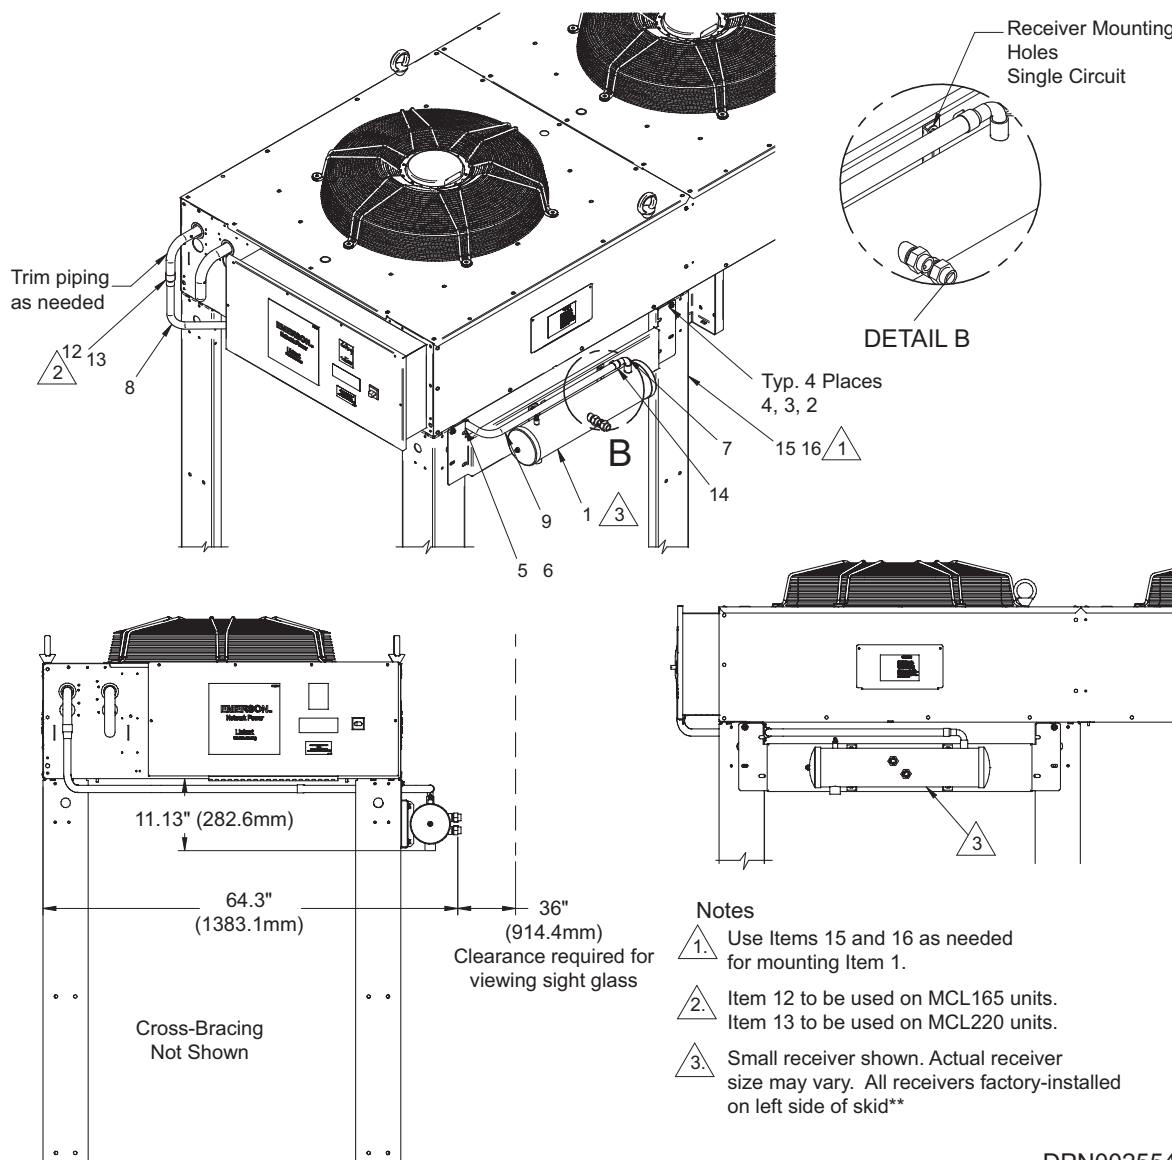
Figure 39 Typical receiver Liebert DSE mounting, MCL165 and MCL220 single-circuit condenser, right side condenser outlet receiver



DPN002554
Pg. 2, Rev. 4

Item No.	Description	Qty
1	Receiver and Bracket Assembly	1
2	Cap Screw HXDIN933M8-1.25X25A2	8
3	Fender Washer DIN9021 M8X24 A2	12
4	Lock Nut Hex NYL INSR M8	8
5	Clamp Omega 7/8"	7
6	Screw SD HWH YZ 10-16 x 5/8	2
7	90° Elbow FTGXFTG 7/8" CU	1
8	Copper Formed Tube 1-1/8"	1
9	Copper Formed Tube 1-1/8"	2
12	Coupling Copper 1-1/8"	1
13	Reducer Copper CXC 1-3/8"x1-1/8"	1
14	Reducer Copper CXC 1-1/8"x7/8"	2
15	Support Leg	1
16	Fastener Assembly: Cap Screw, Lock Washer, Fender Washer	4

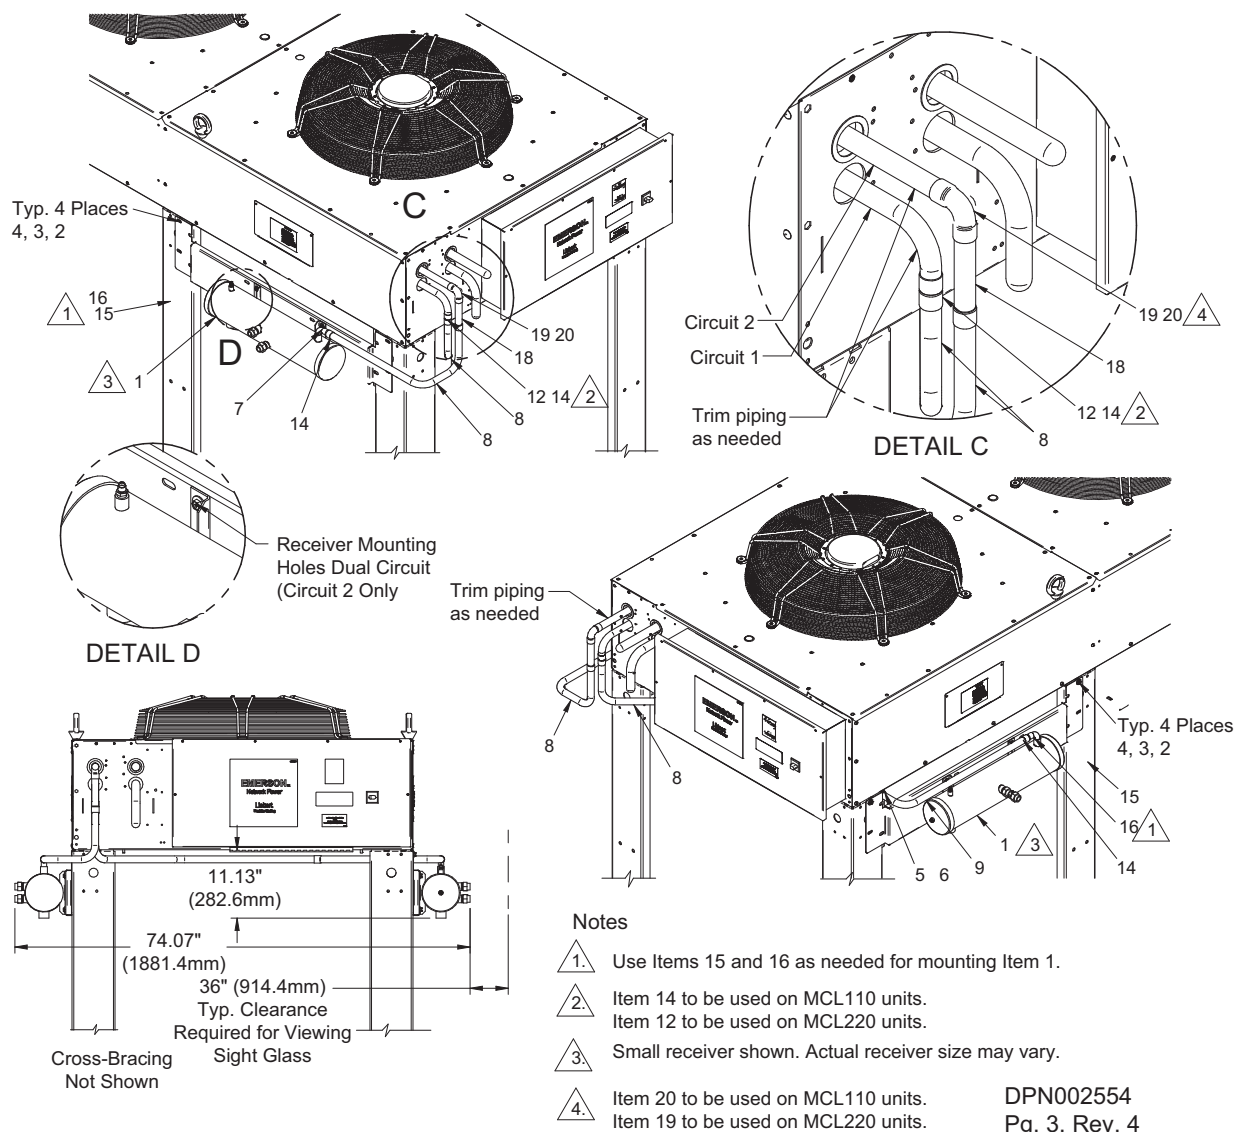Figure 40 Typical receiver Liebert DSE mounting, MCL110 and MCL220 dual-circuit condenser, dual condenser outlet receivers



Item No.	Description	Qty
1	Receiver and Bracket Assembly	2
2	Cap Screw HXDIN933M8-1.25X25A2	12
3	Fender Washer DIN9021 M8X24 A2	20
4	Lock Nut Hex NYL INSR M8	12
5	Clamp Omega 7/8"	1
6	Screw SD HWH YZ 10-16 x 5/8	2
7	90° Elbow FTGXFTG 7/8" Copper	2
8	Copper Formed Tube 1-1/8"	2
9	Copper Formed Tube 1-1/8"	1
12	Coupling Copper 1-1/8"	1
14	Reducer Copper CXC 1-1/8"x7/8"	3
15	Support Leg	2
16	Fastener Assembly: Cap Screw, Lock Washer, Fender Washer	8
18	Copper Tube 1-1/8" Swaged	1
19	90° Elbow CXC 1-1/8" Copper	1
20	90° Elbow CXC 1-1/8"x7/8" Copper	1

5.3 Refrigerant Planning Values

Planning for the refrigerant requirements of the completed system is the total of the charges from Indoor Unit, Condenser (including Liebert Lee-Temp™ receiver, if used) and the interconnecting piping. **Tables 11, 12 and 13** provide the approximate charge required for the condensers and the interconnecting piping. Consult indoor unit manuals for indoor unit charge requirements.

These values can be used for obtaining adequate refrigerant for the system, but should not be used for final charging.



NOTE

Due to the much smaller coil volume, the performance, especially subcooling, of a Liebert MC condenser is quite sensitive to the amount of refrigerant charge. Ensure that an accurate amount of refrigerant charge is added.

Table 11 Refrigerant required, R-407C, approximate

Condenser Models	Single Circuit, lb/circuit (kg/circuit)		Dual Circuit, lb/circuit (kg/circuit)	
	Condensers without Liebert Lee-Temp	Condensers with Liebert Lee-Temp	Condensers without Liebert Lee-Temp	Condensers with Liebert Lee-Temp
MCS028	2.2 (1.0)	23.1 (10.5)	—	—
MCS056	N/A	N/A	2.2 (1.0)	23.1 (10.5)
MCM040	3.0 (1.4)	23.9 (10.8)	N/A	N/A
MCM080	7.5 (3.4)	44.5 (20.2)	3.0 (1.4)	23.9 (10.8)
MCM160	—	—	7.5 (3.4)	44.5 (20.2)
MCL055	5.0 (2.3)	25.9 (11.7)	—	—
MCL110	10.5 (4.8)	52.1 (23.7)	5.1 (2.3)	26.0 (11.8)
MCL165	18.3 (8.3)	84.8 (38.5)	—	—
MCL220	27.0 (12.3)	108.9 (49.4)	12.2 (5.6)	53.8 (24.4)

Source: DPN002411, Rev. 7

Table 12 Refrigerant required, R-410A, approximate

Condenser Models	Single Circuit, lb/circuit (kg/circuit)			Dual Circuit, lb/circuit (kg/circuit)		
	Condensers w/o Liebert Lee-Temp	Condensers with Liebert Lee-Temp	Condensers with Liebert DSE Receiver	Condensers w/o Liebert Lee-Temp	Condensers with Liebert Lee-Temp	Condensers with Liebert DSE Small Receiver/Large Receiver ¹
MCS028	2.5 (1.2)	21.7 (9.8)	—	—	—	—
MCS056	—	—	—	2.5 (1.2)	21.7 (9.8)	—
MCM040	3.5 (1.6)	22.7 (10.3)	—	—	—	—
MCM080	8.5 (3.8)	39.8 (18.1)	—	3.5 (1.6)	22.7 (10.3)	—
MCM160	—	—	—	8.5 (3.8)	39.8 (18.1)	17 (7.7)/ 24 (10.9)
MCL055	5.0 (2.3)	24.2 (11.0)	—	—	—	—
MCL110	10.7 (4.9)	49.1 (22.3)	—	5.2 (2.4)	24.4 (11.1)	13.7 (6.2)
MCL165	18.4 (8.4)	79.9 (36.2)	33.9 (15.4)	—	—	—
MCL220	27.0 (12.3)	102.9 (46.7)	42.5 (19.3)	12.3 (5.6)	50.7 (23.0)	20.8 (9.4)/ 27.8 (12.6)

1. Small receiver is used with DA080 and DA085; large receiver is used with DA125, DA150 and DA165.

2. Source: DPN002411, Rev. 7

Table 13 Interconnecting piping refrigerant charge for self-contained DX units with remote condenser

Line Size O.D., in.	R-407C, lb/100ft. (kg/30m)		R-410A, lb/100ft. (kg/30m)	
	Hot Gas Line	Liquid Line	Hot Gas Line	Liquid Line
3/8	—	3.6 (1.6)	—	3.2 (1.4)
1/2	0.5 (0.2)	6.7 (3.0)	0.7 (0.3)	5.9 (2.7)
5/8	0.8 (0.4)	10.8 (4.8)	1.1 (0.5)	9.6 (4.3)
3/4	1.2 (0.5)	16.1 (7.2)	1.6 (0.7)	14.3 (6.4)
7/8	1.7 (0.8)	22.3 (10.0)	2.3 (1.0)	19.8 (8.8)
1-1/8	2.9 (1.3)	38.0 (17.0)	3.9 (1.7)	33.8 (15.1)
1-3/8	4.4 (2.0)	57.9 (25.9)	5.9 (2.6)	51.5 (23.0)
1-5/8	6.2 (2.8)	—	8.4 (3.7)	—

1. Data based on 50°F Evap 15°F superheat 125°F SCT 10°F subcooling

2. Source: DPN003099, Rev. 0

5.4 Equipment Application Guidelines

Pump-down must be disabled on the indoor unit when using the Liebert MC condenser, due to the reduced volume in the condenser coil.

Emerson® recommends adding a discharge line check valve and crankcase heater when connecting the Liebert MC condenser to Liebert indoor units built before 2012. The check valve and crankcase heater are needed for compressor protection. Additional liquid line Schrader ports are required at the indoor unit to properly charge systems with Liebert MC condensers.

5.5 Refrigerant Oil Addition Procedures

Consult the user manual for the indoor unit to determine whether additional oil is required for each circuit. Factors such as compressor, condenser type, piping lengths, receiver and total circuit refrigerant charge influence this requirement.

5.6 System Dehydration/Leak Test

Procedures for leak check and evacuation of the entire refrigeration system are contained in the indoor unit's installation manual. Use the proper manual section corresponding to the winter control system used on the condenser (with or without Liebert Lee-Temp™ or Liebert DSE™ receivers) and the refrigerant to be charged into the system.

5.7 System Charging with Liebert MC

5.7.1 Liebert MC Charging, Units with Liebert Lee-Temp™ Receivers

Consult the indoor unit's manual for charging systems with Liebert Lee-Temp receivers. These procedures will be identical to systems with fin/tube condenser coils, but the refrigerant volumes will be much lower. Consult **Tables 11** and **12** for refrigerant required by a condenser with Liebert Lee-Temp.

5.7.2 Liebert MC Condenser Charging with Liebert DSE™ Receivers

Consult the Liebert DSE's manual (SL-18925) for charging Liebert DSE systems. All Liebert DSE's require installation of a Liebert DSE receiver on each condenser circuit, with or without a Liebert EconoPhase pump module installed. Consult **Table 12** for condenser and receiver refrigerant requirements.

5.7.3 Liebert MC Charging, Premium Efficiency Control, Units without Receivers

Source: DPN002411, Rev. 7

Liebert MC condensers are charge-sensitive and require accurate calculation of the system charge to avoid overcharging. To avoid overcharge, additional guidelines are recommended to ensure trouble-free operation.

- When charging system in an outdoor ambient below 50°F (10°C), recheck the subcooling against **Table 15** when the ambient temperature is above 60°F (15.6°C)
 - The indoor space should be maintained at 70-80°F (21-26.7°C) return air before final charge adjustments are made.
 - Charging a unit at temperatures above 80°F (26.7°C) return air may result in the unit being overcharged.
 - Charge by subcooling measurement at the indoor unit. See **Table 15** for target subcooling temperatures.
 - Pressure and temperature measuring instruments should be capable of measuring to ± 10 psig (68.9kPa) and $\pm 2^\circ\text{F}$ (1.1°C) for best subcooling measurement.
1. Check the nameplate on the indoor unit for refrigerant type to be used. Unit control configurations differ depending on refrigerant type.
 2. Refrigerant charging requires the unit to be in operation. Refer to the indoor unit's user manual for the *Checklist for Completed Installation* and to the Liebert MC user manual, SL-19536, available at the Liebert Web site (www.liebert.com), for the Liebert MC condenser operation.
 3. Calculate the amount of charge for the system. Refer to the indoor unit user manual, and condenser and refrigerant line charge data in Tables 1 and 2.
 4. Weigh in as much of the system charge as possible before starting the unit.
Do not exceed the calculated charge by more than 0.5 lb. (0.23kg).

NOTICE

Risk of improper refrigerant charging. Can cause equipment damage.

Refrigerant R-407C and R-410A are blended refrigerants and must be introduced and charged from the cylinder only as a liquid.

When adding liquid refrigerant to an operating system, it may be necessary to add the refrigerant through the compressor suction service valve. Care must be exercised to avoid damage to the compressor.

Emerson recommends connecting a sight glass between the charging hose and the compressor suction service valve. This will permit adjusting the cylinder hand valve so that liquid can leave the cylinder while allowing vapor to enter the compressor.

NOTICE

Risk of refrigerant overcharge. Can cause equipment damage.

Do not use the sight glass as an indicator when charging Liebert MC condenser systems.

5. Turn On the Liebert MC disconnect switch.
6. Turn on the indoor unit disconnect switch. Operate the unit for 30 minutes using the charging function of the indoor unit control for each circuit of the system. The charging function is in the diagnostic section of the Liebert iCOM® (see Liebert iCOM user manual, SL-18835, available at the Liebert Web site (www.liebert.com)).

The charging function operates the compressor(s) at full capacity and energizes the liquid line solenoid valve(s). The reheat and humidifier are disabled. Manual operation of the indoor fans from the diagnostic menu of the Liebert iCOM is required. A minimum 20psig (138kPa) must be established and maintained for the compressor to operate. The charging function can be reset as many times as required to complete unit charging.

Table 14 Charge amounts per 100 ft. (30m) of pipe by line size

Line Size O.D., in.	R-407C (R-22), lb/100 ft. (kg/30m)		R-410A, lb/100 ft. (kg/30m)	
	Hot Gas Line	Liquid Line	Hot Gas Line	Liquid Line
3/8	—	3.6 (1.6)	—	3.2 (1.4)
1/2	0.5 (0.2)	6.7 (3.0)	0.7 (0.3)	5.9 (2.7)
5/8	0.8 (0.4)	10.8 (4.8)	1.1 (0.5)	9.6 (4.3)
3/4	1.2 (0.5)	16.1 (7.2)	1.6 (0.7)	14.3 (6.4)
7/8	1.7 (0.8)	22.3 (10.0)	2.3 (1.0)	19.8 (8.8)
1-1/8	2.9 (1.3)	38.0 (17.0)	3.9 (1.7)	33.8 (15.1)
1-3/8	4.4 (2.0)	57.9 (25.9)	5.9 (2.6)	51.5 (23.0)
1-5/8	6.2 (2.8)	—	8.4 (3.7)	—

Data based on 50°F evap, 15°F superheat, 125°F SCT, 10°F subcooling.

Source: DPN002411, Rev. 7

- Attach pressure and temperature instruments to the liquid line of the indoor unit. Measure the initial subcooling and continue to add charge until reaching the recommended subcooling for the current outdoor ambient temperature (see **Table 15**). The outdoor ambient can be read from the Liebert MC condenser control menu ID F02.

**NOTE**

To determine subcooling measurement, a liquid line pressure reading (at the factory-installed Schrader tap) needs to be measured along with obtaining a temperature reading on the liquid line. Convert the liquid line pressure reading into a temperature by utilizing a Pressure-Temperature Guide or **Table 16**. The difference between this converted temperature and the actual temperature will determine the system's subcooling. For R-407C make sure to use the saturated liquid temperature to calculate subcooling.

Table 15 Target subcooling for ambient outdoor temperature

Ambient Temp °F (C°)	Subcooling °F (C°)
0 (-17.8)	22 (12.0)
10 (-12.2)	22 (12.0)
20 (-6.7)	22 (12.0)
30 (-1.1)	22 (12.0)
40 (4.4)	22 (12.0)
50 (10.0)	21 (11.7)
60 (15.6)	19 (10.8)
70 (21.1)	17 (9.3)
80 (26.7)	13 (7.2)
90 (32.2)	9 (5.0)
95 (35.0)	7 (3.9)
100 (37.8)	5 (2.9)
105 (40.6)	3 (1.8)
110 (43.3)	1 (0.7)
125 (51.7)	0

DPN002411, Rev. 7

- As head pressure builds, the variable fan speed controlled condenser fan begins rotating. The fan will run at full speed when sufficient head pressure is developed.

Table 16 Liquid pressures and temperatures

Pressure Psig (Bar)	R407C ¹ °F (°C)	R410A ¹ °F (°C)	R22 °F (°C)
170 (11.7)	81.5 (27.5)	59.8 (15.4)	90.6 (32.6)
180 (12.4)	85.1 (29.5)	63.1 (17.3)	94.3 (34.6)
190 (13.1)	88.6 (31.5)	66.3 (19.1)	97.9 (36.6)
200 (13.8)	92.0 (33.3)	69.5 (20.8)	101.4 (38.6)
210 (14.5)	95.2 (35.1)	72.5 (22.5)	104.7 (40.4)
220 (15.2)	98.3 (36.8)	75.4 (24.1)	108.0 (42.2)
230 (15.9)	101.4 (38.5)	78.2 (25.7)	111.1 (44.0)
240 (16.6)	104.3 (40.2)	80.9 (27.2)	114.2 (45.7)
250 (17.2)	107.2 (41.8)	83.6 (28.7)	117.1 (47.3)
260 (17.9)	109.9 (43.3)	86.2 (30.1)	120.0 (48.9)
270 (18.6)	112.6 (44.8)	88.7 (31.5)	122.8 (50.4)
280 (19.3)	115.3 (46.3)	91.1 (32.8)	125.5 (52.0)
290 (20.0)	117.8 (47.7)	93.5 (34.2)	128.2 (53.4)
300 (20.7)	120.3 (49.1)	95.8 (35.5)	130.8 (54.9)
310 (21.4)	122.8 (50.4)	98.1 (36.7)	133.3 (56.3)
320 (22.1)	125.2 (51.8)	100.3 (38.0)	135.8 (57.7)
330 (22.8)	127.5 (53.1)	102.5 (39.2)	138.2 (59.0)
340 (23.4)	129.8 (54.3)	104.6 (40.3)	140.6 (60.3)
350 (24.1)	132.1 (55.6)	106.7 (41.5)	142.9 (61.6)
360 (24.8)	134.3 (56.8)	108.7 (42.6)	145.2 (62.9)
370 (25.5)	136.4 (58.0)	110.7 (43.7)	147.4 (64.1)
380 (26.2)	138.6 (59.2)	112.7 (44.8)	149.6 (65.4)
390 (26.9)	140.6 (60.3)	114.5 (45.9)	151.8 (66.5)
400 (27.6)	142.7 (61.5)	116.4 (46.9)	153.9 (67.7)
500 (34.5)	161.3 (71.8)	133.5 (56.4)	173.1 (78.4)
600 (41.4)	177.4 (80.8)	148.1 (64.5)	189.5 (87.5)

1. Values are for saturated liquid.

2. Source: DPN002411, Rev. 7

6.0 CHECKLIST FOR COMPLETED INSTALLATION

6.1 Moving and Placing Equipment

- ☐ 1. Unpack and check received material.
- ☐ 2. Proper clearance for service access has been maintained around the equipment.
- ☐ 3. Equipment is level and mounting fasteners are tight.

6.2 Electrical

- ☐ 1. Line voltage connected and matches equipment nameplate.
- ☐ 2. Power line circuit breakers or fuses have proper ratings for equipment installed.
- ☐ 3. Control wiring connections completed between indoor cooling unit and condenser.
- ☐ 4. All internal and external high-voltage and low-voltage wiring connections are tight to the proper torque ratings shown on the components.
- ☐ 5. Confirm that unit is properly grounded to an earth ground.
- ☐ 6. Electrical service conforms to national and local codes.
- ☐ 7. Monitoring wiring connections completed, when equipped, to indoor cooling unit or external monitoring panel.
- ☐ 8. Verify that the Premium EC fan condenser is not connected to a delta power supply.
- ☐ 9. Verify that the CANbus wiring, CANbus “END of Line” jumper position and the CANbus “Device Address DIP Switch” setting is correct according to the application at the job site.
- ☐ 10. Verify that Terminals 70, 71 and 230 (when applicable) are used and that they are properly wired, particularly on systems that use two condensers for one indoor unit.

6.3 Piping

- ☐ 1. Piping is completed to corresponding indoor cooling unit refrigeration circuit.
- ☐ 2. Piping is leak-checked, evacuated and charged with specified refrigerant.
- ☐ 3. Additional refrigerant oil added, if required, per circuit.
- ☐ 4. Piping is properly sized, sloped and trapped for proper oil return.
- ☐ 5. Piping is routed to reduce potential of rub-through or chaffing.
- ☐ 6. Hot gas line on Liebert Lee-Temp™ is fastened to the side of the cabinet and isolated for vibration reduction.

6.4 Other

- ☐ 1. Foreign material removed from in and around all equipment installed (construction materials, construction debris, etc.).
- ☐ 2. Installation materials and tools have been removed from in and around all equipment (literature, shipping materials, tools, etc.).
- ☐ 3. Blank startup sheet located, ready for completion by installer or start-up technician.

7.0 INITIAL STARTUP CHECKS AND COMMISSIONING



WARNING

Risk of electric shock. Can cause injury or death.

Open all local and remote unit electric power supply disconnect switches, wait 10 minutes and verify with a voltmeter that power is Off before working within the fan speed control, the EC fan electrical enclosures or checking any electrical connections or functions. Unit contains potentially lethal electrical voltage. Line side of factory disconnect remains energized when disconnect is Off.

Only properly trained and qualified personnel may perform repair, maintenance and cleaning operation.



WARNING

Risk of high-speed, rotating fan blades. Can cause injury or death.

Fan blades can start rotating without warning at any time during a cooling cycle or after power is restored after a power failure. Open all local and remote unit electrical power supply disconnect switches, verify with a voltmeter that the power is Off and verify that all fan blades have stopped rotating before working on or near the fans.

7.1 Startup Checklist

Refer to **6.0 - Checklist for Completed Installation** and verify that all installation items have been completed before beginning to start the condenser.

7.2 Initial Startup

1. Locate *Liebert Condensers Warranty Inspection Check Sheet*, Document # PSWI-8542-408CO.
2. Turn the condenser disconnect On.
3. Turn the indoor unit ON and set for cooling to allow operation of condenser.
4. Check the fans for proper rotation: Counterclockwise when viewing the unit from the fan guard (top) side.
5. Check that air is being drawn through the coil and discharged out the fan assembly.
6. Complete *Liebert Condensers Warranty Inspection Check Sheet*, Document # PSWI-8542-408CO.



NOTE

This document must be completed and forwarded to your local Emerson sales office to validate warranty.

- Contact your local Emerson sales representative or Emerson Network Power® Liebert Services support about any questions or problems during unit startup and commissioning. Local Emerson sales offices and Liebert Thermal Management support contacts can be found at www.liebert.com or by calling 1-800-LIEBERT.

8.0 CONTROL OPERATION

The Liebert MC Premium Efficiency Control takes approximately 30 seconds to boot up once power is applied to the condenser. The LED on the Premium Efficiency Control Board reads “888” while the board is booting up. Once the control has booted up, the display shows “F00” and then the value for F00. With the control operational, the condenser fan(s) turn in less than 5 seconds after receiving a signal from the indoor unit that the compressor(s) are On. Consider using UPS equipment on both data center cooling units and Liebert MC condensers to maintain uninterrupted cooling capability.

For the first 60 seconds of operation after the compressor turns on, the condenser fan(s) will run at a fixed speed, set at the factory, based on ambient temperature: faster at higher temperatures, slower at lower temperatures. After 60 seconds, the control adjusts the fan speed based on the liquid pressure transducer. If the liquid pressure transducer fails, the condenser uses temperature sensors to control the fan speed based on the liquid line temperature. The condenser fans continue to operate for approximately 30 seconds after compressors turn Off.

The Liebert MC fans have various alarm conditions, such as loss of voltage and loss of control signal, that will stop the condenser fans. Once the alarm condition is no longer present the Liebert MC fans will turn on automatically if compressors are On.

8.1 Premium Efficiency Control Board and Interface


The Liebert MC Premium Efficiency Control board has a stacked board arrangement. There are three seven-segment LED's and four keys as human machine interface (see **Figure 43**).



NOTE

Indicator lights should be On to indicate signal is present. See **Figure 42**, #1, 2 and 3.

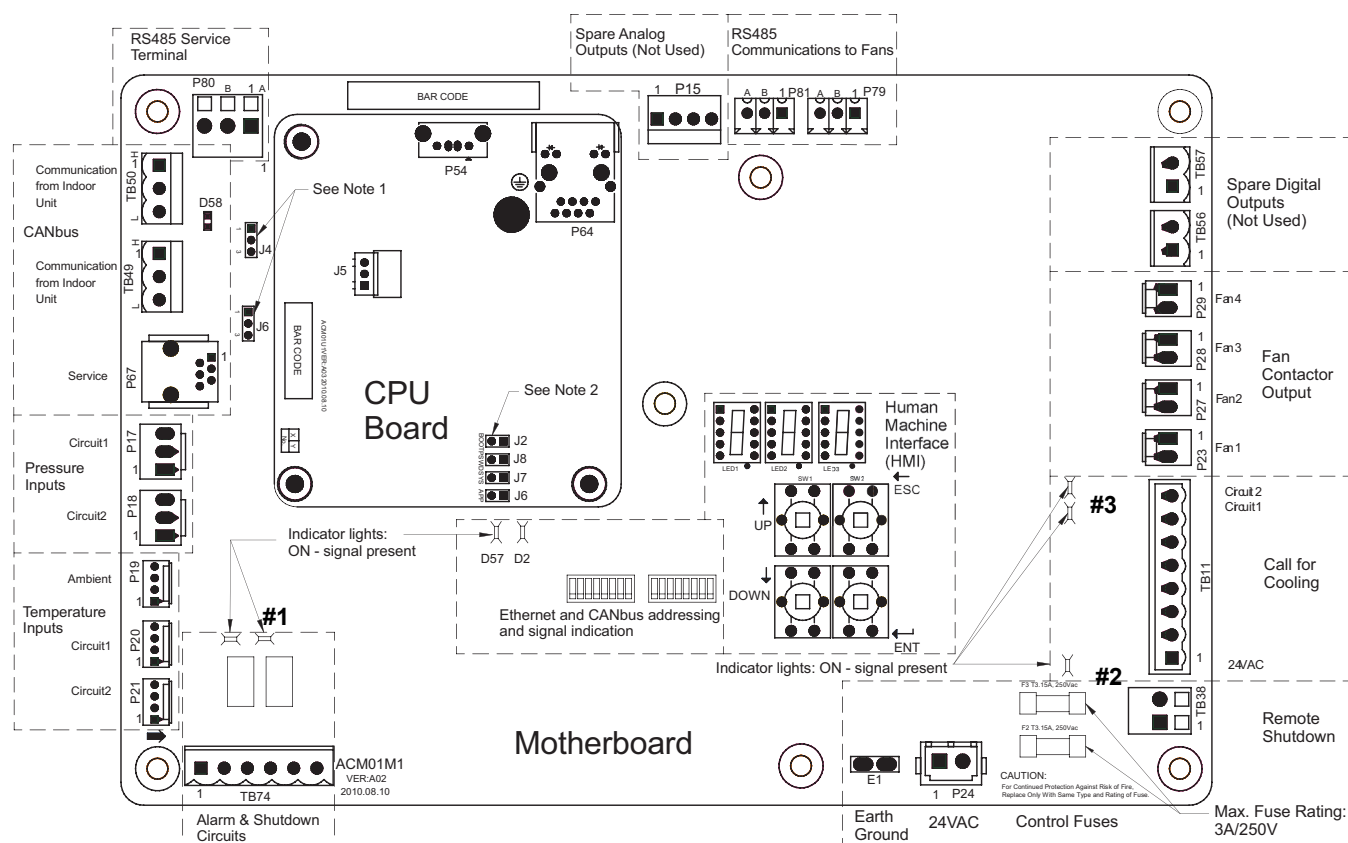Figure 42 Premium efficiency fan control board




NOTE:

1. J6 is the CANbus termination jumper. J4 is the RS485 service termination jumper. If the condenser is the last device in the CANbus communication line, the jumper must be placed between Pins 1 and 2 of J6. If the condenser is not the last device in the CANbus communication line, the jumpers on J6 must be placed on Pins 2 and 3. If the jumper is not in the correct positions, CANbus communication errors may occur. The jumper on J4 will always be placed between Pins 1 and 2.
2. A jumper must be present at J2. If a jumper is not present, the control board will not boot properly during power startup.

301471
Pg. 2, Rev. 4

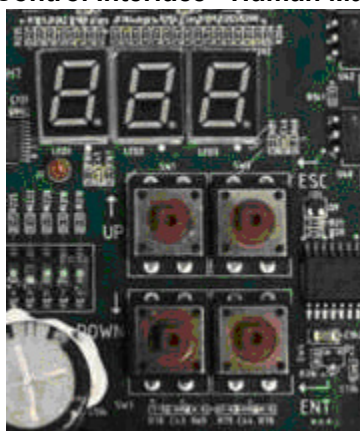Figure 43 Premium Efficiency Control Interface - Human Machine Interface (HMI)




The Premium Efficiency Controls are factory-configured for refrigerant type and whether the condenser was sold with or without a Liebert Lee-Temp™ or Liebert DSE system. No field-configuration is necessary for proper and efficient condenser operation.

8.1.1 Initial Screen Upon Power-On

The controller displays the initial screen after it is powered On. The initial screen shows the first item of analog signals menu. The *F00* and value of condenser pressure *1* are displayed alternatively and *F00* means the item ID of condenser pressure *1*. The display sequence is shown **Figure 44**. In the figure, *16.1* is an example and the value is dependent on the sampling result.

 Figure 44 Initial controller display




8.1.2 Main Menu Description

In initial screen, presses ESC key, the LED enters the first menu of the main menu. The main menu includes four menus:

- Analog Signals Menu
- Active Alarms Menu
- History Alarms Menu
- Configuration Menu

In the Main Menu, press Up and Down keys to switch to different menus, and press the ENT key to enter the submenus of the current menu. The operation and structure of main menu are shown in the following figure.

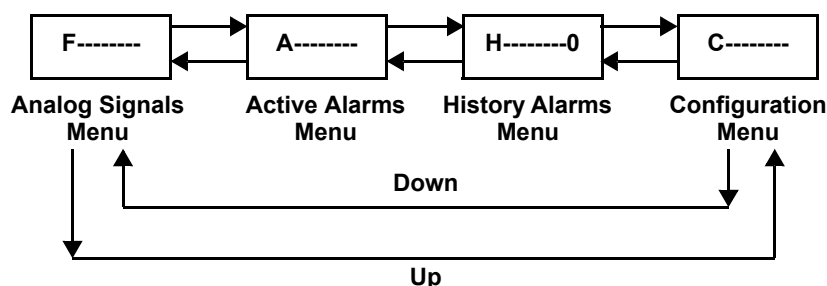Figure 45 Main Menu operation and structure



NOTICE

Risk of improperly altered configuration menu settings. Can compromise equipment operation.

Changing the configuration menu settings can cause unanticipated results. These settings should be changed only by properly trained and qualified personnel or as directed by the factory.

8.1.3 Analog Signals Menu Description

In analog signals menu F-----, press the ENT key to enter its items. The information of analog signal items includes condenser pressure, temperature and EC Fan actual speed. The display mode is that the item ID and signal value are displayed alternatively. The operation and item structure of analog signals menu are shown in the following figure.

Figure 46 Analog Signals Menu

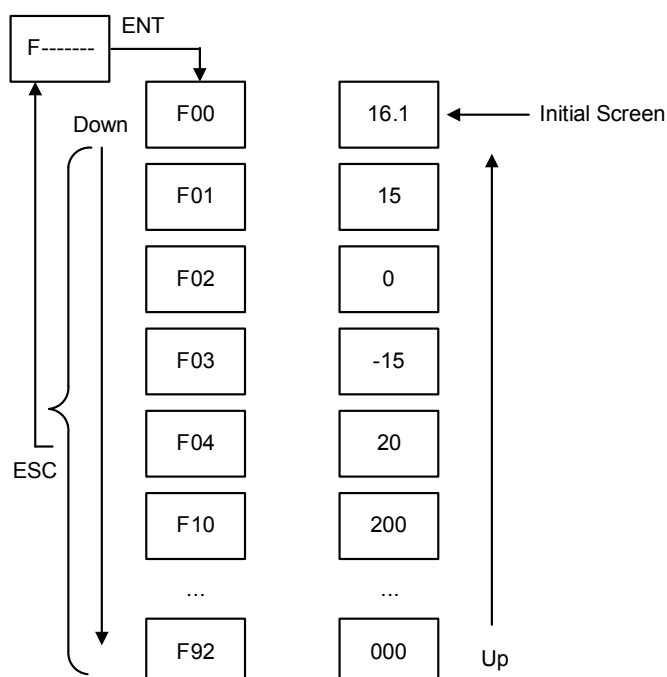


Table 17 Analog signal definitions

Item ID	Meaning	Units (C90)	
		Imperial	Metric
F00	Condenser pressure 1	psi	bar
F01	Condenser pressure 2	psi	bar
F02	Ambient temperature	°F	°C
F03	Refrigerant temperature 1	°F	°C
F04	Refrigerant temperature 2	°F	°C
F10	EC Fan 1 actual speed	RPM	RPM
F11	EC Fan 1 requested speed	%	%
F20	EC Fan 2 actual speed	RPM	RPM
F21	EC Fan 2 requested speed	%	%
F30	EC Fan 3 actual speed	RPM	RPM
F31	EC Fan 3 requested speed	%	%
F40	EC Fan 4 actual speed	RPM	RPM
F41	EC Fan 4 requested speed	%	%
F50	Subcooling 1	°F	°C
F51	Subcooling 2	°F	°C
F90	Firmware Version Major		1.02.004
F91	Firmware Version Minor	—	
F92	Firmware Version Build	—	


8.2 Premium Efficiency Condenser Alarm Codes

The following procedure and chart details the alarm codes that may be displayed from the Active and History Alarm registers.

8.2.1 Active Alarms Menu Description

In active alarms menu “A—,” press the ENT key to enter its items. The active alarm item displays all the active alarms of condenser. When there is an active alarm, the alarm information ID will be directly displayed. When there is no alarm, “---” is displayed. When there are multiple alarms, the alarm information ID’s will be displayed according to the time sequence (the most-recent alarm will be displayed first). The operation and items structure of active alarms menu are shown in the following figure. The meanings of alarm information ID are found in **Tables 18** and **19**.

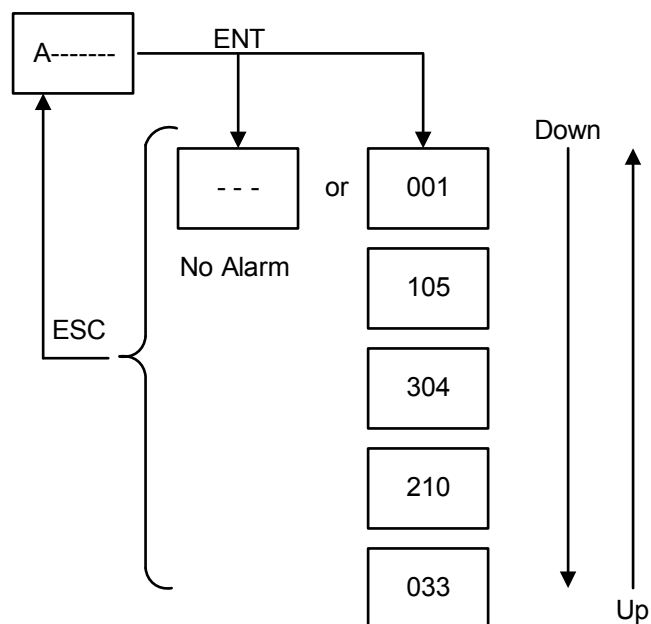Figure 47 Active alarms menu



8.2.2 History Alarms Menu Description

In history alarms menu “H—?”, press ENT key to enter its items. The history alarm items display 100 history alarm records of the condenser. The item ID is for the sequence number of the history alarms. The display mode is that the item ID and alarm information ID are displayed alternatively. When there is no alarm, “---” is displayed. Alarm history can be cleared using the C98 configuration menu item. The operation and items structure of history alarms menu are shown in the following figure. The meanings of alarm information ID are given in **Tables 18** and **19**.

Figure 48 History alarms menu

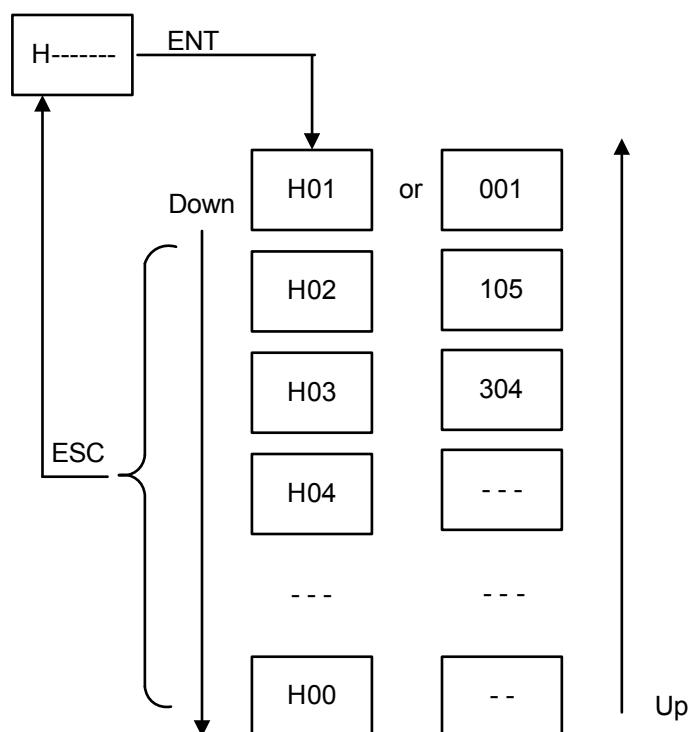


Table 18 System alarm information

Alarm ID	Meaning	Possible Cause	Handling Method
000	CAN communication failure	Communication circuit missing or damaged	Check communication circuit. Ignore alarm on condensers without CAN connections
001	Ethernet communication failure	Ethernet hardware or connection failure	Ignore alarm, Ethernet connection is not present
002	USB communication failure	USB device or file is damaged.	Replace USB device or file.
003	Data corruption	Memory chip is damaged	Replace PCB board
004	System error	Internal error	Reboot. If reboot fails, consult factory.
005	Remote shutdown	1. Remote shutdown signal is available 2. TB38 is not connected	For Cause 1, check the remote shutdown signal. For Cause 2, connect TB38.
006	Shutdown due to EC Fan alarm	All fans have failed	Consult factory
007	SPD alarm	SPD damaged	Replace SPD
008	Condenser pressure Sensor 2 failure	Condenser pressure Sensor 1 damaged	Replace condenser pressure Sensor 1
009	Condenser pressure Sensor 2 failure	Condenser pressure Sensor 2 damaged	Replace condenser pressure Sensor 2
010	Condenser pressure 1 high alarm	High pressure: Fan failure, clogged coils. Low pressure: Loss of charge	High-pressure alarms: Fix fan and clean coil. Low-pressure alarms: Check for refrigerant leak.
011	Condenser pressure 2 high alarm		
012	Condenser pressure 1 low alarm		
013	Condenser pressure 2 low alarm		
014	EC Fan speed mode maximum must be overridden due to condenser pressure 1 high	Condenser pressure 1 high	No action is needed.
015	EC Fan speed mode maximum must be overridden due to condenser pressure 2 high	Condenser pressure 2 high	No action is needed.
016	Ambient temperature sensor failure	Ambient temperature sensor damaged	Replace ambient temperature sensor
017	Ambient temperature high alarm	Ambient temperature high	No action is needed.
018	Ambient temperature low alarm	Ambient temperature low	No action is needed.
019	Condenser temperature Sensor 2 failure	Condenser temperature Sensor 2 damaged	Replace condenser temperature Sensor 1
020	Condenser temperature Sensor 2 failure	Condenser temperature Sensor 2 damaged	Replace condenser temperature Sensor 2
021	Condenser temperature 1 high alarm	High temperature: Fan failure, clogged coils. Low temperature: Consult factory	High-temperature alarms: Fix fan and clean coils. Low-temperature alarms: consult factory.
022	Condenser temperature 2 high alarm		
023	Condenser temperature 1 low alarm		
024	Condenser temperature 2 low alarm		
025	EC Fan speed mode maximum must be overridden due to refrigerant temperature 1 high	Refrigerant temperature 1 high	No action is needed.
026	EC Fan speed mode maximum must be overridden due to refrigerant temperature 2 high	Refrigerant temperature 2 high	No action is needed.

Table 19 EC Fan alarm information

Alarm ID	Meaning	Possible Cause	Handling Method
(1-4) 00	EC Fan high link current	1. EC Fan is locked. 2. EC Fan is damaged.	For cause 1, check if EC Fan is locked. For cause 2, replace EC Fan
(1-4) 01	EC Fan drive error	EC Fan is damaged.	Replace EC Fan
(1-4) 02	EC Fan earth to ground fault	EC Fan is damaged.	Replace EC Fan
(1-4) 03	EC Fan electronics heat sink thermal overload	1. EC Fan is locked. 2. EC Fan is damaged. 3. Ambient temperature is too high	For cause 1, check if EC Fan is locked. For cause 2, replace EC Fan For cause 3, check ambient temperature.
(1-4) 04	EC Fan Hall failure	EC Fan is damaged.	Replace EC Fan
(1-4) 05	EC Fan IGBT failure	EC Fan is damaged.	Replace EC Fan
(1-4) 06	EC Fan line fault	Power supply abnormal	Check power supply
(1-4) 07	EC Fan motor locked	Motor is locked	Check if EC Fan is locked.
(1-4) 08	EC Fan motor thermal overload	1. EC Fan is locked. 2. EC Fan is damaged. 3. Ambient temperature is too high	For cause 1, check if EC Fan is locked. For cause 2, replace EC Fan For cause 3, check ambient temperature.
(1-4) 09	EC Fan phase failure alarm	Phase failure	Check power supply
(1-4) 10	EC Fan-specific uncategorized alarm detected	Internal EC Fan issue	Re-boot condenser if fans not running. If alarm persists and fans not running, replace fan.
(1-4) 11	EC Fan-specific uncategorized warning detected		
(1-4) 12	EC Fan electronics high-temperature condition.	1. EC Fan is locked. 2. EC Fan is damaged. 3. Ambient temperature is too high	For cause 1, check if EC Fan is locked. For cause 2, replace EC Fan For cause 3, check ambient temperature.
(1-4) 13	EC Fan high link voltage	1. EC Fan input power supply high voltage 2. EC Fan is damaged.	For cause 1, measure power supply voltage and check if the voltage is normal For cause 2, replace EC Fan
(1-4) 14	EC Fan low link voltage	1. EC Fan input power supply low voltage 2. EC Fan detection error	
(1-4) 15	EC Fan 485 communication failure	1. Communication between EC Fan and PCB board failure 2. EC Fan 485 communication failure 3. Board has problems 4. EC fan not receiving power	For cause 1, check EC Fan communication circuit For cause 2, replace EC Fan For cause 3, replace PCB board For cause 4, check fan model is not set for "0", check that the contactor for the particular fan is energized, and check fan fuses.

**NOTE**


(1-4) means the EC Fan addresses. For example, (1-4) 00 means 100 for EC Fan1, and means 200 for EC Fan2, and means 300 for EC Fan3, and means 400 for EC Fan4.

9.0 LIEBERT MC SEISMIC APPLICATION—OPTIONAL UNIT CONFIGURATION

9.1 Seismic Anchoring Considerations

- Mounting requirement details such as anchor brand, type, embedment depth, edge spacing, anchor-to-anchor spacing, concrete strength, special instruction and attachment to non-building structures must be outlined and approved by the engineer of record for the project or building. Structural floors and housekeeping pads must also be seismically designed and approved by the project or building structural engineer of record to withstand the seismic anchor loads defined in **Table 20**. The installing contractor is responsible for the proper installation of all anchors and mounting hardware, observing the mounting requirements detailed in the seismic installation drawings as outlined by the engineer of record.
- All braces and fasteners are required to maintain IBC/OSHPD certification of conformity.
- Use a washer, lock washer and screw to connect the brace to the bottom beam of the condenser. (See **Figure 50**.)
- Use a washer, lock washer and screw to connect the brace to the condenser leg. (See **Figure 50**)
- Place anchorage plate inside each condenser foot prior to fastening to the structure. Use a flat washer, lock washer and nut to connect the condenser to the customer-supplied anchor on the solid surface (reference Detail A in **Figure 49**). As a minimum, 3/8" grade anchors with American National Standard Series W, Type A, plain washers (ANSI B18.22.1-1965, R1975) selected to match the nominal anchor diameter must be installed at each anchor location between the anchor head and equipment for tension load distribution.

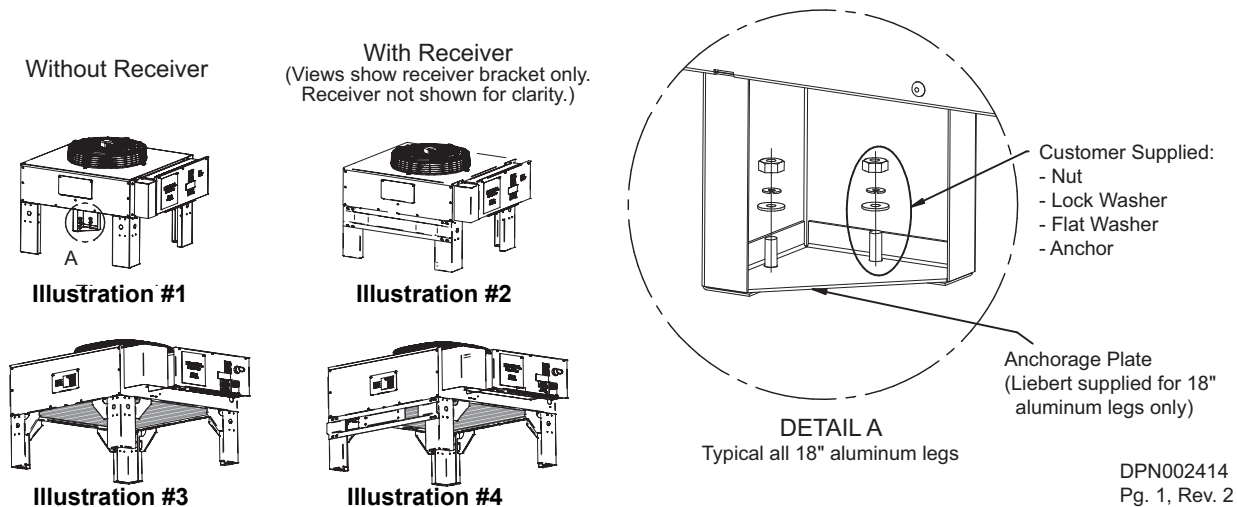Figure 49 Seismic anchorage data for one-fan models



DPN002414
Pg. 1, Rev. 2

Table 20 Seismic anchorage loads for one-fan models

Models	Illustration # in Figure 49	Importance Factor I _p = 1.0			Importance Factor I _p = 1.5		
		Maximum Compressive lb	Maximum Anchor		Maximum Compressive lb	Maximum Anchor	
			Tensile lb	Shear lb		Tensile lb	Shear lb
MCS028							
Without Receiver	Illustration #1	37	14	14	47	24	21
With Receiver	Illustration #2	43	15	23	56	27	35
MCM040							
Without Receiver	Illustration #4	37	14	14	47	24	21
With Receiver	Illustration #3	43	15	23	56	27	35
MCL055							
Without Receiver	Illustration #3	37	14	14	47	24	21
With Receiver	Illustration #4	43	15	23	56	27	35

* All loads are calculated per ASCE 7-05, Chapter 13.6 $S_{ds} = 2.0$, $R_p = 6.0$, $a = 2.5$

Source: DPN002414 Rev. 2

Figure 50 Seismic anchoring for a two-fan Liebert MC


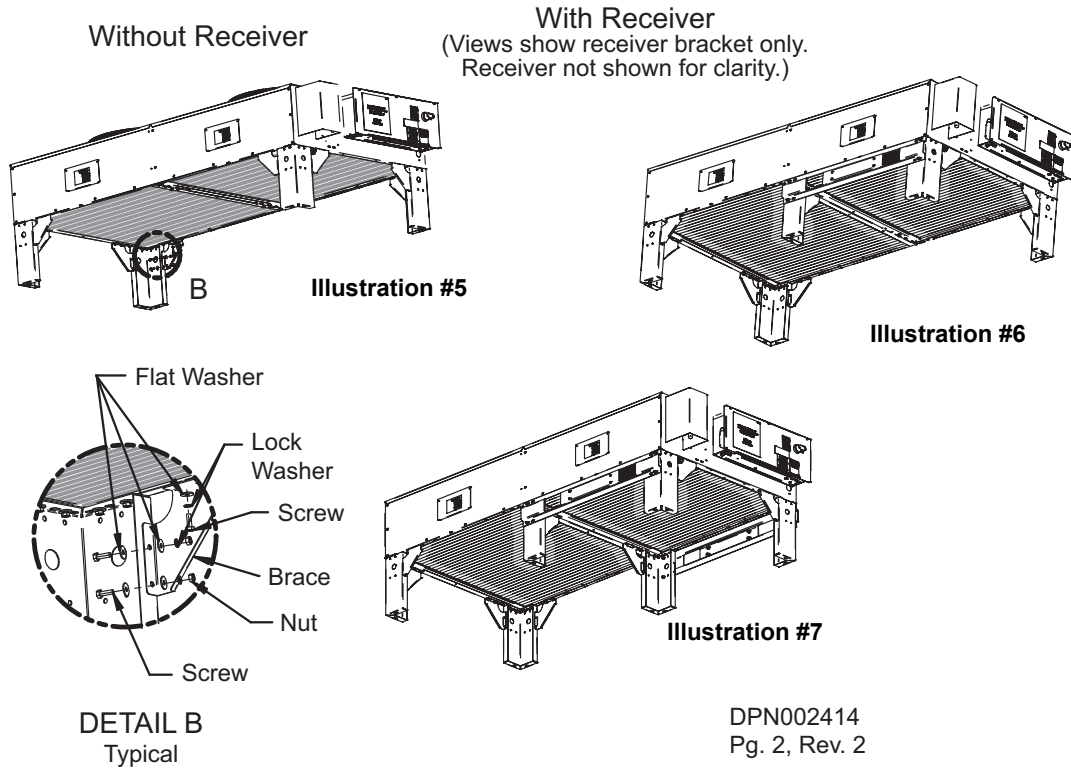


Table 21 Seismic anchoring loads for a two-fan Liebert MC

Model #	Illustration # in Figure 50	Importance Factor I _p = 1.0			Importance Factor I _p = 1.5		
		Maximum Compressive lb	Maximum Anchor		Maximum Compressive lb	Maximum Anchor	
			Tensile lb	Shear lb		Tensile lb	Shear lb
MCS056							
Without Receiver	Illustration #5	63	20	23	78	35	34
With Receiver	Illustration #7	69	15	30	75	30	45
MCM080							
Single or Dual Circuit Without Receivers	Illustration #5	94	30	34	116	53	50
Single Circuit With Receiver	Illustration #6	87	34	38	99	59	57
Dual Circuit With Receivers	Illustration #7	90	24	38	98	44	57
MCL110							
Single or Dual Circuit Without Receivers	Illustration #5	146	42	55	179	76	82
With Receiver	Illustration #6	131	47	53	158	83	80
Dual Circuit With Receivers	Illustration #7	117	31	51	136	59	77

* All loads are calculated per ASCE 7-05, Chapter 13.6 $S_{ds} = 2.0$, $R_p = 6.0$, $a = 2.5$
Source: DPN002414 Rev. 2

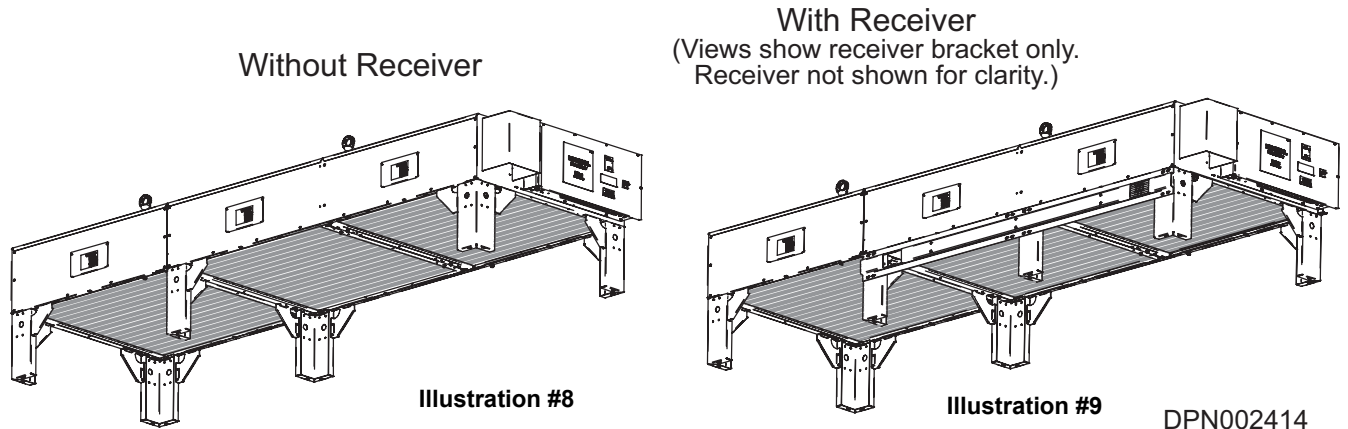Figure 51 Seismic anchoring loads for a three-fan Liebert MC



DPN002414
Pg. 3, Rev. 2

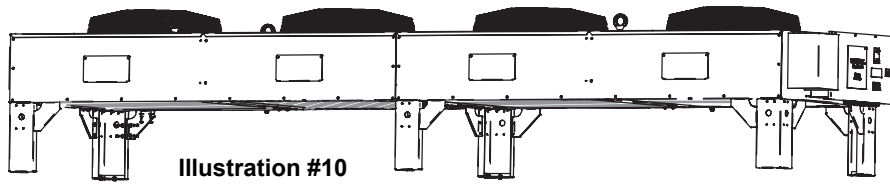
Table 22 Seismic anchoring loads for a three-fan Liebert MC

Model #	Illustration # in Figure 51	Importance Factor I _p = 1.0			Importance Factor I _p = 1.5		
		Maximum Compressive Reaction lb	Maximum Anchor Loads (ASD)		Maximum Compressive Reaction lb	Maximum Anchor Loads (ASD)	
			Tensile lb	Shear lb		Tensile lb	Shear lb
MCL165							
Single Circuit Without Receiver	Illustration #8	158	39	62	181	73	93
Single Circuit With Receiver	Illustration #9	153	38	65	170	73	97



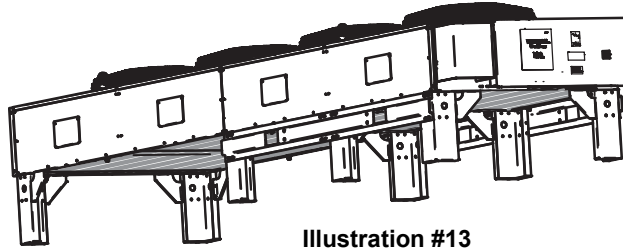
* All loads are calculated per ASCE 7-05, Chapter 13.6 $S_{ds} = 2.0$, $R_p = 6.0$, $a = 2.5$
Source: DPN002414 Rev. 2

Figure 52 Seismic anchorage loads for a four-fan Liebert MC

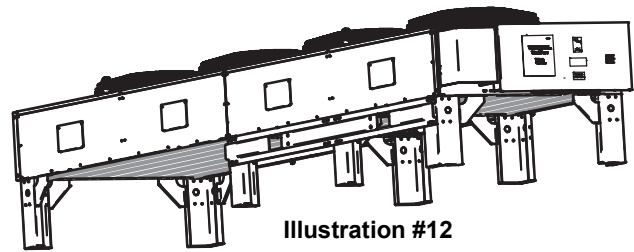Without Receiver



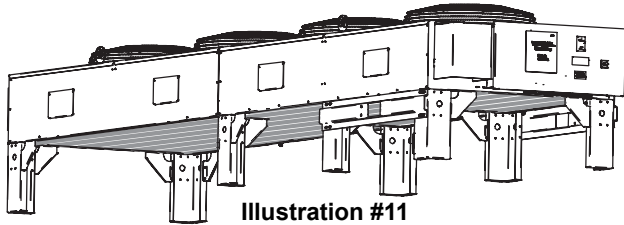With Receiver
(Views show receiver bracket only.
Receiver not shown for clarity.)




DPN002414
Pg. 4, Rev. 2

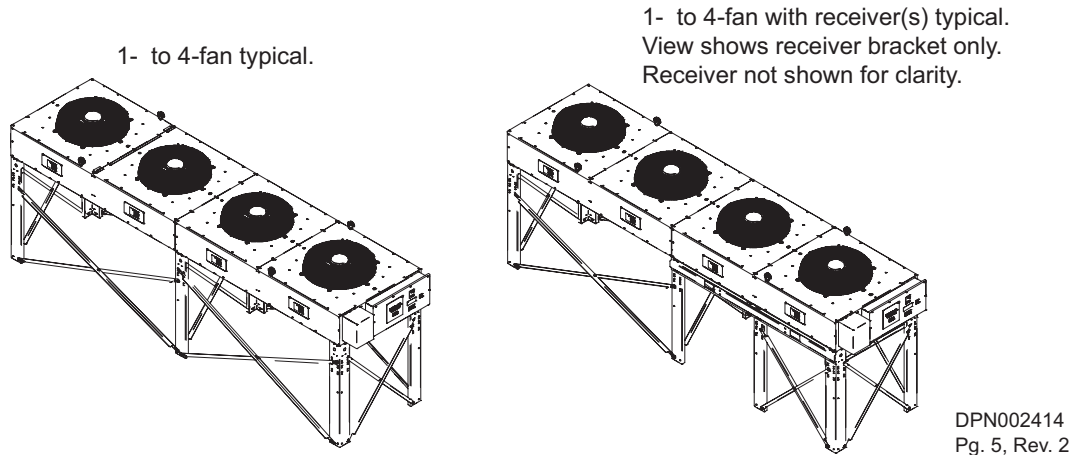Table 23 Seismic anchorage loads for a four-fan Liebert MC

Models	Illustration # in Figure 52	Importance Factor $I_p = 1.0$			Importance Factor $I_p = 1.5$		
		Maximum Compressive Reaction lb	Maximum Anchor Loads, ASD		Maximum Compressive Reaction lb	Maximum Anchor Loads, ASD	
			Tensile lb	Shear lb		Tensile lb	Shear lb
MCM160							
Dual Circuit Without Receivers	Illustration #10	122	37	42	148	65	62
Dual Circuit With Receivers	Illustration #11	120	33	42	145	59	63
MCL220							
Single or Dual Circuit Without Receivers	Illustration #10	194	53	69	232	95	104
With Receiver	Illustration #12	191	51	74	221	92	110
Dual Circuit With Receivers	Illustration #13	176	45	60	211	82	90

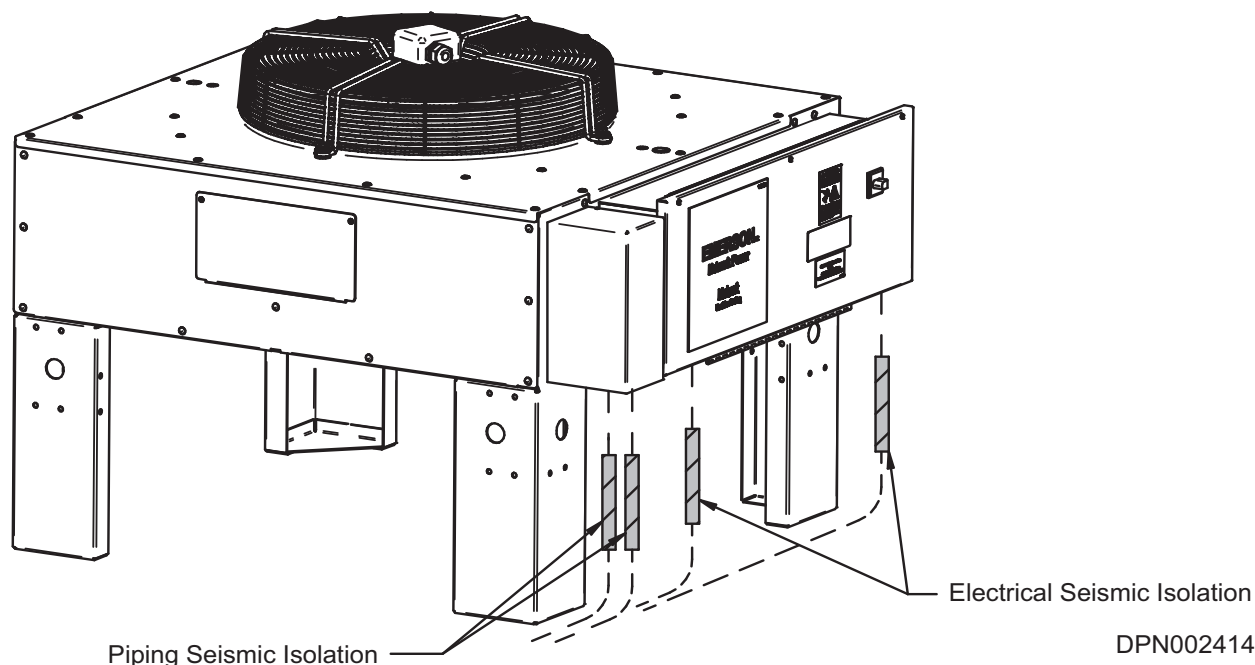
* All loads are calculated per ASCE 7-05, Chapter 13.6 $S_{ds} = 2.0$, $R_p = 6.0$, $a = 2.5$
Source: DPN002414 Rev. 2

Figure 53 Seismic anchorage loads for 36-60" extended leg

Table 24 Seismic anchorage loads for 36-60" extended leg

Models	Importance Factor I _p = 1.0			Importance Factor I _p = 1.5		
	Maximum Compressive Reaction lb	Maximum Anchor Loads (ASD)		Maximum Compressive Reaction lb	Maximum Anchor Loads (ASD)	
		Tensile lb	Shear lb		Tensile lb	Shear lb
MCS028 and MCS056						
MCS028 Without Receiver	104	42	31	132	70	46
MCS028 With Receiver	110	43	40	141	74	60
MCS056 Without Receiver	126	43	40	157	73	61
MCS056 Dual Circuit With Receivers	107	36	44	131	65	66
MCM040 Through MCM160						
MCM040 Without Receiver	103	39	32	130	66	48
MCM040 With Receiver	114	40	40	144	70	61
MCM080 Without Receiver	154	50	51	191	87	77
MCM080 Single Circuit With Receiver	129	56	53	159	96	79
MCM080 Dual Circuit With Receivers	123	40	51	154	73	77
MCM160 Dual Circuit Without Receivers	190	60	62	234	104	93
MCM160 Dual Circuit With Receivers	182	54	60	221	94	90
MCL055 Through MCL220						
MCL055 Without Receiver	165	57	56	207	96	84
MCL055 With Receiver	176	58	64	220	102	95
MCL110 Single or Dual Circuit Without Receivers	223	63	80	273	113	119
MCL110 Single Circuit With Receiver	191	70	73	230	122	110
MCL110 Dual Circuit With Receiver	162	47	67	201	87	101
MCL165 Single Circuit Without Receiver	201	53	78	235	97	118
MCL165 Single Circuit With Receiver	188	51	79	211	95	118
MCL220 Single or Dual Circuit Without Receivers	265	72	93	322	130	140
MCL220 Single Circuit With Receiver	248	68	94	287	124	141
MCL220 Dual Circuit With Receivers	232	61	78	278	109	117

* All loads are calculated per ASCE 7-05, Chapter 13.6 $S_{ds} = 2.0$, $R_p = 6.0$, $a = 2.5$

Source: DPN002414 Rev. 2

Figure 54 Seismic piping and wiring considerations

DPN002414
Pg. 6, Rev. 2

9.2 Seismic piping considerations

Condensers for seismic application must be attached to the piping system with field-supplied, flexible loops designed for seismic movement. Flexible loops must be capable of movement in three dimensions and must isolate the condenser from the field piping. The loops must be suitable for the operating pressure and temperature of the system. Follow manufacturer's installation instructions for proper seismic application of flexible loops. The selection of isolation brand and type must be outlined and approved by the engineer of record for the project or building.

9.3 Seismic wiring considerations

Condensers for seismic application must be connected to power and control circuits using field-supplied flexible conduit and conductors to allow movement of the condenser in three dimensions during a seismic event. The flexible conduit must have at least one bend between the rigid connection at the unit cabinet and the connection to rigid conduit or foundation.

10.0 SYSTEM MAINTENANCE



WARNING

Arc flash and electric shock hazard. Open all local and remote unit electric power disconnect switches, verify with a voltmeter that power is Off and wear protective equipment per NFPA 70E before working within the electric control enclosure. Failure to comply can cause injury or death.

Unit contains potentially lethal voltage in some circuits.



WARNING

Risk of electric shock. Can cause serious injury or death.

Open all local and remote unit electric power disconnect switches, wait 10 minutes and verify with a voltmeter that power is Off before working within the unit electric connection enclosures or working within the fan speed control and the EC fan enclosures. These devices can retain a stored high-voltage electrical charge for up to 10 minutes.

Only properly trained and qualified personnel may perform repair, maintenance and cleaning.



WARNING

Risk of contact with high-speed, rotating fan blades. Can cause serious personal injury or death.

Fan blades can automatically start rotating without warning at any time during a cooling cycle or after power is restored after a power failure. Open all local and remote electric power supply disconnect switches, wait 10 minutes and verify with a voltmeter that power is Off before working within the unit cabinet, removing the fan guards or servicing the fan speed control, fan blades or EC fan motors.

10.1 General Procedures



NOTE

When ordering replacement parts for equipment, it is necessary to specify unit model number, serial number and voltage. Please record those numbers in the spaces below.

- **Model Number** _____
- **Serial Number** _____
- **Voltage / Phase / Frequency** _____

Periodic attention is necessary for continued satisfactory operation of your unit. Restricted air flow through the condenser coil, reduced airflow from non-functioning fans and low refrigerant system charge levels will reduce the operating efficiency of the unit and can result in high condensing temperatures and loss of cooling. In winter, do not permit snow to accumulate around the sides or underneath the condenser coil.

Monthly and semi-annual inspections and maintenance are recommended for proper system operation. Use copies of **10.4.3 - Preventive Maintenance Inspection Checklist** for each of these inspections.

If performance or operation problem are detected at anytime, refer to **8.2 - Premium Efficiency Condenser Alarm Codes** for required action.

10.2 Condenser Cleaning

Keeping the outdoor condenser coils clean is an important factor in maintaining peak efficiency, reliability and long life of the equipment. The unit will operate more efficiently with frequent cleanings. Delaying cleaning until heavy buildup occurs may create head pressure problems with the evaporator units.

10.2.1 When to Clean the Condenser Coil

Normal conditions typically dictate cleaning twice a year, spring and fall. On-site or area conditions such as cottonwood trees, construction, etc., can increase cleaning frequency. On your standard monthly preventive maintenance schedule, Emerson recommends a visual inspection of the coil to monitor conditions.

10.2.2 What to Use to Clean the Condenser Coil

The best overall condenser coil cleaner to use is plain water. If the coil has been maintained and cleaned at regular intervals, water is sufficient to remove dirt and debris from the fins. Heavy build up on the exterior of the fins can be removed with a brush. Water pressure from a garden hose and sprayer usually works well. If a pressure washer is used, make sure the equipment is set to a lower pressure setting and that the nozzle is set to the fan spray, not stream. Otherwise, damage to the fins could result. If a cleaner is required, Emerson recommends using a neutral cleaner, neither acidic nor base. Acid-type cleaners can damage the coil fins and surrounding areas. Many sites do not allow the use of acidic cleaners for environmental reasons.

10.2.3 How to Clean the Condenser Coil

The Liebert MC coil is accessible for cleaning through the innovative cleaning window design, allowing you to clean the coil without removing the fans from the unit. First, this requires disconnecting the power supply before working on the unit and then opening the cleaning window(s) on the side of the unit by loosening the mounting screws. Then insert a spray nozzle on the end of a suitable extension and apply the water/cleaning solution, working back and forth across the coil face. The solution will push the dirt and debris out the bottom of the coil. If you are using a cleaner along with the spraying process, follow recommended manufacturer instructions and be sure to rinse the coil thoroughly. Any residue left on the coil can act as a magnet to dirt. Reinstall the cleaning window(s) and reconnect the power supply to the condenser.

Spraying the coil from the outside repeatedly can push a majority of the dirt to the inner section of the fins and continue to restrict air flow. Keep in mind you may not have the luxury of shutting the unit(s) down for an extended time. A scheduled shutdown with the operator may be in order.

NOTICE

Risk of using damaging cleaning agents, including non-base paint solvents. Can cause equipment damage and damage to property and loss of refrigerant charge.

Using acid-based or sodium hydroxide-based cleaners can damage the Liebert MC condenser coil and cause a loss of charge. This could cause equipment damage as well as damage to the surrounding structure.



NOTE

Clean the EC fan with water only when temperatures are greater than 50°F (10°C)

- *Make sure that no water gets into the inside of the motor.*
- *Do not hold the jet spray directly on the motor openings and seals.*
- *During cleaning work using a jet spray, no guarantee is assumed regarding corrosion formation/paint adhesion for unpainted/painted fans.*

10.3 Fan Replacement

Source: INST-9168, Rev. 3



WARNING

Arc flash and electric shock hazard. Open all local and remote unit electric power disconnect switches, verify with a voltmeter that power is Off and wear protective equipment per NFPA 70E before working within the electric enclosure. Failure to comply can cause injury or death.

Unit contains potentially lethal voltage in some circuits.

Only properly trained and qualified personnel may perform repair, maintenance and cleaning on these units.



WARNING

Risk of electric shock. Can cause serious injury or death.

The fan motor control can contain a residual electric charge after power is disconnected. Do not open the motor within the first 10 minutes after disconnection of all phases.



WARNING

Risk of high-speed, rotating fan blades. Can cause injury or death.

The fan blades can start rotating without warning any time during a cooling cycle or after power is restored after a power failure. Disconnect all local and remote electrical power supplies to the unit, wait 10 minutes and verify with a voltmeter that the power is Off and that all fan blades have stopped rotating before working on or near the fans.



CAUTION

Risk of contact with hot surface. Can cause injury.

Use proper skin protection when touching the electronics housing or allow time for the housing to cool before replacing parts. The electronics housing can get hot and can cause severe burns.

The fan motors and refrigerant discharge lines are extremely hot during unit operation. Allow sufficient time for them to cool before working within the unit cabinet. Use extreme caution and wear protective gloves and arm protection when working on or near fan motors and discharge lines.



CAUTION

Risk of improper moving, lifting and handling. Can cause equipment damage or injury.

Only properly trained and qualified personnel should work on this equipment. Fan modules for MCL models weigh in excess of 92lb. (40.8kg) each and fan modules for MCS and MCM models weigh in excess of 40lb. (18.1kg.) each. Use OSHA-approved lifting techniques, proper body mechanics and extreme caution to avoid injury and dropping of fans during removal and installation.



NOTE

If at any time a parameter is entered and the display does not show 888 or if the display shows Err, re-enter the parameter. If the display still shows Err after ENT is pressed, power cycle the control board by unplugging P24, waiting 15 seconds and plugging P24 back in. Contact the factory if the parameter still displays Err after ENT is pressed.

1. Turn Off power to the unit using the disconnect.
2. Use a voltmeter verify that voltage is no longer present at the unit. Wait a minimum of 10 minutes to allow the EC fan capacitors to discharge before proceeding.
3. Remove the fan cover, disconnect electrical connections internal to the EC fan and remove the cable glands from the EC fan to be replaced (see **Figures 55, 56 and 57**).
4. Remove hardware that attaches the EC fan to the condenser.
5. Use lifting equipment or an adequate number of personnel to remove the EC fan from the Liebert MC.

**NOTE**

A spreader bar may be required for the lifting equipment if only one technician is performing the fan replacement.

6. Install a spreader bar over the new EC fan if only one technician is performing the fan replacement.
7. Verify that the wire harness on the new EC fan is secured out of the way before lifting the fan.
8. Verify that the lifting cable/chains are not coming into contact with fan blades before lifting the new fan into place on the condenser.
9. Install the new fan in the Liebert MC and connect the mounting hardware.
10. Verify that the fan blades rotate freely when installed in unit.
11. Install the new cable glands included with the new EC Fan. Torque for the cable glands is:
 - **630mm and 710mm fans:** 19.5 to 24.75 in-lb (2.2 to 2.8 Nm)
 - **800mm fans:** 32.75 to 38 in-lb (3.7 to 4.3Nm)
 Dispose of the old cable glands once the new glands are installed.
12. Add a compression nut to the wire—Do not tighten the nut.
13. Reconnect the wiring to the proper terminals and verify that the run jumper is in place. Refer to **Figures 55, 56 and 57** for wiring details.
The torque for the electrical terminals is 11.5 in-lb (1.3 Nm). Tighten the compression nut to a torque of 22 in-lb (2.5 Nm).
14. With the PCB powered, the display should read *F00*. Refer to **Figures 42 and 43**.
15. Press the ESC button.
16. Press the Up arrow key once—If *P- -* is displayed, perform **Step 17**; if *P- -* is not displayed, perform **Steps 18 through 49**.
17. If *P- -* is displayed, press the ENT button to enter the *P- -* Menu.
The *P- -* Menu allows for compact setup/preparation of the unit either in the factory or in the field. Use these functions in the table below to establish a default control configuration for the board. Items in the preparation menu are described in **Table 25**.

Table 25 P-- menu items and definitions

Item ID	Meaning	Default	Notes
P01	Enter Preparation Mode	0	Setting this value to '1' will enable preparation mode. All other 'P--' menu items will be disabled until this value is '1'. Note that control operations may be affected during preparation mode therefore the indoor unit should be off. Setting this value back to '0' will cause the board to create new default values based upon selections in this menu. After default values are established the board will exit preparation mode and reboot.
P02	Automatic VSD Configuration	1	This item should only be used to address the VSDs for the unit. The value entered indicates the model of the VSD: 1 – EBM 2 – Ziehl-Abegg 3 – Fans Tech All fans must be the same model to use this parameter. When <i>ENT</i> is pressed, the board will operate and power contactors for the VSD's and assign ModBus addresses. This procedure may take up to 5 minutes to complete.
P03	Refrigerant Type	2	1 = R22 2 = R407C 3 = R410A
P04	Number of Circuits	1	1 = Single Circuit 2 = Dual Circuit
P05	Liebert Lee Temp Option	0	0 = No Lee Temp installed 1 = Liebert Lee-Temp installed
P06	Condenser	1	0 = Small

18. Turn the power On.
19. The control board will flash *F00* on the display when it has completed its boot cycle.
20. Press the ESC button.
21. Use the Up or Down arrow key until *C--* is on the display.
22. Press the ENT button.
23. Use the Up or Down arrow until *C03* is on the display
24. Press the ENT button.
25. Use the Up or Down arrow key to select one of three options.

Configuration Code	Fan #	Value
C03	Fan 1	0 = No Fan 1 = EBM Papst 2 = Ziehl-Abegg
C04	Fan 2	
C05	Fan 3	
C06	Fan 4	

26. Press the ENT button.
27. If the new value was entered into the control board, the display will flash *888*.
28. Press the ESC button for *C03* to show on the display.
29. Repeat **Steps 20** thru **27** for the remaining fans' configuration codes, *C04*, *C05* and *C06*.
30. Unplug all the contactor output plugs except for the fan to be addressed. Plugs are:
 - P23 = Fan 1
 - P27 = Fan 2
 - P28 = Fan 3
 - P29 = Fan 4
31. Wait 30 seconds.

32. Use the Up or Down arrow to select one of the following parameters.
The correct parameter depends on the supplier of the fan that will be addressed.
 - C00—EBM Papst fan
 - C01—Ziehl-Abegg fan
33. Press the ENT button.
34. Use the Up or Down arrow to the correct fan address number. Fan 1 should be 1 (fan closest to electric panel end). Fan 2 should be 2, etc.
35. Press the ENT button. The display will flash 888 when the command is accepted.
36. Press the ESC button for the parameter to be shown on the display.
37. Repeat **Steps 30** through **36** for the rest of the fans that need to be addressed.
38. After the last fan is addressed, unplug the power plug, P24, from the control board.
39. Wait 30 seconds.
40. Plug all the contactor output plugs back into the board in their correct positions.
41. Plug P24 back into the control board.
42. Once the control board has completed its boot cycle and all the contactors are energized, wait 5 seconds.
43. Press the ESC button.
44. Use the Up or Down arrow until A-- is on the display.
45. Press ENT button.
46. Use the Up or Down arrow to see if any of the following errors are shown.
 - 115: Unable to communicate with Fan 1.
 - 215: Unable to communicate with Fan 2.
 - 315: Unable to communicate with Fan 3.
 - 415: Unable to communicate with Fan 4.
47. If any of these errors appear, check the communication wiring at the problem fan and the fan before it.
48. If the wiring is correct and properly wired to the terminal, repeat the fan addressing procedure in **Steps 30** through **36**.
49. If none of the errors in **Step 46** is displayed, press the ESC button.

Verify the Fan Address

Verify that each fan has a unique address by:

1. Use the Up or Down arrow until C-- is on the display.
2. Press the ENT button.
3. In the Manual/System Control Selection parameter use the Up or Down arrow until C24 is on the display.
4. In the Manual Control configuration parameter, press the ENT button.
5. Use the Up or Down arrow to select 0.
6. Press the ENT button. The display will read 888 if the command was accepted.
7. Press the ESC button for C24 to show on the display.
8. Use the Up or Down arrow until C34 is on the display.
9. Press ENT button.
10. If Fan 1 is running, the fans speed should be displayed in terms of percentage of full speed. If Fan 1 is not running, 0.00 should be displayed.
11. Use the Up or Down arrow to enter 100% speed.
12. Press the ENT button. The display will read 888 if the command was accepted.
Fan 1 should speed up to 100%, and all the other fans should stay the same speed.
13. If Fan 1 is not running or if any of the other fans also speed up to 100%, the fan-addressing procedure (**Steps 30** through **36**) must be repeated.
14. Press the ESC button for the parameter to be shown on the display.

15. Repeat **Steps 3** through **8** for the rest of the fans, if present.
 - C35: for Fan 2.
 - C36: for Fan 3.
 - C37: for Fan 4.
16. All fans should be at 100% speed.
17. Use the Up or Down arrow until **C24** is on the display.
18. Press the ENT button.
19. In the System Control configuration parameter, use the Up or Down arrow to select **1**.
20. Press the ENT button. The display will flash **888** if the command was accepted.
21. Press the ESC button for **C24** to be shown on the display.

All fans should return to a normal speed based on the pressure input and the state of indoor unit's compressor.

PCB Notes

- J6 is the CANbus termination jumpers. If the condenser is the last device in the CANbus communication line, the jumper must be placed between Pins 1 and 2 of J6. If the condenser is not the last device in the CANbus communication line, then the jumper on J6 must be placed on Pins 2 and 3. CANbus communication errors may occur if the jumpers are not in the correct positions.
- A jumper must be present at J2. If a jumper is not present, the control board will not boot properly during power startup.

Figure 55 EBM small and medium fan, Liebert MC series MCS/MCM

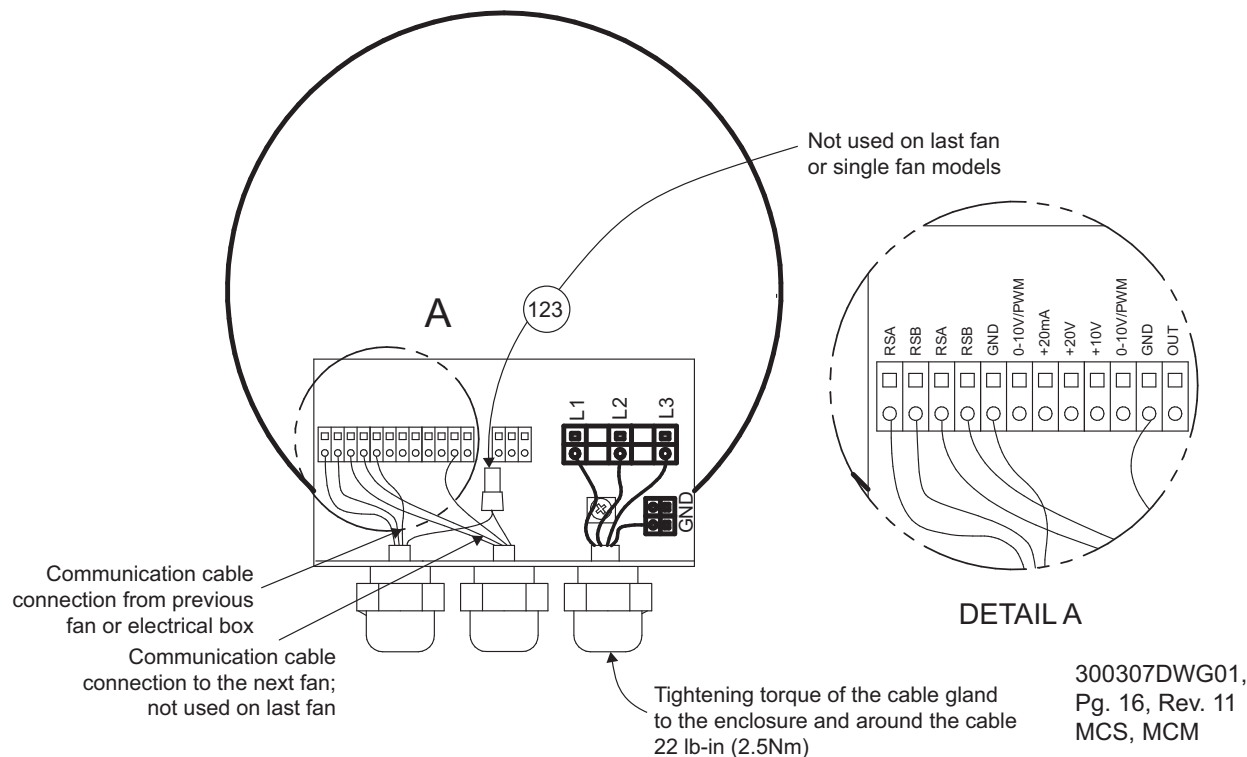


Figure 56 EBM large fan—Liebert MC series MCL


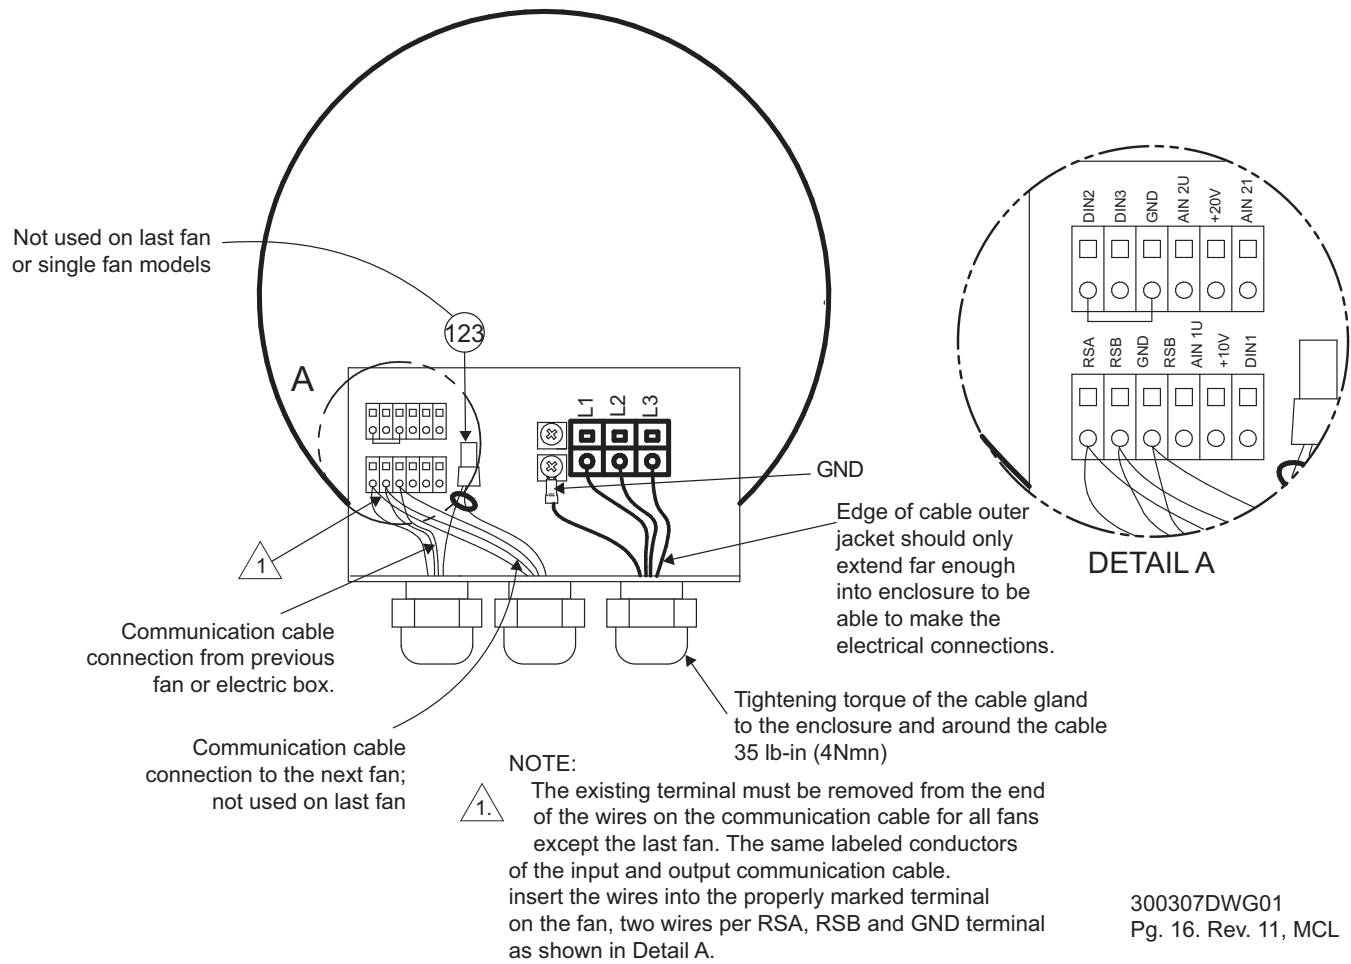


Figure 57 Ziehl-Abegg small, medium and large fan, Liebert MC series MCS, MCM and MCL

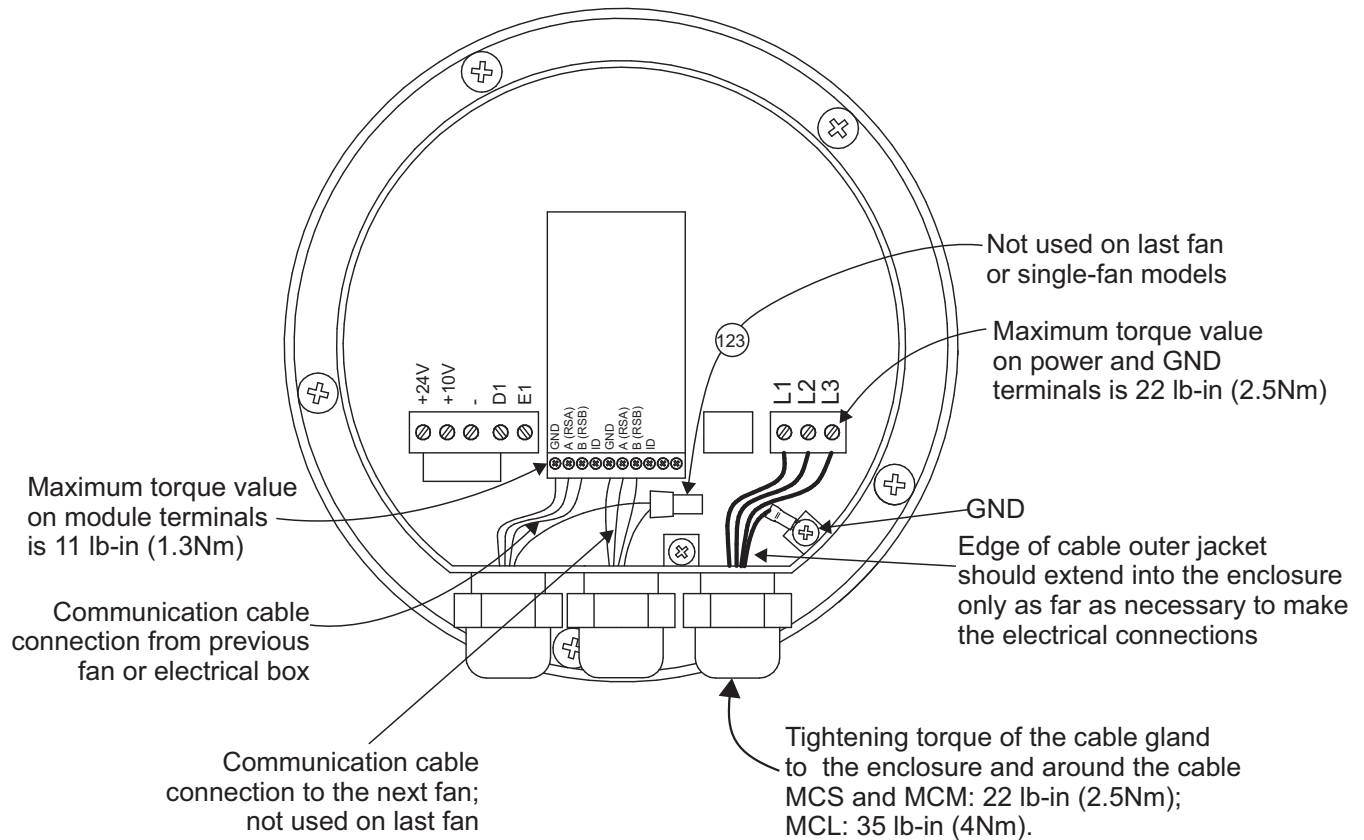

300307DWG01
Pg. 13, Rev. 11

10.4 Premium Efficiency Control Board Replacement



WARNING

Arc flash and electric shock hazard. Open all local and remote electric power disconnect switches, verify with a voltmeter that power is Off and wear personal protective equipment per NFPA 70E before working within the electric enclosure.


Failure to comply can cause serious injury or death.

This kit should be installed by properly trained and qualified personnel.

10.4.1 Replacement Preparation

- Verify that the following jumpers are installed on the new board (see **Figure 58**):
 - Jumper at J4 and J6 on Pins 2 and 3.
 - Jumper on J2.
 - Jumper on J5 on Pins 1 and 2.
- Locate the latest revision of the HMI parameters label, 303847P1, included with the new control board.

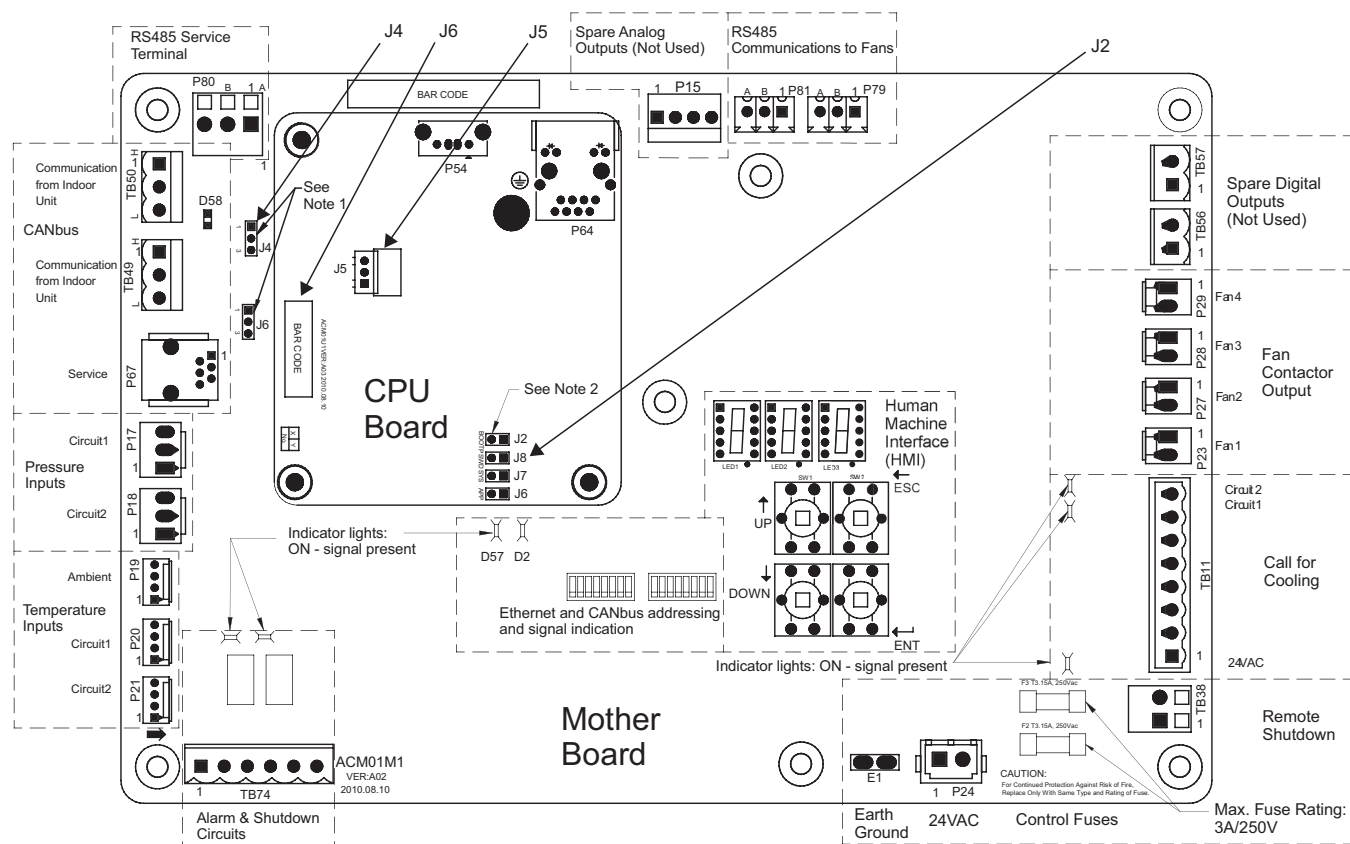Figure 58 Jumper locations on Control Board



301471
Pg. 2, Rev. 4

10.4.2 Installation



WARNING

Risk of arc flash and electric shock hazard. Open all local and remote electric power supply disconnect switches, verify with a voltmeter that power is Off and wear appropriate personal protective equipment per NFPA 70E before working within the electric control enclosure or the fan motor connection box(es). Failure to comply can cause serious injury or death.

This unit contains lethal voltage. The line side of the unit disconnect switch remains energized when the unit disconnect switch is in the "Off" position. Use a voltmeter to verify that the line side input electric power to the unit disconnect switch is Off before working on any electrical components or connections.

1. Turn Off the disconnect switch on the enclosure cover.
2. Open the control enclosure cover.
3. Manually turn On the disconnect switch. Power is On and a shock hazard exists with exposure to hazardous voltage components.
4. If the board can still be powered up and has a display, record the parameter settings. To obtain parameters go to the C-- menu and press the Up or Down button to read and record the values for C03-09 and C27.
5. Record all of the DIP switch positions for the CANbus DIP switch package. Retain these for setting up the new board.
6. Record the positions of the jumpers for J2, J4, J5 and J6 on control board in the unit. Retain these for setting up the new board.
7. Disconnect power from the Liebert MC by turning Off the main disconnect switch.
8. Use a voltmeter to verify that voltage is no longer present in the unit.
9. Remove the plugs and field-installed wires from the old board. Note the polarity for the CANbus wiring going to P49 and P50, if present.
10. Mark wires P49-1, P49-3, etc, if they are not already marked.
11. Remove the mechanical fasteners holding the control board in place and remove the old control board.
12. Install the new control board using the fasteners removed in **Step 11**.
13. Reattach the plugs. Refer to the hot-stamps on the wire harnesses that correspond to the correct plug on the board. Verify that the plugs are installed properly.
14. Change the CANbus DIP switch positions so they match the control board that was removed. If the Liebert MC is the second condenser on the CANbus communication line, set Position 1 of the CANbus DIP switch from On to Off.
15. Change the jumper positions for J2, J4, J5 and J6 to match the control board that was removed. If the Liebert MC is the last device on the CANbus communication line, move the jumper at J6 from Pins 2 and 3 to Pins 1 and 2 (see **Figure 58**).
16. Power up the unit.
17. Change the parameters to match the parameters from the control board that was removed if they were obtained from the old board in **Step 4**. See **Step 18** if the parameters were unavailable.
18. If the old board parameters were unavailable, use the new HMI label included in kit to obtain the proper settings. Parameters C03, C04, C05 and C06 must be programmed with the proper EC fan supplier used on the unit.
19. Address the fans (refer to **10.3 - Fan Replacement**).
20. Compare the HMI label on the unit with the latest revision.
If there are differences, clean and dry the surface of the old HMI label; attach the new label on top of the old label, covering the old label with the new one.
21. Verify that the control board is reading pressure and temperature.
22. Verify that there are no communication alarms with the fans or with the cooling unit the Liebert MC is serving.
23. Verify proper fan operation by adjusting the cooling unit that this condenser serves so that it calls for cooling.

10.4.3 Preventive Maintenance Inspection Checklist

Inspection Date	_____	Job Name	_____
Indoor Unit Model #	_____	Indoor Unit Serial Number #	_____
Condenser/Drycooler Model #	_____	Condenser/Drycooler Serial #	_____
Liebert EconoPhase™ Model #	_____	Liebert EconoPhase Serial #	_____
Room Temperature/Humidity	_____ °F/ _____ %	Ambient Temperature	_____ °F (°C)



NOTE

Good maintenance practices are essential to minimizing operation cost and maximizing product life. Read and follow all applicable maintenance checks listed below. At a minimum these checks should be performed semi-annually. However, maintenance intervals may need to be more frequent based on site-specific conditions. Review the unit user manual for further information on unit operation. Emerson recommends the use of trained and authorized service personnel, extended service contracts and factory-certified replacement parts. Contact your local Emerson representative for details.

Check All That Apply

Air-Cooled Fin and Tube Condenser / Drycooler

- ☐ 1. Coil clean and free of debris
- ☐ 2. Motor mounts tight
- ☐ 3. Motor bearings in good condition
- ☐ 4. Piping support and clamps secure
- ☐ 5. Check, retorque wire connections
- ☐ 6. Check contactors for pitting; replace if pitted
- ☐ 7. Check fuses
- ☐ 8. Verify fan speed control operation, if equipped
- ☐ 9. Check surge protective device status indicator lights, if equipped
- ☐ 10. Ambient Thermostat settings _____
- ☐ 11. Refrigerant level (Liebert Lee-Temp™)
- ☐ 12. Glycol level
- ☐ 13. Glycol solution _____ %
- ☐ 14. Water/glycol solution flowing continuously and is clean and free of debris
- ☐ 15. Water treatment plan established and followed for open cooling tower application
- ☐ 16. Check refrigerant/glycol lines for signs of leaks; repair any found

___ 17. Motor Amp Draw #1	L1	L2	L3
	(L1 and L2 on Fan Speed Control Motor)		
#2	L1	L2	L3
#3	L1	L2	L3
#4	L1	L2	L3
#5	L1	L2	L3
#6	L1	L2	L3
#7	L1	L2	L3
#8	L1	L2	L3
#9	L1	L2	L3
#10	L1	L2	L3

Glycol Pump, if Present

___ 1. Check pump rotation

___ 2. Check for glycol leaks

___ 3.	Pump pressures	#1	Suction	Discharge	
		#2	Suction	Discharge	
		#3	Suction	Discharge	
___ 4.	Amp draw	#1	L1	L2	L3
		#2	L1	L2	L3
		#3	L1	L2	L3

___ 5. Verify pump changeover, if unit has multiple pumps

Liebert MC™ Condenser

___ 1. Coil clean

___ 2. Fans free of debris

___ 3. Fans securely mounted

___ 4. Motor bearings in good condition

___ 5. Check all refrigerant lines for vibration isolation. Support as necessary.

___ 6. Check for signs of refrigerant leaks; repair any found

___ 7. Check surge protection device (if installed) status indicator lights

___ 8. Check, retorque wire connections

___ 9. Check contactors for pitting; replace if pitted

___ 10. Verify operational sequence/setpoints

___ 11. Charge verification:

___ a. Outdoor ambient temperature _____

___ b. Subcooling _____

___ c. Indoor unit return air temperature _____

___ d. Sight glass level, if Liebert Lee-Temp™ or pumped refrigerant _____

___ 12. Motor Amp Draw	#1	L1	L2	L3
	#2	L1	L2	L3
	#3	L1	L2	L3
	#4	L1	L2	L3

Liebert EconoPhase™ Pumped Refrigerant Economizer, if Present

- ___ 1. Check for signs of refrigerant leaks; repair any found
- ___ 2. Check/retorque wire connections
- ___ 3. Check contactors for pitting (replace if pitted)
- ___ 4. Verify pump speed control operation
- ___ 5. Check pump mounting

Notes

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

Name

Signature

Company

Make photocopies for your records. Compare readings/information to previous maintenance worksheet.

Call 1-800-Liebert or check the Liebert Web site to locate your local Liebert representative for Liebert engineered parts: www.liebert.com.

11.0 TROUBLESHOOTING

Table 26 Troubleshooting

Symptom	Possible Cause	Check or Remedy
Condenser will not start	No power to condenser.	Check voltage at input terminal block.
	Circuit breaker or fuse for low-voltage transformer in condenser is tripped.	Locate problem in condenser electrical panel and repair.
	No low-voltage signal to/from indoor unit.	Locate open circuit and repair.
Low discharge pressure	Faulty head pressure control valve or condenser control board (PEC/BEC).	Replace if defective.
High discharge pressure	Dirty condenser fins.	Clean coil.
	Condenser fans not operating.	Check for low-voltage signal from indoor unit.
		Check fan motors and fuses.
	High refrigerant charge	Check refrigerant charge.
SPD green and red LEDs are extinguished	No voltage or improper phasing exists at condenser.	Check voltage at input terminal block.
	Electrical connections to SPD are faulty.	Locate connection problem and repair.
	Condenser disconnect is turned Off.	Recheck lights with disconnect switch in the On position.
SPD red LED is illuminated	A surge exceeding the rating of the SPD has occurred.	Replace SPD and inspect other components for damage and replace them if necessary.
Control Board LEDs do not light.	Connection to P24 is loose or disconnected.	Check the connection to P24 to verify that is connected securely.
		Check the connector from the transformer for loose terminals.
	Fuse located next to P24 has blown.	Verify that the fuses next to P24 have not blown. Replace as needed.
	24V transformer has failed.	With a voltmeter verify that the output from the transformer is 24Vac $\pm 10\%$. If the value exceeds $\pm 10\%$, verify that the correct primary leads are being used.
	Control Board (PEC/BEC) has failed.	If there is no output voltage, verify that the primary connections are secure and receiving the correct voltage. If they are, replace the transformer.
Fan will not run	Jumper not installed between 24V and DIN1 (for Ziehl-Abegg fan motor).	Install jumper between 24V and DIN1 (for Ziehl Abegg fan motor).

Technical Support / Service

Web Site

www.liebert.com

Monitoring

liebert.monitoring@emerson.com

800-222-5877

Outside North America: +00800 1155 4499

Single-Phase UPS & Server Cabinets

liebert.upstech@emerson.com

800-222-5877

Outside North America: +00800 1155 4499

Three-Phase UPS & Power Systems

800-543-2378

Outside North America: 614-841-6598

Environmental Systems

800-543-2778

Outside the United States: 614-888-0246

Locations

United States

1050 Dearborn Drive

P.O. Box 29186

Columbus, OH 43229

Europe

Via Leonardo Da Vinci 8

Zona Industriale Tognana

35028 Piove Di Sacco (PD) Italy

+39 049 9719 111

Fax: +39 049 5841 257

Asia

29/F, The Orient Square Building

F. Ortigas Jr. Road, Ortigas Center

Pasig City 1605

Philippines

+63 2 687 6615

Fax: +63 2 730 9572

While every precaution has been taken to ensure the accuracy and completeness of this literature, Liebert Corporation assumes no responsibility and disclaims all liability for damages resulting from use of this information or for any errors or omissions.

© 2014 Liebert Corporation

All rights reserved throughout the world. Specifications subject to change without notice.

© Liebert is a registered trademark of Liebert Corporation.

All names referred to are trademarks

or registered trademarks of their respective owners.

SL-19536_REV3_06-15

Emerson Network Power

Liebert

www.emerson.com